

UCD-451 UCD-452



User Manual

UCD Console SW Version 3.11

Copyright

This manual, Copyright © 2026 Unigraf. All rights reserved.

Reproduction of this manual in whole or in part without written permission of Unigraf is prohibited.

Notice

The information given in this manual is verified in the correctness on the date of issue. The authors reserve the right to make any changes to this product and to revise the information about the products contained in this manual without an obligation to notify any persons about such revisions or changes.

Edition

UCD-45x UCD Console 3.11 User Manual, Rev 1

Date: 14 August 2026

Company Information

Unigraf
Piispantilankuja 4
FI-02240 ESPOO
Finland
Tel. +358 9 859 550

<mailto:info@unigraf.fi>

<https://www.unigraf.fi>

<http://www.unigraf-china.cn>

Trademarks

Unigraf, UCD, UCD-451, UCD-452, UCD Console and TSI are trademarks of Unigraf Oy.

DisplayPort™ and the DisplayPort™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.

The Adopted Trademarks HDMI, High-Definition Multimedia Interface, the HDMI Logo and HDMI Port Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

USB™, USB Type-C™ and USB-C™ are trademarks of USB Implementers Forum Inc.

HDCP is a trademark of Digital Content Protection LLC.

Altera and Intel FPGA are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.

Windows® is trademark of Microsoft Corporation.

macOS® is a trademark of Apple Inc.

Linux® is a trademark of Linus Torvalds.

All other trademarks are properties of their respective owners.

Limited Warranty

Unigraf warrants its hardware products to be free from defects in workmanship and materials, under normal use and service, for twelve (12) months from the date of purchase from Unigraf or its authorized dealer.

If the product proves defective within the warranty period, Unigraf will provide repair or replacement of the product. Unigraf shall have the whole discretion whether to repair or replace, and replacement product may be new or reconditioned. Replacement product shall be of equivalent or better specifications, relative to the defective product, but need not to be identical. Any product or part repaired by Unigraf pursuant to this warranty shall have a warranty period of not less than 90 days, from the date of such repair, irrespective of any earlier expiration of original warranty period. When Unigraf provides replacement, then the defective product becomes the property of Unigraf.

Warranty service may be obtained by contacting Unigraf within the warranty period. Unigraf will provide instructions for returning the defective product.

CE Mark

UCD-4XX Series products meet the essential health and safety requirements, is in conformity with and the CE marking has been applied according to the relevant EU Directives using the relevant section of the corresponding standards and other normative documents.

Table of Contents

	Copyright	2
	Notice	2
	Edition.....	2
	Company Information.....	2
	Trademarks.....	3
	Limited Warranty.....	3
	CE Mark	3
	Table of Contents.....	4
1.	About This Manual.....	6
	Purpose	6
	Product and Software Version	6
	Notes	6
2.	Introduction	7
	Product Description.....	7
	UCD-451	8
	UCD-452	9
	Safety and Operational Precautions.....	11
3.	Installation.....	12
	Installation Package.....	12
	Software Installation	12
	Firmware Update Procedures	14
	Firmware Downgrading.....	18
	License Manager	19
	UCD Console.....	21
	Options.....	22
	Detaching and Cloning Tabs	23
4.	Generator Operation	24
	Functionality Tabs.....	24
	Standard Tabs	25
	Pattern Generator Tab	25
	Packet Generator	34
	Playback Tab	35
	Audio Generator Tab.....	45
	HDCP Tab.....	46
	EDID/DisplayID Tab	48
	Panel Replay Tab	50
	Adaptive-Sync Tab	52
	Sink DUT Testing Tab	52
	DP Reference Source.....	56
	Link Tab	56
	DPCD Tab.....	61
	FEC Tab	62
	ALPM Tab	63
	HDMI Reference Source	64
	Link Tab	64
	SCDC Monitor	67
	Cable Info Tab	68
	CEC Tab.....	68
	Packet Generator	69
5.	Event Log.....	70
	Logged Events	72
	Event Transaction List.....	75
	Customizing Transaction List	76
	Event Details.....	78
6.	EDID/DisplayID Editor	83
	EDID Editor Features.....	85
	Editing Tips	85

7.	Packet Editor	87
8.	Pattern Editor	88
9.	Image Converter	90
Appendix A: Product Specification		91
	UCD-451	91
	UCD-452	91
Appendix B: Product Features		92
	Hardware Product Options	92
	DP Reference Source Default Features (UCD-451)	92
	DP Reference Source Optional Features (UCD-451)	93
	eDP Reference Source and Panel Replay Features	93
	DP Reference Source Compliance Test Options	93
	HDMI Reference Source Default Features (UCD-452)	94
	HDMI Reference Source Compliance Test Options	94
Appendix C: Sink and Repeater Tests		95
	DP Compliance Tests	97
	Running CTS Tests	99
	Test Report	102
	VRR Sink DUT Tests – HDMI Tx	103
	Connection Test	104
	Cable Test	105
Appendix D: Predefined Timings		106
Appendix E: Predefined Patterns		111
Appendix F: VTP Pattern Language		116
	General	116
	Commands	117
	Variables	123
Appendix G: Firmware UPDATE WITH QUARTUS		125
	Downloading Tools	125
	Step 1	125
	Step 2	126
Appendix H: Playlists and Scenarios		127
	Playlists	128
	Scenarios	129
	Parameters	129
	Example	133
	Sample Content in Playback Tab	135
	HDMI	135
	DP	136
	Playlist: Basic Video & Audio Example	137
	Playlist: Audio-Video Latency	138
	Playlist: HDR & Metadata Example	139
	Playlist: Grayscale	140
	Playlist: Dolby Vision DEMO (HDMI)	141
	Playlist: VRR Example (HDMI)	142
	Playlist: QMS-VRR Example (HDMI)	143
	Playlist: ALLM (HDMI)	144
	Playlist: HDR10+ SSTM & SBTM Example (HDMI)	145
	Playlist: HDR10+ SSTM Example (DP)	147
	Playlist: Frame Rate Example (DP)	148
	Playlist: PSR1 (DP)	149

1. ABOUT THIS MANUAL

Purpose

This guide is a User Manual of UCD-45x test devices, that are USB-connected video interface test units for use with a computer.


The purpose of this guide is to

- Provide an overview of the product and its features.
- Provide instructions for the user on how to install the software and the drivers.
- Provide instructions for the user on how to update the FW of the unit.
- Introduce the HW features of the UCD-45x units.
- Provide instructions for the user on how to use UCD Console SW.

Product and Software Version

This manual explains features found in UCD Console SW Bundle **3.11**. Please consult Unigraf for differences or upgrades of previous versions.

Please consult the Release Notes document in the installation package for details of the SW and FW versions and changes to previous releases.

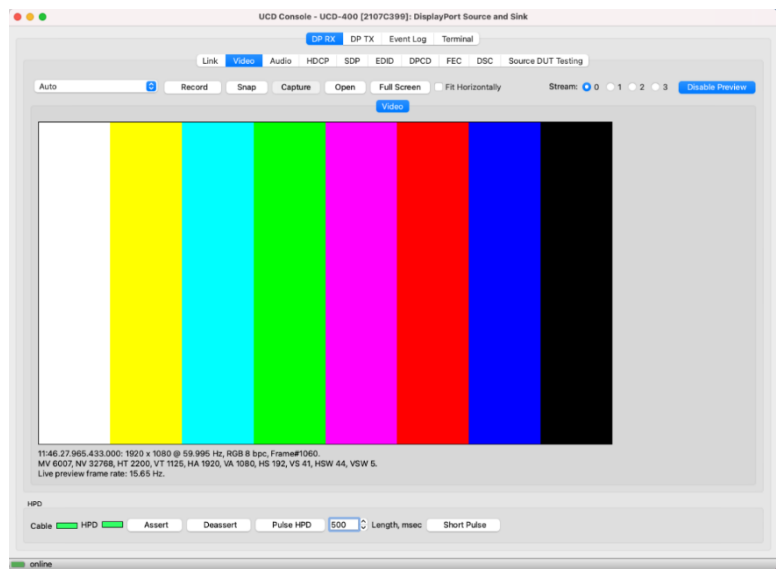

Notes

On certain sections of the manual, when important information or notification is given, text is formatted as follows. Please read these notes carefully.

Note:	This text is an important note
Warning:	This is a warning about a direct risk for the functionality of the device

2. INTRODUCTION

Product Description

In stand-alone UCD models the test equipment is built inside a PC and the control interface is a PCI bus instead of a USB connection. Please find below a list of available units:

- UCD-451 Stand-alone DisplayPort 1.4a Generator
- UCD-452 Stand-alone HDMI 2.1 Generator

UCD-451

UCD-451 is a stand-alone DisplayPort interface test unit with full featured Generator functionality. UCD-451 contains a built-in PC, a DisplayPort reference source, and software for configuring the test interface and running tests.

UCD-451 is designed to specially facilitate Dolby Vision™ testing in DisplayPort interface.

Product Features


- DisplayPort 1.4a compliant with HBR3 support
- 8K Dolby Vision™ Test Tool
- High resolution video up to 8K 30 Hz, 4K / UHD 120 Hz uncompressed and audio.
- Supports MST (4 streams), Adaptive-Sync, Forward Error Correction (FEC), Display Stream Compression (DSC) and Link Training Tunable PHY Repeater (LTTPR)
- Compatible with HDCP versions 1.3 and 2.3
- Extended video memory up to 32 GBytes
- Embedded Windows PC

Please refer to *Product Specifications* in the appendix of this document for details.

Functional Description

Part of the DDR memory in the PC motherboard is locked and reserved for storing the playback content. During playback, content is first loaded from hard disk (HDD) to the RAM memory of the PC (DDR). Video frames are then sequentially transferred from PC RAM to pattern generator's internal playback memory via PCIe bus. Pattern Generator firmware triggers a PCIe transfer to request content when needed.

Please find below logical diagram of UCD-451 unit.

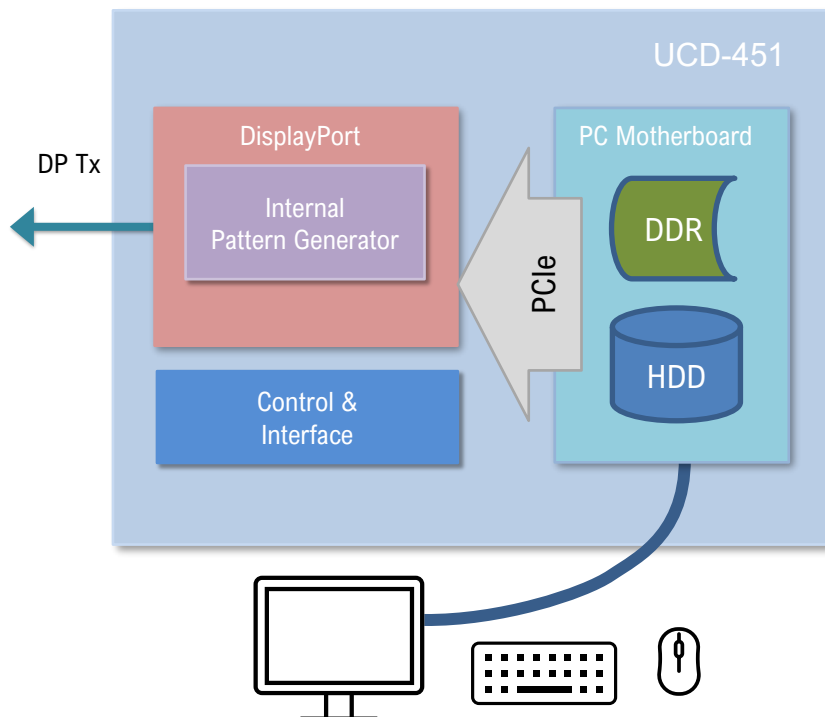

UCD-452

UCD-452 is a stand-alone HDMI interface test unit with full featured Generator functionality. UCD-452 contains a built-in PC, a HDMI reference source, and software for configuring the test interface and running tests.

UCD-452 is designed to specially facilitate Dolby Vision™ testing in HDMI interface.

Product Features

- HDMI 2.1 compatible Test Equipment. Supports FRL and TMDS signaling.
- 8K Dolby Vision™ Test Tool
- Supports HDMI video and audio up to 10K@30 Hz, 8K@60 Hz (YCbCr 4:2:0), 4K@120 Hz (YCbCr 4:2:0)
- Supports Display Stream Compression (DSC), and Enhanced Audio Return Channel (eARC)
- Compatible with HDCP versions 1.4 and 2.3
- Extended video memory up to 32 GBytes
- Embedded Windows PC


Note: Due to HW limitations, only 2 GBytes of video memory can be used with uncompressed deep color video at 3840x2160 p144 video timing. This allows for playing sequences containing up to 40 frames.

Please refer to *Product Specifications* in the appendix of this document for details.

Functional Description

Part of the DDR memory in the PC motherboard is locked and reserved for storing the playback content. During playback, content is first loaded from hard disk (HDD) to the RAM memory of the PC (DDR). Video frames are then sequentially transferred from PC RAM to pattern generator's internal playback memory via PCIe bus. Pattern Generator firmware triggers a PCIe transfer to request content when needed.

Please find below a logical diagram of UCD-452 unit.

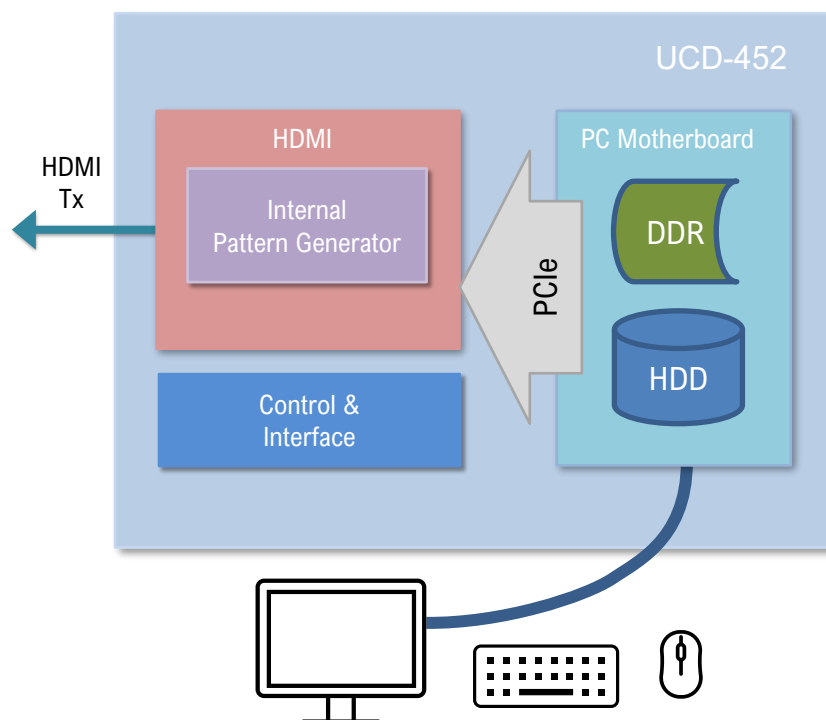

Safety and Operational Precautions

Please find below the **Safety Precautions** for using the Unigraf UCD test instrument. Please also carefully read the **Notes and Warnings** within the text of this manual.

These **Precautions and Warnings** are provided to enable a safe use of the UCD test equipment. Therefore, Unigraf assumes no liability when the user fails to follow the expressed **Precautions and Warnings**.

- Use only Unigraf provided AC/DC Power Adapter. Please make sure that connectors and cabling to the Power Adapter are intact. In case there are any doubts about the condition of the Adapter or cabling, stop using it immediately.
- It is important to ensure that the used AC input voltage is within the specified range (100 to 240 Vac 50/60 Hz) and the fuses in the AC lines are of the specified type. If in doubt, do not connect the device.
- UCD devices are rated for indoor use only. They are rated for Pollution Degree 2 as defined in IEC 61010-1. This classification corresponds to usage in a typical office or home environment. Under normal use, only dry, non-conductive pollution occurs. Occasionally, temporary conductivity caused by condensation can be expected. Temporary condensation occurs only when the product is out of service.
- When installing the unit, connect the Power Adapter to the UCD device first, after that connect the AC plug. Please disconnect the USB cable to the controlling PC and remove cabling to DUT while connecting the power input cables.
- It is forbidden to open the housing of the UCD device without written permission from Unigraf. Failure to comply with this rule will void the warranty of the unit.
- UCD devices are intended for use as Electrical Test Instrument only. Use for other purposes is forbidden.
- Use UCD equipment only in its specified ambient temperature and humidity.
- In order to ensure that the UCD device and associated SW will operate properly, please ensure that the PC used for controlling the UCD device complies with the minimum requirement set by Unigraf.
- Please keep UCD software updated by regularly checking the updates on Unigraf download page (<https://www.unigraf.fi/downloads/>). Please update the device firmware to match the installed software.

3. INSTALLATION

Installation Package

The UCD software installation package can be obtained from Unigraf download page at <https://www.unigraf.fi/downloads/>. Please, note that there are separate packages for Windows and macOS.

The installation package is a bundle between the components needed for UCD Console SW and for TSI SDK. The bundle contains the following items:

- Drivers (installed during set up)
- UCD Console SW (installed during set up)
- License Manager (installed during set up)
- Device configuration utility (installed during set up)
- Packet Editor (installed during set up)
- TSI SDK
- User Manuals including this document.

In some cases, also the firmware of the unit needs to be updated. If in doubt, please contact Unigraf.

Note: The software should be installed before connecting the UCD unit to the computer.

Note: System administrator's privileges are required for performing installations.

Software Installation

Windows

Install *.exe file from the package.

Start installation by running application **SoftwareBundle_X.X.XXXX**.

The welcome page is displayed and shows the software package release version.

The user is also asked if he/she wants to:

- Create a desktop shortcut
- Install the Visual C++ redistributable (needs to be present on Windows)
- Install Unigraf USB drivers
- Confirm by selecting *Next* dialog button. Select *Install* to start the installation.
- Select *Finish* to exit the installation dialog.

macOS

Install *.pkg file from the package. This is a universal binary for ARM and Intel x86.

Start installation by running application **SoftwareBundle_X.X.XXXX**.

Confirm by selecting *Next* dialog button. Select *Install* to start the installation.

Select *Finish* to exit the installation dialog.

Note: If you are downgrading, please remove the *Unigraf UCD Tools* folder from the *Applications* folder before starting installation.

Note: If installation fails, remove the *Unigraf UCD Tools* folder and any possible copies from the *Applications* directory and try again.

Linux

Linux extract the *.tar.gz file. You will find two install scripts (*install-libfuse.sh* and *install.sh*).

In the Files app select each script in turn, right click and select *Properties* to open the *Properties dialog*. Toggle the *Executable as Program* button.

In the Files app open a terminal window by unselecting any selected files and right clicking and selecting *Open in Terminal* to run the scripts (order is important).

In the terminal type: `sudo ./install-libfuse.sh`

You will be prompted for you password.

Type: `sudo ./install.sh`

You will be prompted with:

Please proceed to 'Software & updates' application to tab 'Other Software' and uncheck checkboxes or remove 'cdrom' entry from /etc/apt/sources.list file. Otherwise you will have problems during UCD Console package installation. If you are already done, enter the key 'y'. If not - 'n'

For Ubuntu just enter y. For debian follow instruction.

You will then be prompted again with:

Please proceed to 'Software & updates' application to the first tab and set check box 'Officially supported (main)'. Otherwise you will have problems during UCD Console package installation. If you are already done, enter the key 'y'. If not - 'n'

For Ubuntu just enter y. For debian follow instruction

Answer y for additional prompts.

The Ucd Tool Installer Setup app should now be running.

Select *Next*>

Select radio button for *Install for all users* or *Install just for me*.

You are asked to Choose Installation Directory. Do **NOT** choose the default (/root/Unigraf/Unigraf UCD Tools at time of writing). Select a directory that is easy to access and remember.

Note the warning: **Installing in existing directory. It will be wiped on uninstallation.**

Select *Next*> *Install* and *Finnish*.

Navigate to the *Unigraf UCD Tools* directory under the installation directory and double click the app you want to run (*UCDConsole.Applmage* for example).

Firmware Update Procedures

UCD Configuration Utility is used to load an updated firmware to the device. As an option, UCD Configuration Utility can be used to select possible operation roles present in the UCD unit. A firmware set for the selected operation roles is created and the firmware set is programmed to the device. Please contact Unigraf for details.

Updating from Earlier FW Versions

UCD Firmware versions prior to 1.8.52 (see Help > About on Console) do not support the procedure described here. Follow the instructions in *Appendix G Firmware Recovery Procedure with Quartus Prime* in this manual.

Note: Firmware update is a sensitive process. Please do not disconnect the device from the PC and do not power it off before the operation is completed unless specially requested. Avoid plugging and unplugging other USB devices when the firmware update is in progress.


To update the firmware or create a new configuration on a UCD-4XX device, perform the following steps:

- ▶ Connect the UCD unit to a power supply and connect the USB cable.
- ▶ Open UCD Console SW. Select **Tools > Firmware Update**. UCD Config will open.

UCD Config


The first page of the utility indicates the firmware component versions present in the package. Select **Enable advanced mode** checkbox if you want to customize the installation (possibly to downgrade firmware for example). **Enable patching (Internet connection is required)** check box is not relevant for UCD-4XX devices.

Select **Next** to proceed.

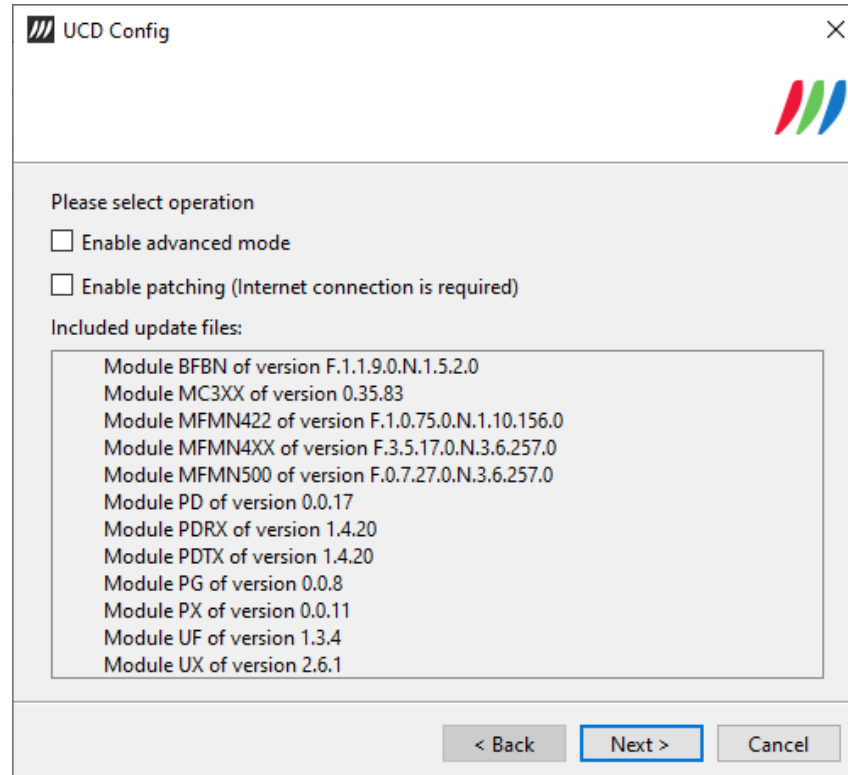

UCD Device Selection

From the list of connected UCD devices please select the one that you want to update. Click **Next**.

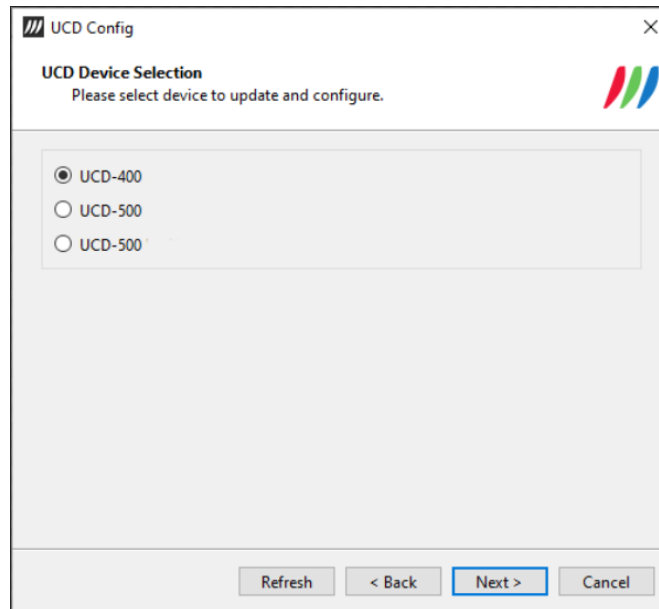


Review updates

A new dialog lists:

- ▶ FW components available in the UCD device
- ▶ Current FW version (from)
- ▶ FW to be installed (to)


Note: Selecting individual components for update is only enabled in **Advanced Mode**.

Click **Start** to start the FW update procedure.

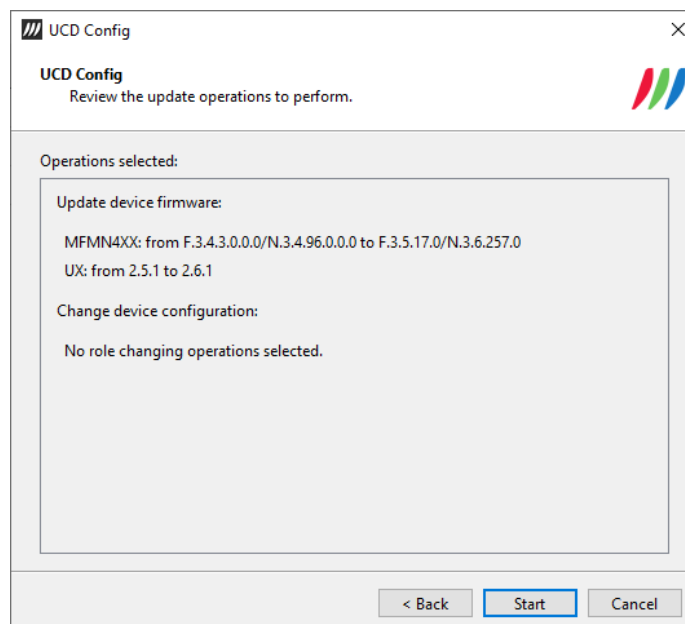


Advanced Mode


Advanced mode allows users to select individual components to update. Click **Next** to review the components and start the update procedure.

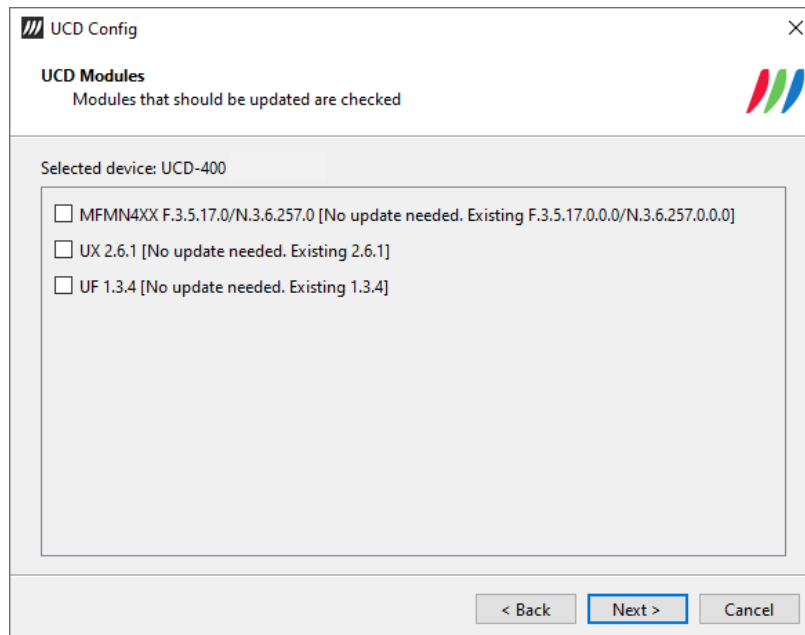

Configuration in progress

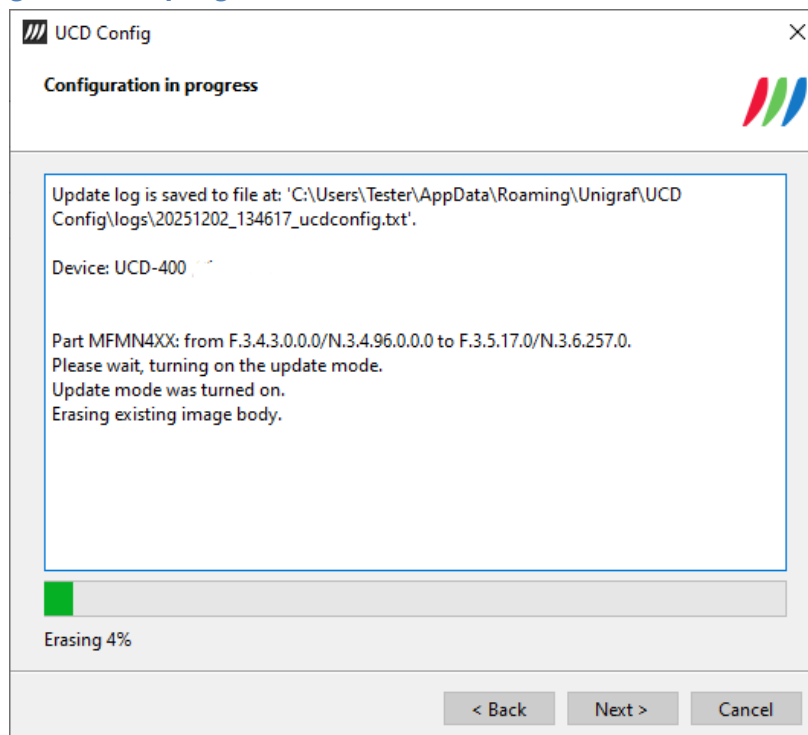

During the installation, you will be prompted to power cycle the device (power off, wait for 10 seconds and then power the device on again). Select **OK** to proceed.

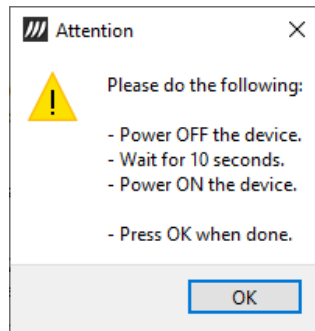

After the update has finished, click **Next** to see a summary and select **Finish** to complete.

Please note that the update procedure may take several minutes to complete.

Recovering Failures in FW Update Procedure

If FW Update procedure fails (e.g., when updating from an earlier FW that does not support the procedure described here) refer to Appendix G of this manual for instructions in *Firmware Recovery Procedure with Quartus Prime*.


Once FW Recovery procedure has been done and a Firmware version supporting UCD Firmware Configuration tool has been installed, all future updates can be done using this tool.

Firmware Downgrading

The previously released Unigraf SW Bundle 2.4.XX package does not contain UCD Device Firmware (FW). In case UCD device has been installed with the FW delivered with Unigraf 3.X SW Bundle, and version downgrade is needed, also UCD Device Firmware has to be rolled back.

Please follow the procedure below:

1. Download the latest **Console 2 SW Bundle (2.4.XX)** from Unigraf download page at unigraf.fi/downloads.
2. Run the application **SoftwareBundle_2.4.XX.exe** in the package to install the package. Please do not launch UCD Console application yet.
3. Download **Console 2: FW Package 2.3.38** from the same download page
4. Run the application **FirmwarePackage_2.3.38.exe** to copy UCD device FW in a proper folder in your PC
5. Launch **UCD Console**
6. Select **Tools > Firmware Update** to start **UCD Config** utility
7. In UCD Config select **Enable advanced mode**

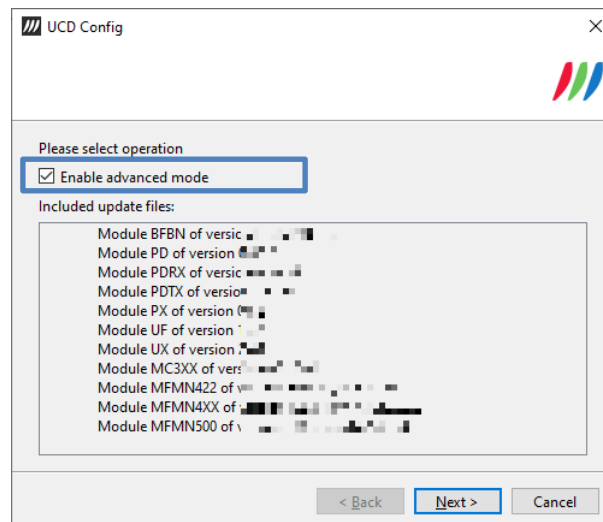

8. Select the device. **Click Next.**
9. In **UCD Modules** select the module titled MFMN4XX F.X.X.X/N.X.X.X
10. Click **Next**. Click **Start** to start programming FW to the connected UCD Device

License Manager

Licensing

The features of UCD Console SW are divided into groups based on the target use of the device. Most basic features can be used by default, and more advanced feature groups are enabled by dedicated licenses. When the licenses are present, the related part of the GUI will be shown, or the related control will be enabled.

Unigraf licenses are provided as strings of characters, **License Keys**. Each License Key enables a dedicated function in one device. Each device has its dedicated **Seed Number**. Each **License Key** is tied to one **Seed Number**. License Keys can be freely used in any number of PCs

License keys are managed with **UCD License Manager**. The License Manager can be found in the **Tools** menu of UCD Console SW.

Note: System administrator's privileges are required for accessing the licenses.

License Manager GUI

When run, License Manager will list the licensing enabled Unigraf devices. In the list of Devices please **Select** the device in question. The *serial number* and the *seed number* of your device are printed in a sticker attached to the bottom of the device.

The **Rescan...** button will re-scan the system for installed hardware.


Managing Licenses

Seed Number

Each license is tied to a hardware unit with the help of the **Seed Number**. Each unit has a unique Seed Number. Seed Number of the selected unit can be found in the top of the dialog.

Seed Number of the selected device can be copied from dialog link for e.g., ordering Licenses.

Adding New License Keys

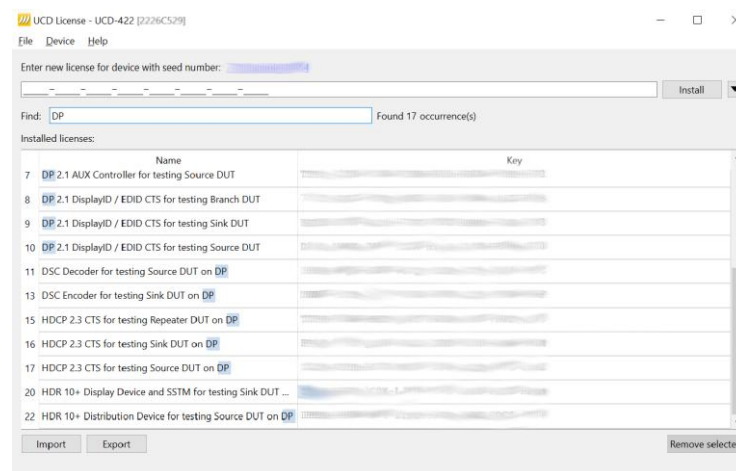

To add a new license key for a device, please enter the characters from the license sticker to the field for new licenses. The License Manager will automatically move the caret across the edit boxes during typing. If the key is given in text format, copy it and paste to the leftmost box.

Once the license key is fully entered, click Install. The license is authenticated and if it is valid, the license will appear in the list of installed licenses. If the key fails to authenticate, an error message is displayed. If this happens, please make sure that the key has been typed correctly and that the seed number on the license key sticker matches the seed number displayed in UCD License Manager.

Click the Search inverted triangle at the upper right to view the *Find* edit control. Enter a search keyword: The license list is updated to show names that contain the keyword.

Note that to avoid confusion, some letters will never appear in a license key because they resemble numbers: For example, capital 'G' and number '6' are very similar when printed with small font. When in doubt, use numbers.

Also, please note, that characters that cannot be part of valid license key are not accepted as input. When appropriate, an automatic conversion is applied while typing: For example, lower case letters are converted to upper case automatically.

Managing Installed Licenses

The Installed licenses list shows all installed licenses for the selected device. The list shows the name of the license and the actual license key characters.

<i>Import:</i>	Install licenses from an INI file for the currently selected device.
<i>Export:</i>	Save installed licenses for the currently selected device into an INI file for backup and distribution to other PCs. To export license(s), select the license(s) to be exported and then click the Export button. Please note that licenses from multiple devices can be exported into the same INI file.
<i>Remove Selected:</i>	Uninstall selected licenses. To uninstall a license, click on the license and then click the Remove Selected button

UCD Console


UCD Console SW is graphical user interface (GUI) for UCD family test equipment for desktop use. UCD Console provides the user access to all features of the unit. UCD Console also includes powerful debugging and analysis tools enabling the user to monitor the status of the display interfaces and assist in problem detection.

The various features of the UCD unit are divided into interface specific screens and tabs. Each tab contains data and controls for a specific feature.

Device Selection

A shortcut of UCD Console can be found by default under Start Menu.


Once UCD Console is launched, the dialog provides a list of Unigraf UCD devices connected in the PC. Please select the target device by double clicking on the appropriate row. If your device cannot be found in the list, please confirm the power and USB connection to the device and click the **Rescan** ... button.

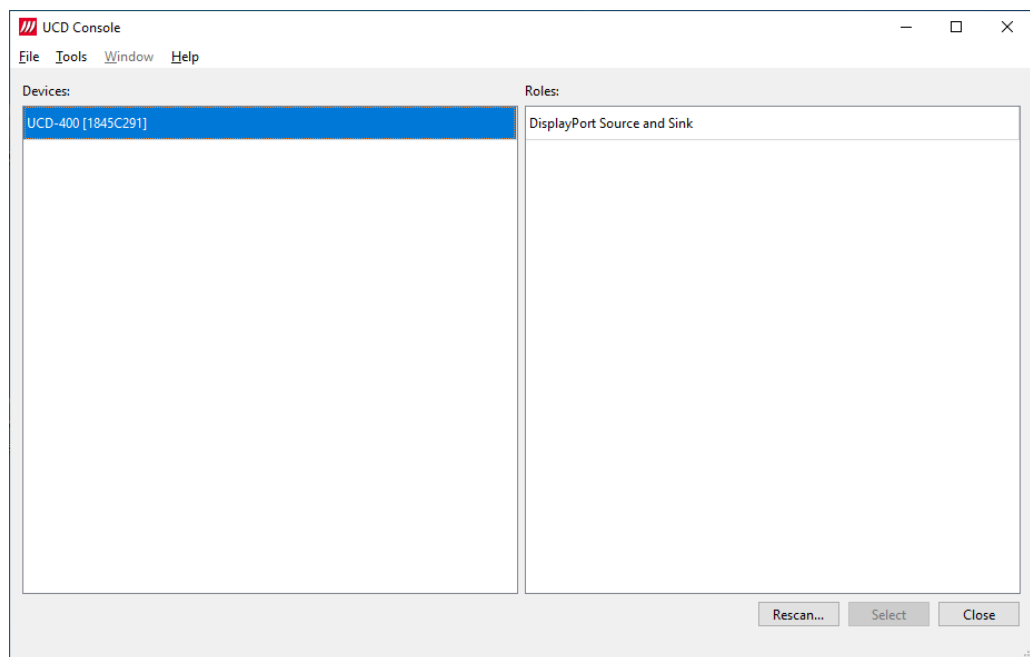

Note: If the USB driver is updated when installing the 3.11 Release, a device already open in a UCD Console, or with a script, will not be shown in the UCD Console under 'Devices' as "in use" as in previous SW versions.

Analyzer and Generator Operation

Most UCD devices can be used with UCD Console as Analyzer (a Sink device) and as Generator (a Source device). The functionalities of the two operation modes can be found in separate tabs. This User Manual will explain both roles and all role functionalities.

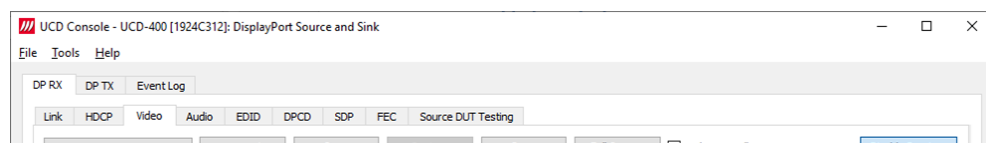

Options

Options can be found in **Tools > Options**.

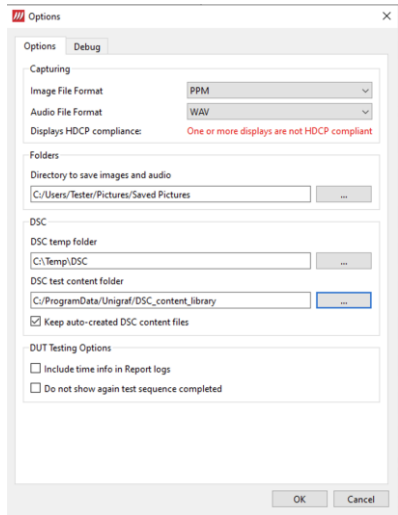


Image File Format

You can save the captured frames either in PPM, BMP, JPG or PNG bitmap file format. In PPM format the files are stored with the captured color depth, with other formats the color depth is truncated to 8 bits per color.

Audio File Format

Audio files are stored in WAV format.

Displays HDCP Compliance

Information if controlling PC is HDCP compliant, i.e. if preview of HDCP encrypted content can be enabled. If the display is non-HDCP compliant or when connected to the PC using RDP (Remote Desktop Protocol) then users will be presented with a blue background with a banner stating 'HDCP unauthorized'. HDCP is currently only supported on Windows OS and not supported on MacOS and Linux.

Folders

Please select the directories in the PC for saving the captured images and audio.

DSC

<i>DSC temp folder:</i>	Folder for DSC Work files.
<i>DSC test content folder:</i>	Folder where DSC source bitmap files, related configuration files and DSC conversion tools are stored.
<i>Keep auto-created DSC content files:</i>	By default, the DSC compressed content is deleted after use. If selected, the content is not deleted.

Warning

Keeping the automatically created DSC compressed content will shorten the time needed for running the DSC compliance tests.

Please note, that the space needed for storing the full library **can be very large** (appr. 400 GBytes). Please make sure that the content will be stored in a medium that has the required space available.

DUT Testing Options


Configure DUT Testing reports.

<i>Include time info in Report logs:</i>	Include system date and time in the beginning of each event line in created reports.
<i>Do not show again test sequence completed:</i>	Include system date and time in the beginning of each event line in created reports.

Detaching and Cloning Tabs

Most of the UCD Console tabs can be detached into a separate window for monitoring and controlling separate features simultaneously. To detach a tab **Right-click** on a tab and select **Detach Window**. To glue the tab back to the main window, click on the red **Close** button in the top right-hand corner of the window or press **<Alt> + F4** on the keyboard.

Tabs can also be cloned (duplicated) in order to e.g., monitor various areas of DisplayPort DPCD simultaneously without swapping addresses. To clone a tab **Right-click** on a tab and select **Clone Tab** or **Clone and Detach** to the two actions simultaneously.

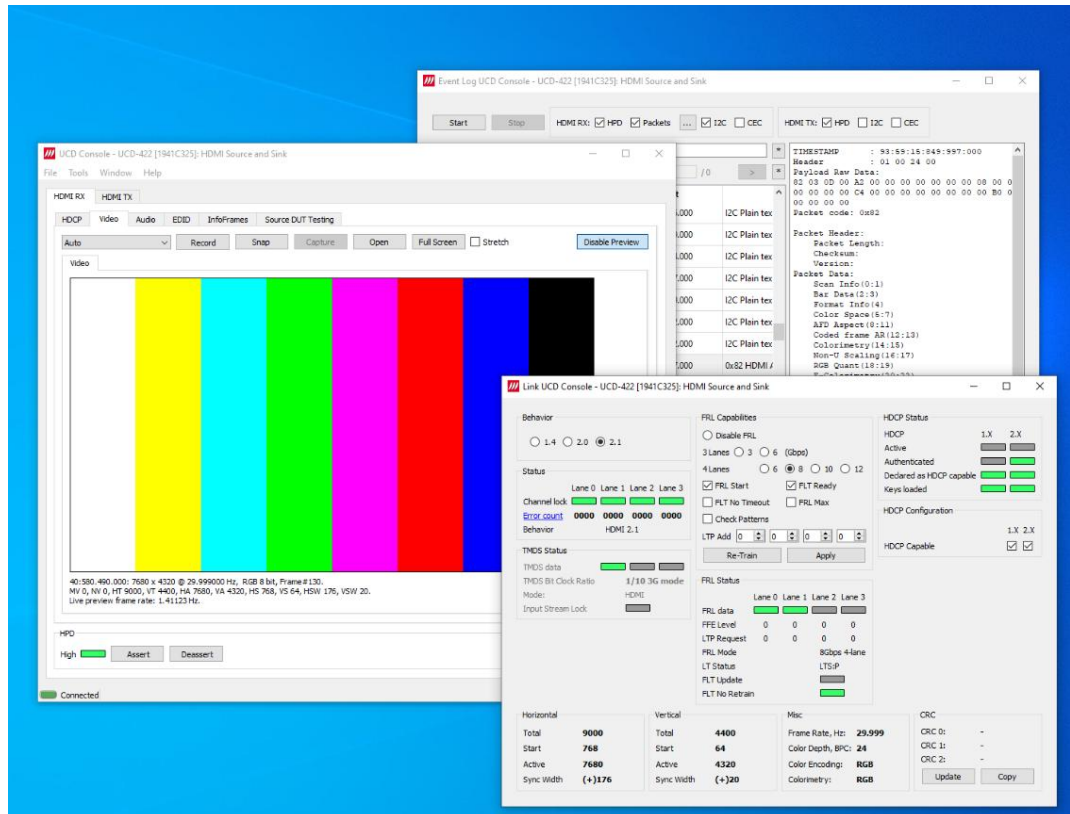

4. GENERATOR OPERATION

When used as a *Generator*, the UCD device acts as DisplayPort, HDMI or USB-C DisplayPort Alt Mode Source or Transmitter device. Generator functionality related controls and dialogs can be used by selecting *DP TX* or *HDMI TX* tabs.

Please note that in most UCD-4XX Series units *Analyzer* functionality is available simultaneously with Generator functionality. Please find description of Analyzer functionality earlier in this manual.

Functionality Tabs

UCD Console features are presented in tabs. Standard tabs are similar in all functional roles, Interface Specific tabs present features and controls that are only available for a particular interface.

Some of the tabs are enabled by default, some only when an applicable license is included.

Standard Tabs

Analyzer role features the following standard tabs:

- Video pattern generator (Pattern Generator).
- Content Playback (Playback)
- EDID editor (EDID)
- HDCP status monitor and control (HDCP)
- Sink DUT Testing
- Adaptive-Sync

Interface Specific Tabs

Depending on the connected UCD device, additional interface specific tabs will be available

[UCD-451: DP and USB-C DP Alt Mode Reference Source](#)

- Status information and control of the downstream link (Link).
- DPCD monitor (DPCD)
- Forward Error Correction (FEC)

[UCD-452: HDMI Reference Source](#)



- Status information and control of the downstream link (Link).
- SCDC monitor (SCDC)

Note:

Some of the tabs are enabled by default, some only when an applicable license is included. Please refer to Appendix B Licensing of this document for description of features and licensing

Standard Tabs

Pattern Generator Tab

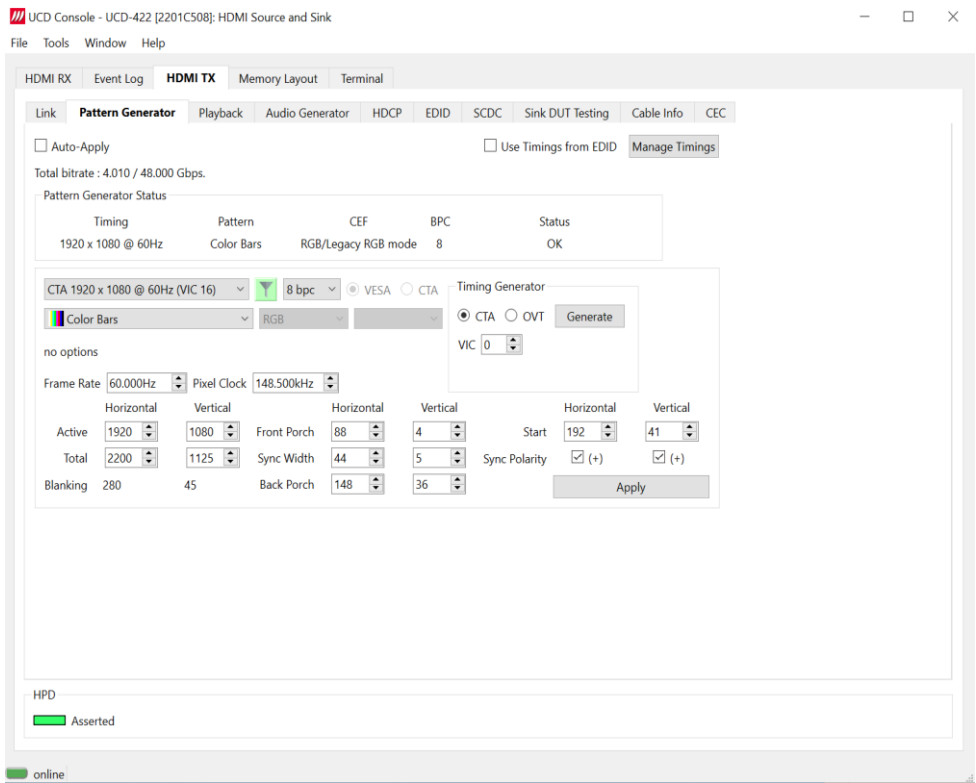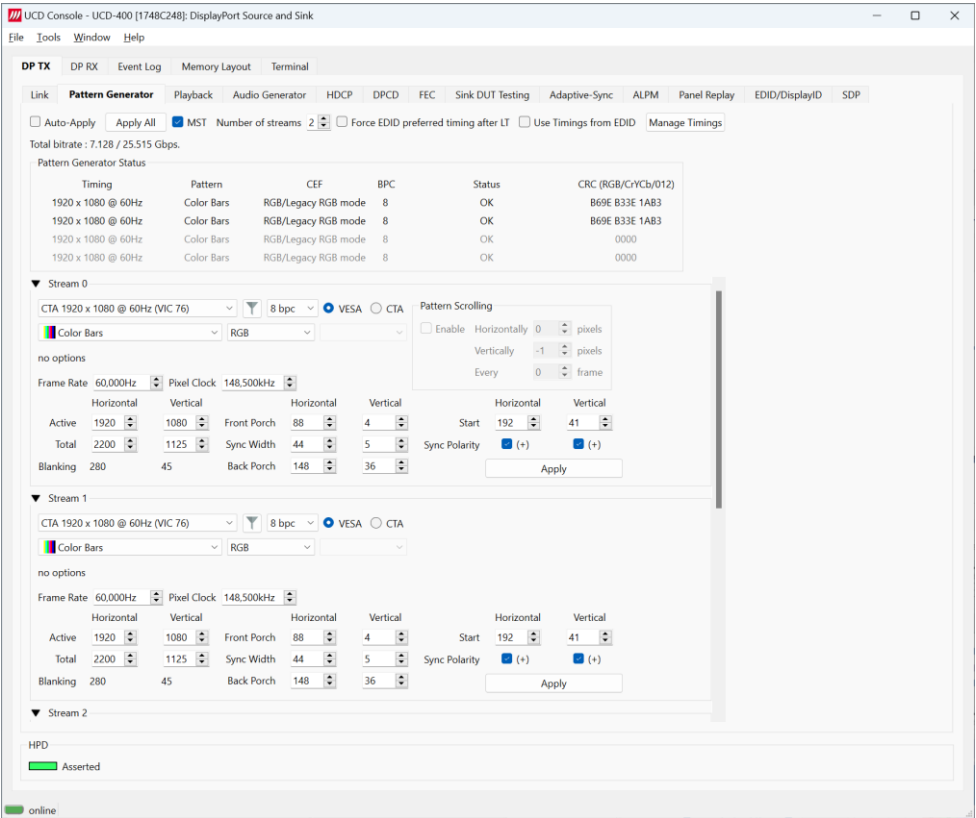

Note: The video modes that can be used in MST streams are limited by the overall capability of the DisplayPort link and the capability of the connected DisplayPort Sink or Branch device.


<i>Auto-Apply (DP):</i>	New settings are being validated when the user is clicks <i>Apply</i> . Automatic validation is applied when <i>Auto-Apply</i> is checked. When <i>Select DSC Image</i> pattern is being streamed and an incompatible <i>Horizontal and Vertical Active</i> timings are set, the user is presented with a dialog: <i>H-Active and V-Active don't match with DSC data. Do you want to upload image?</i> See Sourcing DSC Compressed Patterns .
<i>Apply All (DP):</i>	Apply recent changes to all streams. When <i>Select DSC Image</i> pattern is being streamed and an incompatible <i>Horizontal and Vertical Active</i> timings are set, the user is presented with a dialog: <i>H-Active and V-Active don't match with DSC data. Do you want to upload image?</i> See Sourcing DSC Compressed Patterns .
<i>MST (DP)</i>	Enable multi-stream transport mode. In 8b/10b link mode, select between SST and MST transport modes. In 128b/132b link coding mode, enable single stream output without stream allocation using Sideband messages if checkbox is cleared.
<i>Number of streams (DP)</i>	Set number of steams via combo box.
<i>Force EDID preferred timing after LT</i>	UCD reads the EDID of the connected Sink and after next LT enables to Stream 0 the timing listed in 18-byte descriptor 1 in VESA block of the sink's EDID.
<i>Use timings from EDID</i>	UCD reads the EDID of the connected Sink and lists only timings that are featured there.
<i>Manage Timings</i>	Please see chapter Manage Timings later in this manual.
<i>Total bitrate:</i>	Used link payload / Total link capability in Gbps (Pls see Note below).
<i>Auto-Apply (DP)</i>	To avoid sourcing invalid video mode combinations new settings are being validated when the user is clicking <i>Apply</i> . Automatic validation will be applied when <i>Auto-Apply</i> is checked.
<i>Apply</i>	Apply recent changes.

Pattern Generator Status panel shows the *Timing*, *Pattern* (Name), *CEF* (color format and subsampling and colorimetry), *BPC* (bits per color), *Status*, and *CRC* value, for each active stream.

Note: A full description of Minimum link configuration combinations for UCD standard video modes is available. [Please contact Unigraf](#) for details.

Pattern

Configuration of the video sent in the corresponding stream
(Controls vary between selected pattern type)

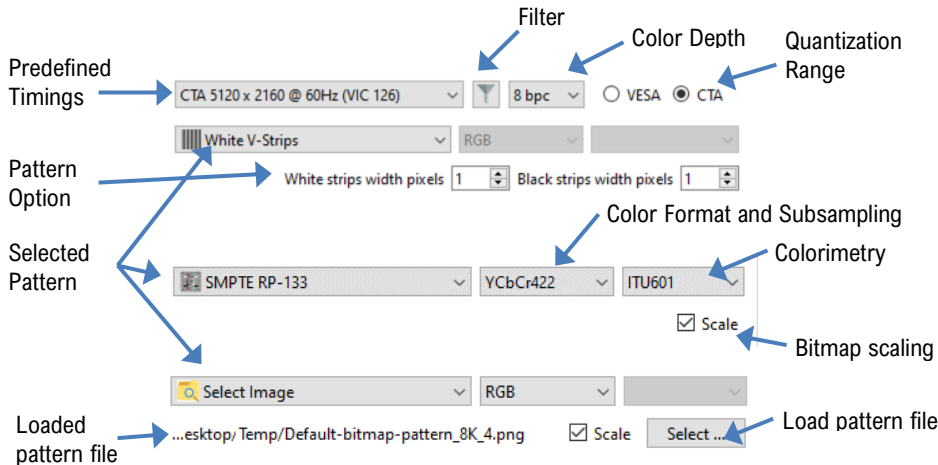

Predefined Timings

The list includes a set of common fixed video timings. Please find a list of the timings with their major details in [Appendix C](#) of this document. With *Manage Timings* function the user can add timings in the list and select which timings are shown in the selection.

Color Depth

Available color depths are: 6, 8, 10, 12 and 16 bpc. Color depth 6 bpc is only available when using RGB color format in DisplayPort or DisplayPort Alt Mode.


Video Pattern

The selection includes a set of predefined patterns and a possibility to load user defined custom patterns. Please find a description of the available predefined patterns in [Appendix D](#) of this document. By selecting **Disabled** you can have the links activated but no video data transferred.

Note: When MST mode is selected, full selection of test patterns is available only in stream 0

Filter

Filter timings by specific vendors and resolutions. Timings can be sorted by Vendor ID or width. HDMI timings are sorted by VIC number by default.

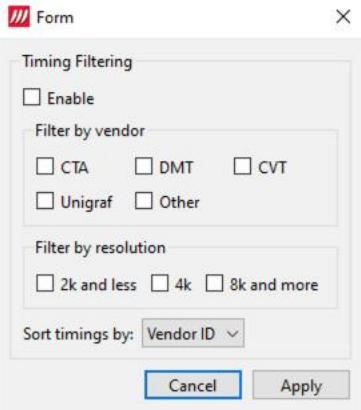

Custom Image Patterns

BMP, PNG, and JPG files can be loaded from the PC to be used as custom images.

Please refer to *Link Pattern* in description of *DP and DP Alt Mode Reference Source Link* tab later in this manual for sending special DisplayPort binary patterns in the link instead of video.

Bitmap Scaling

When bitmap patterns are used, they can be used either in their original resolution, aligned to left top corner (=un-check *Scale*), or upscaled or downscaled to match the selected video resolution (=check *Scale*).

Pattern Options

Some of the predefined patterns include additional configuration parameters. The controls for the parameters appear below the pattern selection when the pattern in question has been selected. Please find a description of patterns options in [Appendix D](#) of this document.

Pattern Scrolling

When Pattern Scrolling is enabled, the pattern is moved horizontally and vertically between display scans. The function is available for all patterns except the following: Color Bars, Chessboard, Solid Color, Solid colors (white, red, green, blue), White V-Strips, Motion Pattern, DSC Pattern.

Pattern Scrolling

☒ Enable

Horizontally pixels

Vertically pixels


Every frame

<i>Enable:</i>	Enable or disable pattern scrolling
<i>Horizontally X pixels:</i>	Horizontal step of the pattern movement in pixels (values in range -127...0...128, for YCbCr 4:2:2 even values). 0 = no movement, positive values = pattern moves to the right.
<i>Vertically Y pixels:</i>	Vertical step of the pattern movement in pixels (even values in range -127...0...128, for YCbCr 4:2:0 even values). 0 = no movement, positive values = pattern moves up.
<i>Every N frame:</i>	Delay of pattern movement in display frames (values in range 0... 255). 0 = no movement, 1 = move every frame, n = move every n:th frame.

Note: Please click *Apply* to enable changes or check *Auto-Apply*.

Sourcing DSC Compressed Patterns

UCD Pattern Generator function can source DSC content originating from pre-created DSC compressed files. DSC compressed pattern files can be created with a separate tool called *DSC Compressor*. It can be launched from Tools > DSC Compressor.

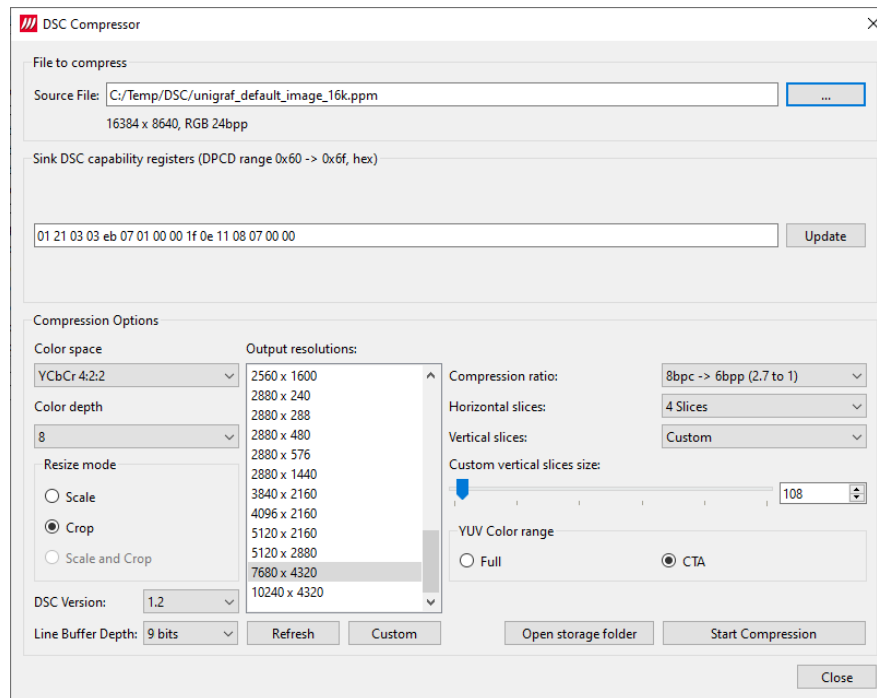

Select the source bitmap file in Source File field. Define the Output Resolution, the color depth, compression ratio and number of horizontal and vertical slices in the frame.

<i>Source File:</i>	Source bitmap file to be compressed (JPG, PNG, PPM)
<i>Sink DSC capability registers:</i>	Click <i>Update</i> to read DPCD registers 0x60 to 0x6f from the connected Sink device
<i>Color Space:</i>	Color space of the output compressed file (RGB, YCbCr 4:4:4, 4:2:2, 4:2:0, Simple 4:2:2)
<i>Color depth:</i>	Color space of the output compressed file (8, 10, 12, 16)
<i>Output resolution:</i>	Resolution of the output compressed file
<i>Resize mode:</i>	The way the DSC image is created from the Source file
<i>Compression ratio:</i>	Used compression ratio
<i>Horizontal slices:</i>	Nr. of slices horizontally (1 to 24 Slices)
<i>Vertical slices:</i>	Vertical slices (1 to 24 Slices, Custom) Custom vertical slices size: minimum 1, recommended 108
<i>YUV Color range:</i>	Selection of color range between Full range (Full) (0 to 255 at 8 bpc) and Limited Range (CTA) (16 to 235 at 8 bpc)
<i>Refresh:</i>	Refresh the list after adding a custom resolution
<i>Custom:</i>	Create a custom output resolution
<i>DSC Version:</i>	DSC version used (1.1, 1.2)
<i>Line Buffer Depth:</i>	Line buffer bit depth used to generate the bitstream. (8 to 16 bits, default 9 bits)
<i>Open storage folder:</i>	Open DSC temp folder defined in Tools > Options
<i>Start Compression:</i>	Start the compression process


Result of the compression process is saved in the same folder as the source file. The start of the file name is the same as the source bitmap file; resolution and color format are added to the end of the file name.

Example:

```
unigraf_default_image_16k.ppm >>
```


```
unigraf_default_image_16k_1920x1080_YUV422_FULL_bpc8_bpp6.dsc
```

To use the created DSC file in Pattern Generator, select pattern: *Select DSC Image* and click *Select ...* to open file selection dialog.

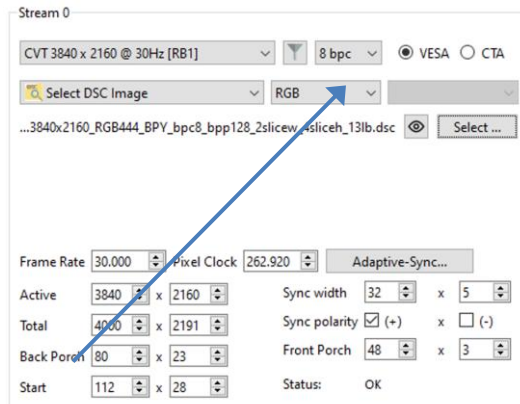

When a DSC image is selected as the pattern, UCD Console will automatically enable DSC, provided that the connected Sink device declares support for DSC in its DPCD.

When *Select DSC Image* pattern is being transmitted and incompatible *Horizontal and Vertical Active* timings are set (Via *Apply* or *Apply All*), the user is presented with a dialog: *H-Active and V-Active don't match with DSC data. Do you want to upload image?*

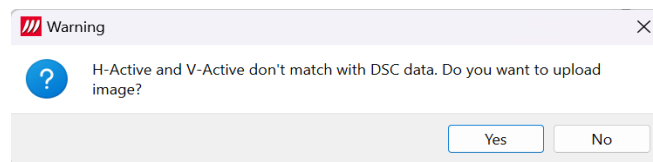

Above, “*Do you want to upload image?*” is misleading and will be changed to “*Continue to transmit image?*”.

If you select *No*, the new settings will not be applied.


If you select *Yes*, the Pattern will continue to be transmitted. DSC data is transferred in the active window. To transfer all DSC data without loss, active video should be large enough for DSC compressed data ($\text{DSC_pic_height} * \text{DSC_pic_length} / \text{compression_ratio}$). MSA H-active should also not be less than DSC pic_height.

MSA V-active parameters can be reduced without DSC corruption until active video area is no longer large enough to pass all DSC data.

MSA V-active and H-active can be increased until HW limitation (pixel clock limit) and link bandwidth are reached.


[Preview DSC image](#)

To preview an DSC image before it is applied to the pattern generator, select the eye icon. CRC and DSC CRC values will be indicated in the preview image.

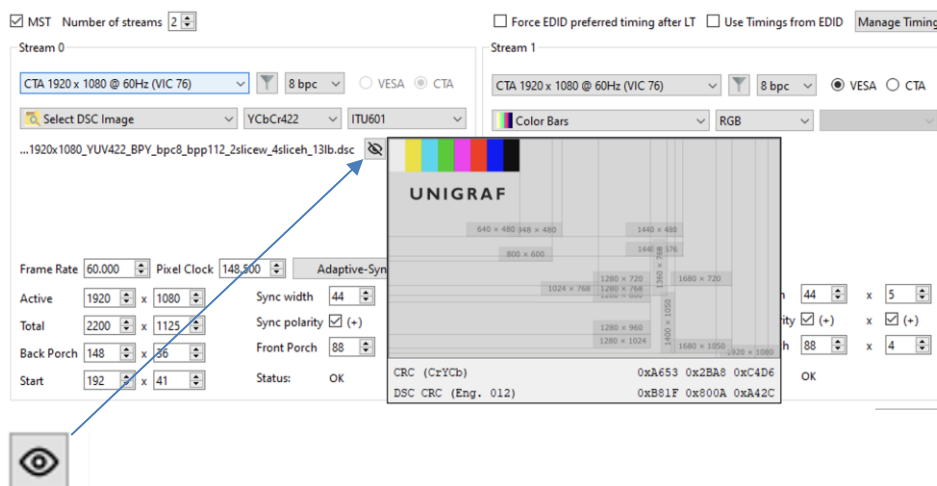

Manage Timings

Custom timings can also be created and edited with pop-up *Timing Editor*. Launch the editor by clicking *Manage Timings*.

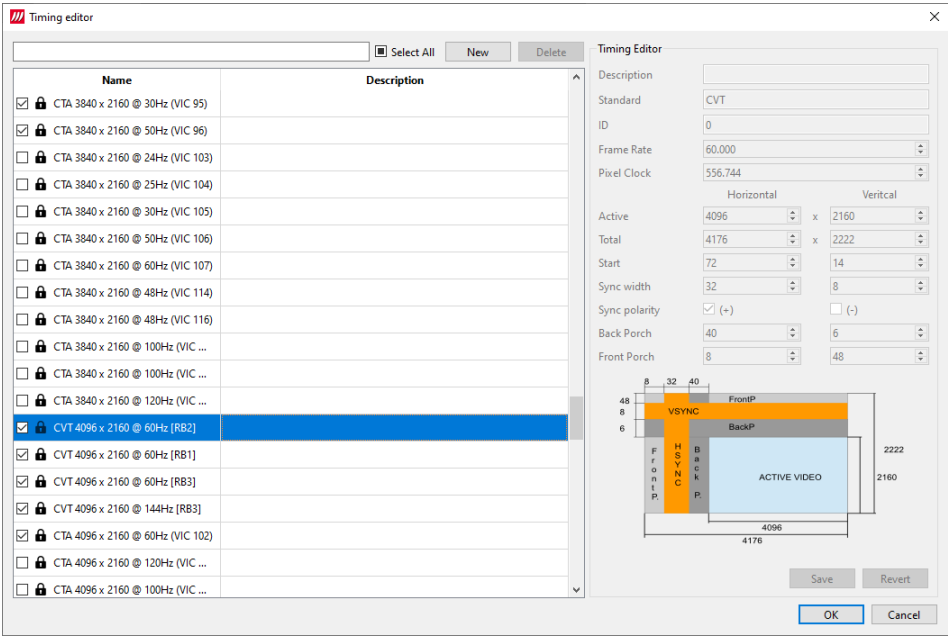

Customizing Timings List

The list of timings that are shown on the pull-down menu in Pattern Generator and Link tabs can be limited by un-checking the checkbox in the left edge of *Name* column. The timings will remain in the list and can be brought back to the pull-down menu, when needed.

Editing Timings


Video timing Name and Description are shown in the list. Lock icon  indicates that a timing is a fixed timing which cannot be edited or deleted. Custom timings are indicated with a head icon .

- New:* Create a new custom timing based on the selected fixed timing.
- Delete:* Delete the selected custom timing
- Save:* Save changes in the selected custom timing.
- Revert:* Undo all changes

The dialog parameters will be sanity checked and will warnings issued for illegal combinations.

HDMI Timing Generator (UCD-452)

HDMI Timings can be generated and applied via the *Timing Generator* group.

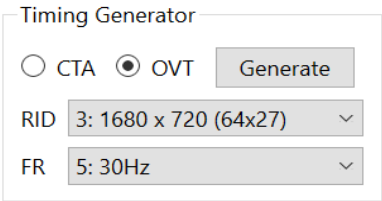

Timing Generator

CTA

OVT

Generate

VIC

77

To do this select *CTA* or *OVT* timings radio button. Select desire *RID* and *FR* or *VIC* in combo boxes and then click the *Generate* button.

The generated values will be reflected in the Frame parameters. Click *Apply* to set timing.

Frame Rate

30.000Hz

Pixel Clock

44.400kHz

Horizontal

Vertical

Active

1680

720

Front Porch

256

6

Start

64

14

Horizontal

Vertical

Total

2000

740

Sync Width

32

8

Sync Polarity

☒ (+)

☒ (+)

Blanking

320

20

Back Porch

32


6

Apply

Packet Generator

Packet generator enables configuring and generating Custom SDP independently from the Audio and Video Pattern Generators.

Note: In Packet Generator the packet generation time is limited. After limitation generator must be restarted manually.

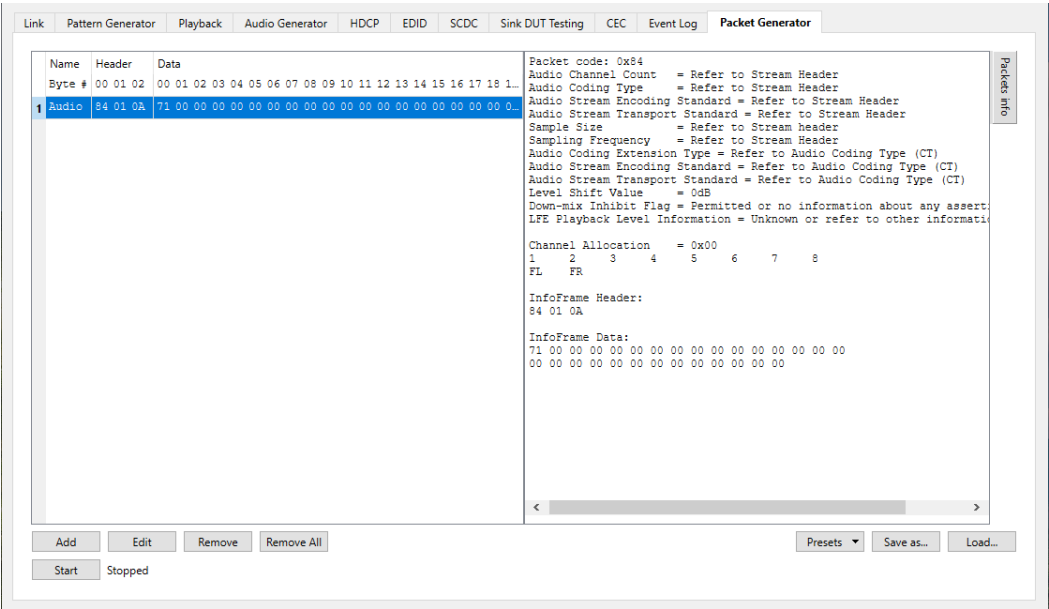


Add:	Add new packets. Opens packet editor.
Edit:	Edit existing packets
Remove:	Remove selected packet
Remove All:	Remove all packets
Start:	Start transferring the packets
Presets:	Save, Load, Remove, Import or Export packets
Save as...	Save packet
Load:	Load packets

Packet editor

For detailed information on the packet editor, please refer to [Packet Editor](#) chapter in this manual.

Playback Tab

Playback allows for running predefined *Playlist* files. Playlist contains a set of *Scenarios* with definitions of the timing, video pattern, audio content and related metadata packets and their duration.

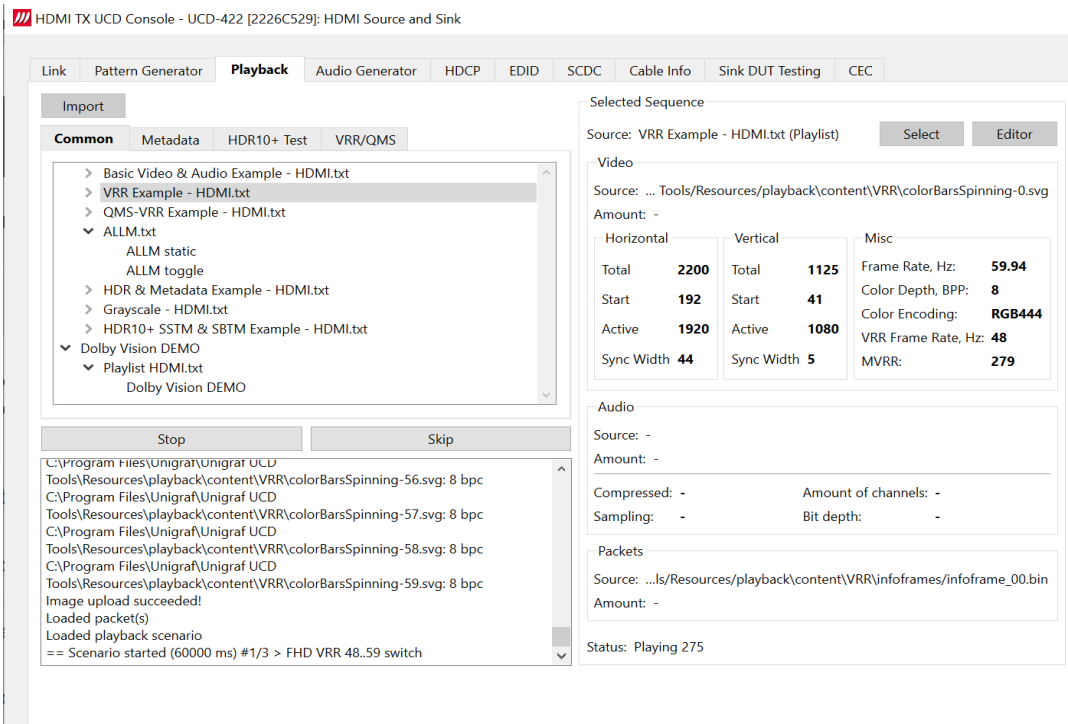

Term	Functionality
Playlist	<i>Playlists</i> (text files) specify the UCD devices and output protocol for transmission. It lists <i>scenarios</i> to be transmitted.
Scenario	Scenarios (text files) allow users to select video frames, metadata packets and audio to be transmitted and their order.
Advanced Playlists	Unigraf UCD devices can also be used as a compatibility test tools for dedicated standards such as Dolby Vision™ and HDR10+. Contact Unigraf for details.

Note: Note that Playlists and Scenarios are protocol dependent.
Provided examples for HDMI and DisplayPort are somewhat different.

Common Tab

The *Import* button is for importing *.json files into the *common* tab treeview. Sample content on windows can be found at C:\Program Files\Unigraf\Unigraf UCD Tools\Resources\playback\basic_library.json. Be **warned** that once imported, items cannot at present be removed. Actually you can but it involves using *Windows Register Editor* to remove values from (uninstall will not help):


Computer\HKEY_CURRENT_USER\SOFTWARE\Unigraf\UCD Console\Playback

Computer\HKEY_CURRENT_USER\SOFTWARE\Unigraf\UCD Console\MetadataScenario

Sample playlists are included in UCD Console. Select a sequence (a scenario) from the playlists and press *Run* (or double click it) to play.


The *Run* button label changes to *Stop* as a *Scenarios* run. Press *Stop* to stop playing the scenario. Press *Skip* to skip to next scenario (available when there are multiple scenarios in a playlist) while playing. While the *scenario* is loading the *Run* button label changes to *Cancel* to allow cancelation.

Figure below shows a playlist being run that contains a *prompt* command which pops up a dialog.

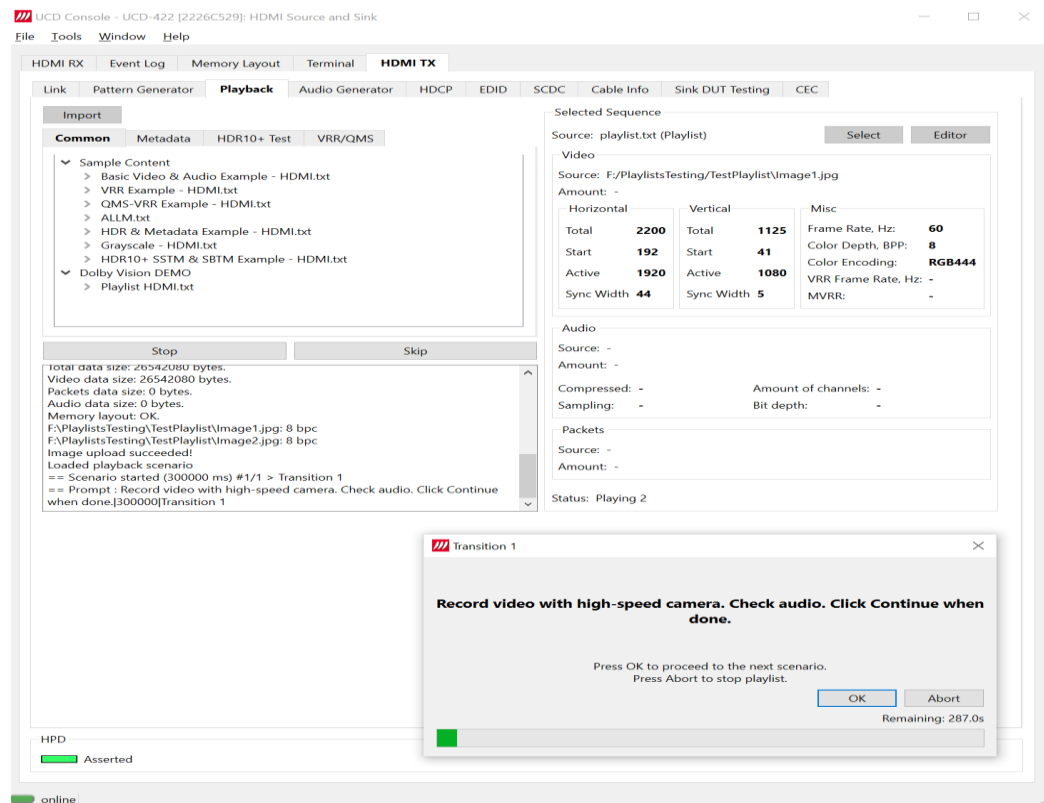

Status Log

Scenario commands are listed in the *Status Log* as they are run.

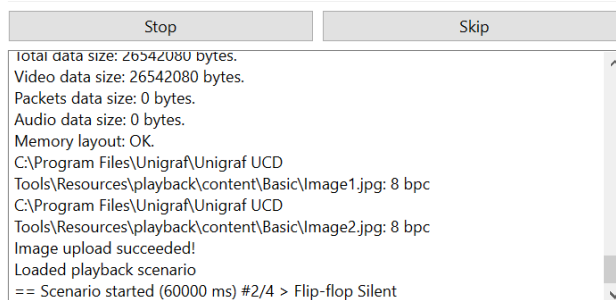

Selected Sequence

Running scenario video and audio details and their sources are shown in the *Selected Sequence* group panel.

Note that the triggered scenario or playlist to be run is the last selected: If an item was selected via the *treeview*, it is the triggered item to be run. If the *Select* button was used to select an item, it is the triggered item to be run (regardless of what is selected in the tree control).

Press the *Select* button to load a *playlist* or *scenario* to be run (selecting a sample from the *Sample Content treeview* will load them as the *playlist* or *scenario* to be run). Also it will be the *scenario* used as a template if the *Scenario Editor* is launched: default scenario values will be set if a playlist is selected.

Press the *Editor* button to launch the *Scenario Editor* (see below).

The *Selected Sequence* parameters are the transmission stream parameters.

Selected Sequence

Source: VRR Example - HDMI.txt (Playlist)

Select

Editor

Video

Source: ... Tools/Resources/playback\content\VRR\colorBarsSpinning-0.svg

Amount: -

Horizontal

Total2200

Start192

Active1920

Sync Width44

Vertical

Total1125

Start41

Active1080

Sync Width5

Misc

Frame Rate, Hz:59.94

Color Depth, BPP:8

Color Encoding:RGB444

VRR Frame Rate, Hz:48

MVRR:279

Audio

Source: -

Amount: -

Compressed: -

Amount of channels: -

Sampling: -

Bit depth: -

Packets

Source: ...ls/Resources/playback\content\VRR\infoframes\infoframe_00.bin

Amount: -

Status: Playing 275

Scenario Editor

Press the *Select* button above to select the scenario desired to use as a template for creating a new scenario. Press the *Editor* button to launch the *Scenario Editor*. The the dialog paramaters will be generated from the scenario file shown under the panel *Source* label (*Philips FHD.txt* as seen above).

Press the *Path* ... for setting the *Video*, *Packets* or *Audio* paths.

Press *OK* to save. Your are presented with a save dialog. You need to navigate to a directory you can save to. Run *Conssole 2* with **administration rights** if you want to save to default locations on windows such as: C:\Program Files\Unigraf\Unigraf UCD Tools\Resources\playback\content.

Refer to [Appendix H: Playlists and Scenarios](#) later in this manual for details.

Scenario Editor

Video

Path: ...goldenGate0.jpg Select

4 files found

☒ Align raw 10/12bit data to 16bit

☐ Show frame numbers during playback

CTA 3840 x 2160 @ 30Hz (VIC 95) RGB 10 bpc

DSC: HCAActive: HCBBlank:

VTotal: VStart:

VActive: VSync:

Frame rate:

Packets

Path: ...frames_0000.bin Select

4 files found

Audio

Path: ... Select

...

☐ Compress ☐ Little Endia 44100 Hz 2 channels 16 bits

Playing order

3:180:0,2:512;


General

☐ Enable scrambler Loading color (R,G,B): 52,127,150 HDCP: None


OK Cancel

Metadata Tab

The *Metadata* tab is for creating scenarios with metadata.

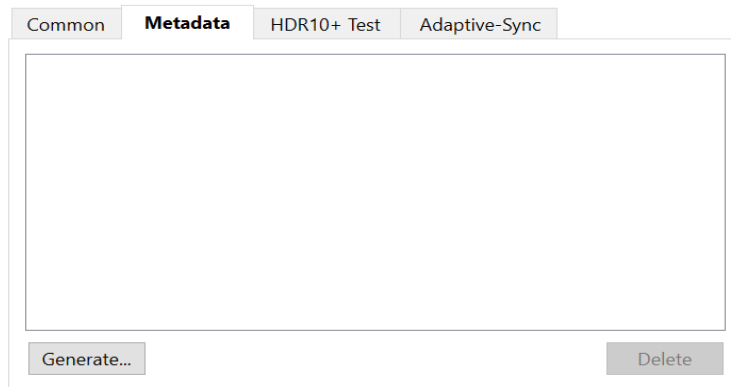

Select the *Delete* button to delete a *scenario* or the *Generate* button to launch the *Custom Metadata Scenario* dialog (shown below).

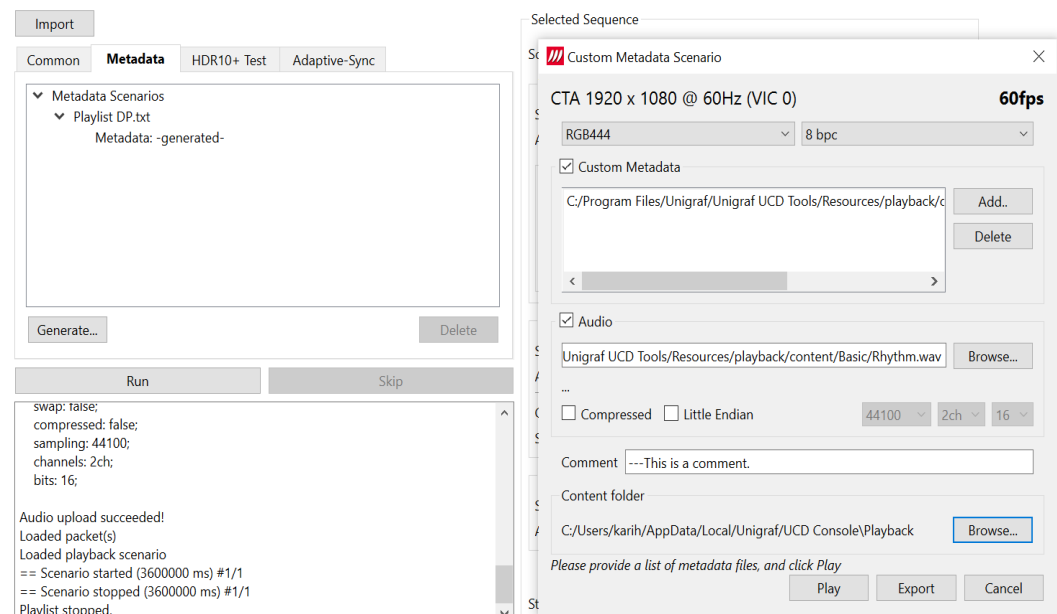

Current *Pattern Generator* timing details are shown at the top. You can change the color mode (RGB444, YUV444, YUV422, YUV420) and color depth (8 bpc, 10 bpc, 12 bpc, 16 bpc) via the dropdown combo boxes.

Select the *Add* or *Delete* buttons to add or remove metadata from the scenario.

Check the *Audio* checkbox and then the *Browse...* button to add an audio file. Sampling, channels and bits can be selected via the combo boxes.

The *scenario Comment* can be added in line edit box after the three dashes (---).

Use the *Content folder Browse...* button to select save location.


You can press *Play* to run the *scenario*, *Export* to save it or *Cancel* to cancel.

Export will create a folder something like *Metadata1920x1080@60-RGB444-8bpc* in the *Content folder*. In it you will find generated files *frame.svg* (displayed while running), the metadata files you selected and a *scenario.txt* file. You may edit and rename these files.


HDR10+ Test Tab

Please refer to HDR10+ CTS User Manual for detailed description of the tab.


VRR/QMS tab

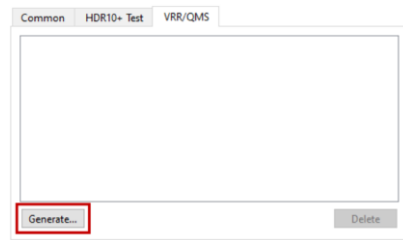


Click *Generate* to generate custom VRR and QMS scenarios. Custom Scenario Generator window will open.

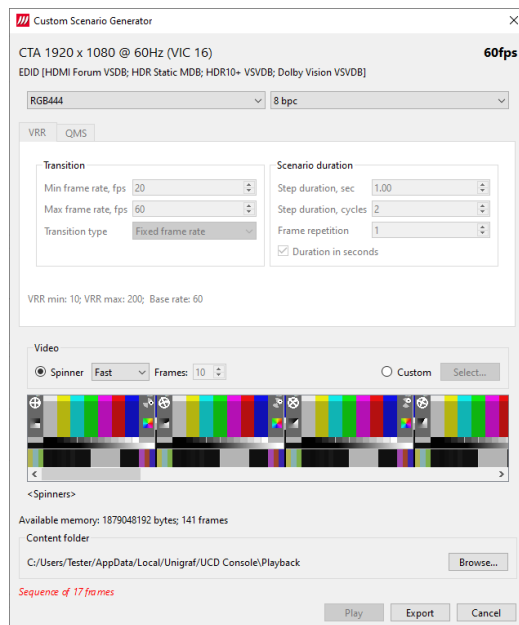

First you are asked to select the folder where the generated content will be stored.

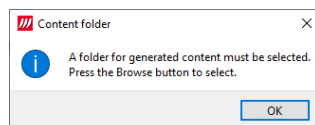


Click *Browse...* to select the folder.

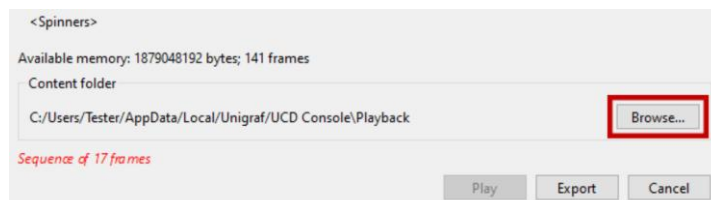

Timing details

The uppermost part of the window shows the timing details. Please, note that the timing is set on the pattern generator tab. You can change the color mode (RGB444, YUV444, YUV422, YUV420) and color depth (8 bpc, 10 bpc, 12 bpc, 16 bpc).

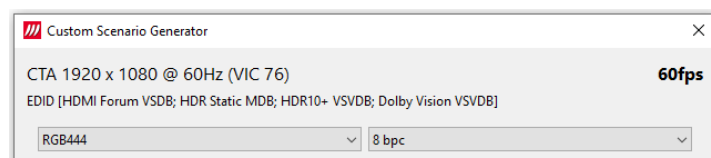

VRR settings

In the VRR tab you can set the transition and scenario duration parameters. Different transition types are Fixed frame rate, Min and max and Gradual. When *fixed frame rate* is selected, the scenario is played at the minimum frame rate set in the first field. Please, note that when the fixed frame rate is selected, you can only select the number of times the frame is repeated.

The screenshot shows the VRR settings dialog box. The 'Transition' section has 'Min frame rate, fps' set to 20, 'Max frame rate, fps' set to 60, and 'Transition type' set to 'Fixed frame rate'. The 'Scenario duration' section has 'Step duration, sec' set to 1.00, 'Step duration, cycles' set to 2, and 'Frame repetition' set to 1. The 'Duration in seconds' checkbox is checked. At the bottom, it says 'VRR min: 10; VRR max: 200; Base rate: 60'.

When *min and max* is selected, the output scenario will alter the framerate between the specified values. You can also set the duration for step in seconds and select how many times frames are repeated.

The screenshot shows the VRR settings dialog box. The 'Transition' section has 'Min frame rate, fps' set to 20, 'Max frame rate, fps' set to 60, and 'Transition type' set to 'Min and max'. The 'Scenario duration' section has 'Step duration, sec' set to 1.00, 'Step duration, cycles' set to 2, and 'Frame repetition' set to 1. The 'Duration in seconds' checkbox is checked. At the bottom, it says 'VRR min: 10; VRR max: 200; Base rate: 60'.

When *gradual* is selected, the frame rate is changed with each frame. For example, when min frame rate is set at 20 and max is set at 60 and the scenario has 40 frames, frame rate would be incremented by 1 with each frame.

Info at the bottom of the segment shows the minimum and maximum values for VRR framerate defined in EDID, and the base frame rate set in the pattern generator.


The screenshot shows the VRR settings dialog box. The 'Transition' section has 'Min frame rate, fps' set to 20, 'Max frame rate, fps' set to 60, and 'Transition type' set to 'Gradual'. The 'Scenario duration' section has 'Step duration, sec' set to 1.00, 'Step duration, cycles' set to 2, and 'Frame repetition' set to 1. The 'Duration in seconds' checkbox is checked. At the bottom, it says 'VRR min: 10; VRR max: 200; Base rate: 60'.

QMS settings

In the QMS settings dialogue you find all the frame rates included in the QMS specification. Select which frame rates you want to include in your scenario. Also select the step duration in cycles. In the lower left corner details of the scenario as shown.

The screenshot shows the QMS settings dialog box. The 'Next_TFR' section has a list of frame rates with checkboxes: 'QMS-VRR is not active' (checked), '24/1.001' (checked), '24' (checked), '25' (checked), '30/1.001' (checked), '30' (checked), '48/1.001' (unchecked), '48' (unchecked), '50' (unchecked), '60/1.001' (unchecked), '60' (unchecked), '100' (unchecked), '120/1.001' (unchecked), and '120' (unchecked). There are 'None' and 'All' buttons. The 'Step duration, cycles' is set to 2. At the bottom, it says 'SCDC: QMS: 1; QMS-TFRmin: 1; QMS-TFRmax: 1'.

Video

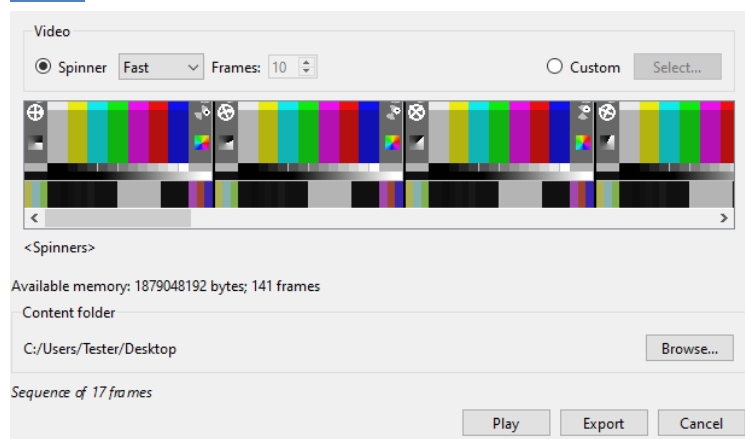


The section at the bottom shows details of the output video. The default pattern is a spinner. You can select the speed of the spinner video from the predefined options in the drop-down menu or you can set a number of frames it takes for the spinner to rotate a full circle. You can also select a custom video. The supported file types are .jpg, .png, .gif, .bmp, .tiff, .ppm and .tif

Available memory is shown in bytes and frames. Below, the folder selected for the sequence is shown. You can change the folder by clicking *Browse...* Lastly, the duration of the sequence is shown in frames.


You can export the scenario by clicking *Export*. When exporting, you are asked to select a location for the export. The content folder will be automatically created in the chosen location. The folder includes the image files, packets and scenario parameters.

You can play the scenario by clicking *Play*. When the scenario is ready for playing, the scenario generator window will close. You can now inspect the progress in the log in the playback tab as shown below.


Adaptive-Sync tab

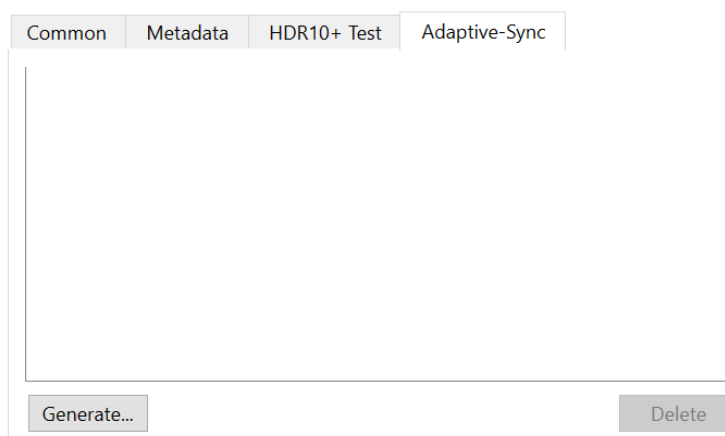


Click *Generate* to generate custom Adaptive-Sync scenarios. Custom Scenario Generator window will open.

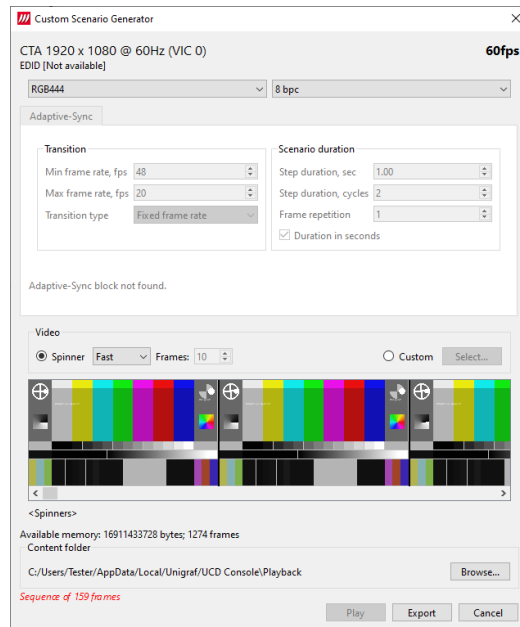

First you are asked to select the folder where the generated content will be stored.

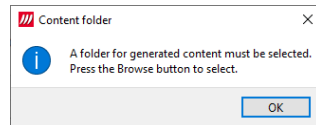


Click **Browse...** to select the folder.

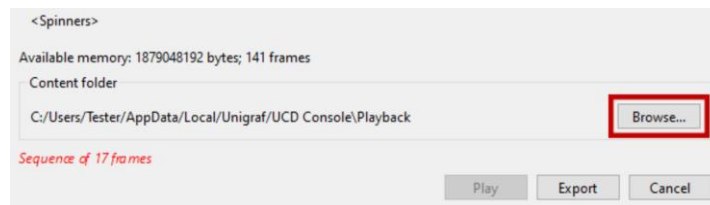

Timing details


The uppermost part of the window shows the timing details. Please, note that the timing is set on the pattern generator tab. You can change the color mode (RGB444, YUV444, YUV422, YUV420) and color depth (8 bpc, 10 bpc, 12 bpc, 16 bpc).

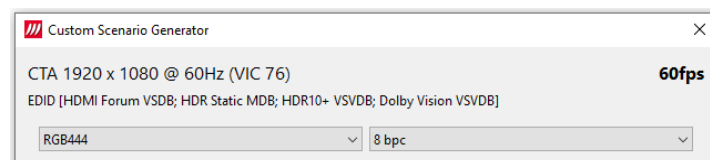

Adaptive-Sync settings

In the Adaptive-Sync section you can set the transition and scenario duration parameters. Different transition types are Fixed frame rate, Min and max and Gradual.

When *fixed frame rate* is selected, the scenario is played at the minimum frame rate set in the first field. In scenario duration, select how many times frame is repeated.

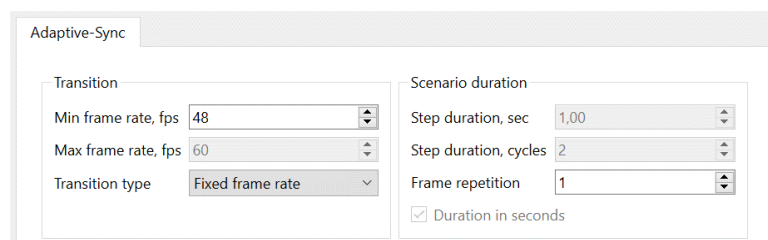

When *min and max* is selected, the output scenario will alter the framerate between the two values set in the drop down menus. You can also set the duration for step in seconds and select how many times frames are repeated.

The screenshot shows the 'Adaptive-Sync' window. Under the 'Transition' section, 'Min frame rate, fps' is set to 48, 'Max frame rate, fps' is set to 60, and 'Transition type' is 'Min and max'. Under the 'Scenario duration' section, 'Step duration, sec' is 1.00, 'Step duration, cycles' is 2, 'Frame repetition' is 1, and the 'Duration in seconds' checkbox is checked.

When *gradual* is selected, the frame rate is changed with each frame. For example, when min frame rate is set at 20 and max is set at 60 and the scenario has 40 frames, frame rate would be incremented by 1 with each frame.

Info at the bottom of the segment shows the minimum and maximum values for VRR framerate defined in EDID, and the base frame rate set in the pattern generator.

The screenshot shows the 'Adaptive-Sync' window with 'Transition type' set to 'Gradual'. All other settings, including 'Min frame rate, fps' (48), 'Max frame rate, fps' (60), 'Step duration, sec' (1.00), 'Step duration, cycles' (2), 'Frame repetition' (1), and the checked 'Duration in seconds' checkbox, remain the same as in the previous screenshot.

Video


The screenshot shows the 'Video' window. At the top, 'Spinner' is selected with 'Fast' speed and 'Frames: 10'. There is a 'Custom' option with a 'Select...' button. Below is a preview of the spinner video pattern. Under '<Spinners>', it shows 'Available memory: 1879048192 bytes; 141 frames'. The 'Content folder' is 'C:/Users/Tester/Desktop' with a 'Browse...' button. At the bottom, it says 'Sequence of 17 frames' and has 'Play', 'Export', and 'Cancel' buttons.

The section at the bottom shows details of the output video. The default pattern is a spinner. You can select the speed of the spinner video from the predefined options in the drop-down menu or you can set a number of frames it takes for the spinner to rotate a full circle. You can also select a custom video. The supported file types are .jpg, .png, .gif, .bmp, .tiff, .ppm and .tif

Available memory is shown in bytes and frames. Below, the folder selected for the sequence is shown. You can change the folder by clicking Browse... Lastly, the duration of the sequence is shown in frames.


You can export the scenario by clicking *Export*. When exporting, you are asked to select a location for the export. The content folder will be automatically created in the chosen location. The folder includes the image files, packets and scenario parameters.

You can play the scenario by clicking *Play*. When the scenario starts playing, the scenario generator window will close. You can now inspect the progress in the log in the playback tab as shown below.

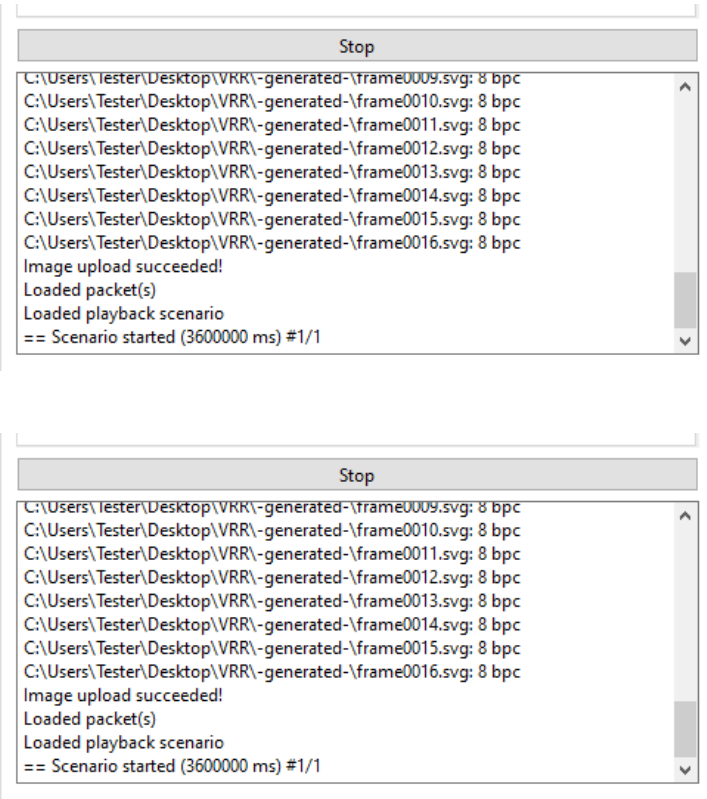

Audio Generator Tab

Audio generator allows the user to play LPCM audio generated internally or from files in WAV format. Audio is played to all active ports.

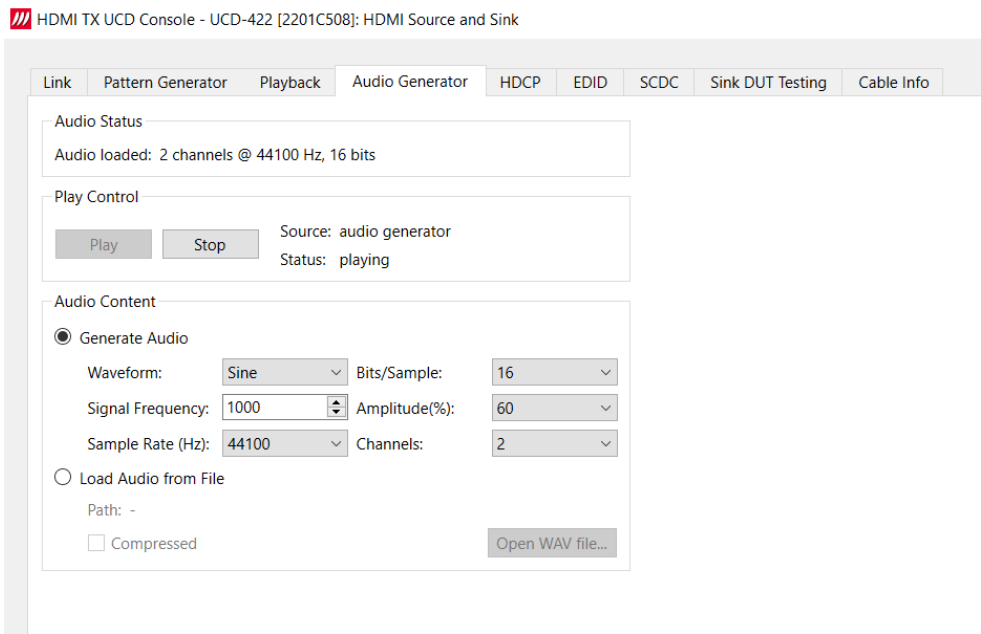

To load internally generated audio, select *Generate Audio*, and adjust the controls to the desired audio format.

To load an audio file from your PC, select *Load Audio from File*, click the *Open WAV file...* button, browse and select the file and Open.

The *Compressed* checkbox indicates that the audio loaded from the selected file is compressed.

To play the selected audio content, click the *Play*.

The content will be transmitted until the *Stop* button is clicked.

Audio Status displays current audio content status.

Audio Content


Sent audio can be generated internally or used a WAV file loaded from the PC.


In case of a WAV audio file, the parameters stored in the file will be used. When generating audio internally, the user sets the details of the LPCM Audio signal.

<i>Waveform</i>	Selection of audio waveform: Sine, Sawtooth, Square, or Incremental
<i>Signal Frequency</i>	Setting audio signal frequency in Hz.
<i>Sample Rate (Hz)</i>	Selection of audio sampling rate: 32000, 44100 (default), 48000, 88200, 96000, 176400, 192000.
<i>Bits/Sample</i>	Selection of sample bit depth: 16, 20, 24.
<i>Amplitude(%)</i>	Selection of audio amplitude: 10%, 20%, ..., 90%, 100%.
<i>Channels</i>	Audio channels available: 1, 2, ..., 7, 8. Channels transmit LPCM (uncompressed) Audio.

HDCCP Tab

HDCCP tab is the dialog for monitoring the HDCCP (for *High-Bandwidth Digital Content Protection*) status and controlling the HDCCP capabilities of the UCD device.

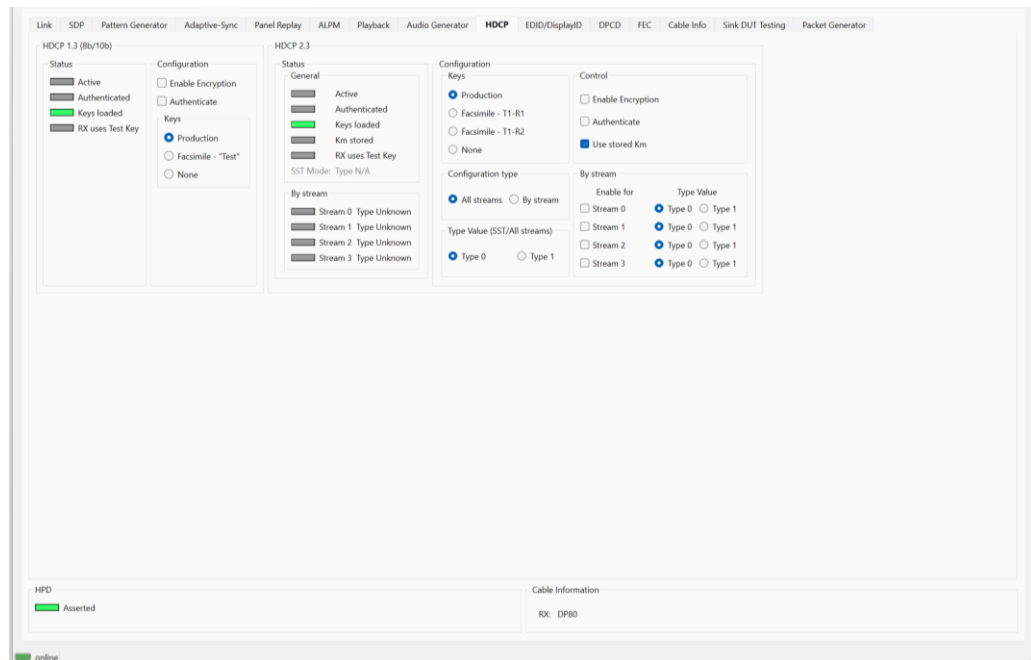

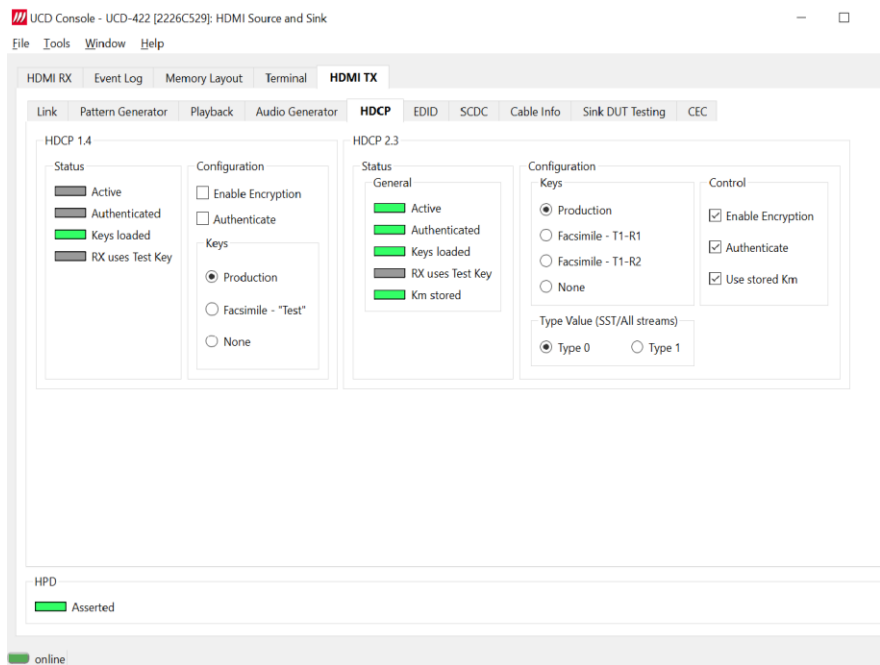

Status General

The status fields indicate the HDCP status of the UCD device.

<i>Active:</i>	The stream between UCD and the downstream sink has been encrypted.
<i>Authenticated:</i>	HDCP handshake between the UCD and the sink unit has been completed successfully.
<i>Keys loaded:</i>	HDCP keys are loaded to the UCD unit.
<i>Km is stored:</i>	Master Key (Km) is stored.
<i>SST Mode Type</i>	Type when in SST mode.

Status By stream

Stream status (DP) shows HDCP status on each stream.

Configuration Control

<i>Enable encryption:</i>	Check to enable the encryption of the stream between UCD and the downstream sink.
<i>Authenticate:</i>	Perform the HDCP initiation handshake between the UCD and the sink unit.
<i>Use stored Km:</i>	Use stored Master key (Km).

Configuration type

Select to configure HDCP (DP) or All streams at once or By stream.

By stream

Select and configure streams (DP).

Type Value

Select Type 0 or Type 1. Type 1 ensures that content encryption is done with HDCP version 2.2 or higher.

Configuration Keys

Select *Production* or *Facsimile* HDCP keys. To remove the keys, select *None*.


EDID/DisplayID Tab


EDID/DisplayID Tab provides tools for accessing the EDID/DisplayID data of the connected sink device. There are three basic functions:

- Load and save the data files in the host PC.
- Edit the data contents either in Editor Mode or in Hex Edit Mode.
- Read and write data to the connected sink. Up to 4 virtual channels can be accessed.

EDID/DisplayID Files

With *Load...* and *Save As...* a file can be read into the editor or written to a file from the PC.

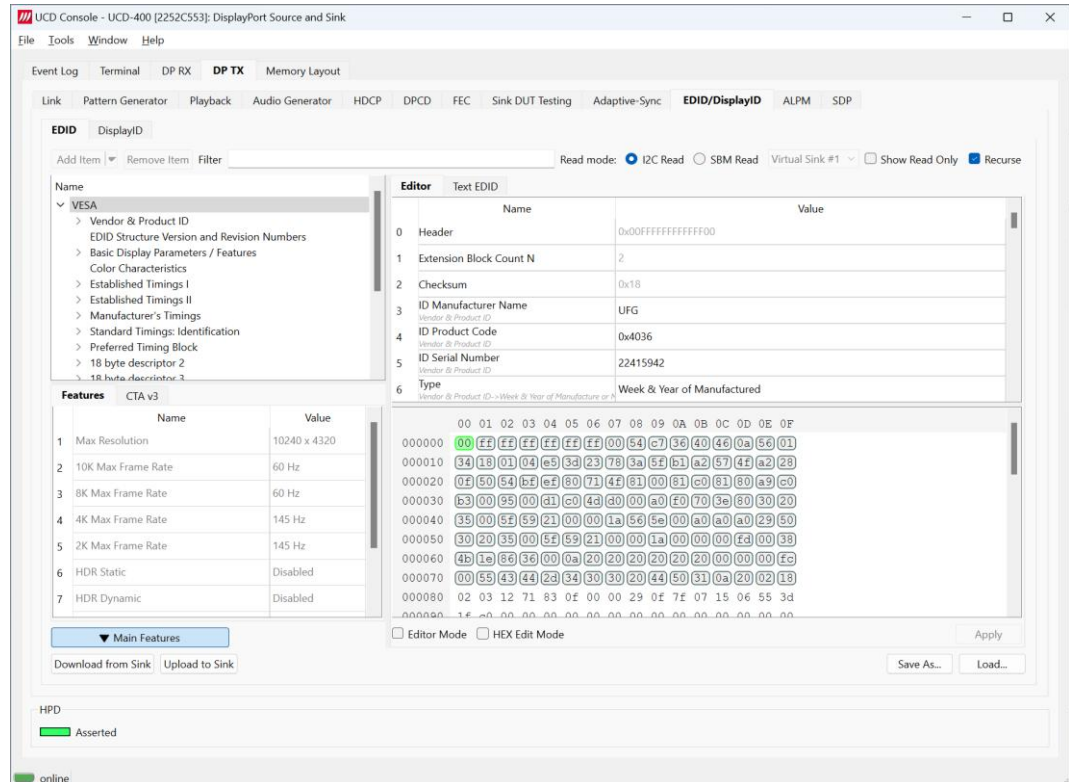

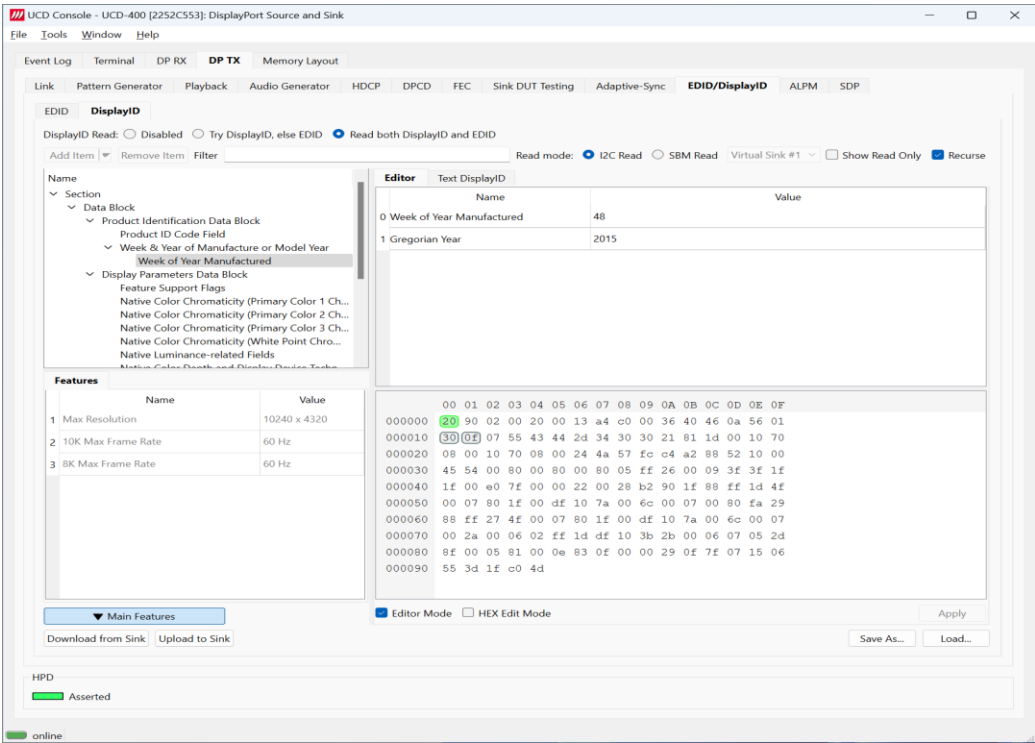

At top the *DisplayID* tab dialog are radio buttons to control how DisplayID data is read: *Disabled*, *Try DisplayID*, *else EDID*, and *Read both DisplayID and EDID*. These have no effect when downloading from the sink unless the sink supports DisplayID.


The contents of the device EDID/DisplayID file are not modified, or integrity checked during load and save operations.

Note: Four blocks (512 bytes) of EDID/DisplayID code are read. If the device does not support all four blocks, the non-supported data values are set to zero.

In the Editor Panes (upper right pane), the *Text EDID* and *Text DisplayID* tabs allow viewing data in tree form.

EDID/DisplayID Editor

Please see the description of the EDID editor in Chapter [EDID/DisplayID Editor](#) later in this document.

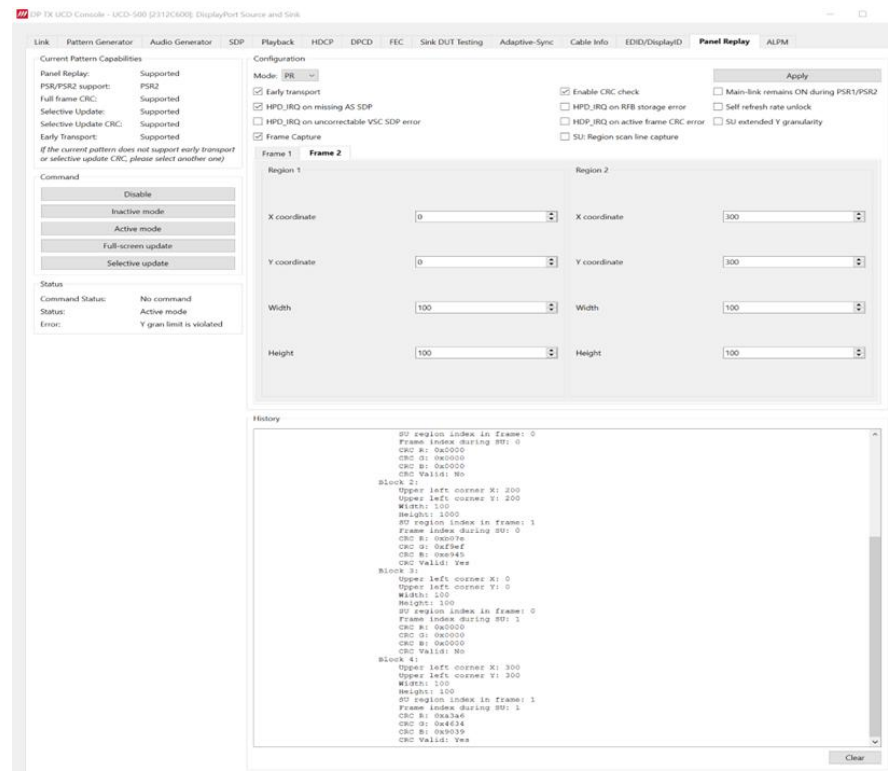

Panel Replay Tab

Current Pattern Capabilities

Current Pattern Capabilities panel displays what features are supported. Selecting different patterns in the *Pattern Generator* will affect supported features shown here. For example *Pattern Generator* pattern *Color Bars* will disable *Early Transport* capability whereas *Color Squares* will enable it.

Command

Command panel has the following functions (reflected in the *Status* panel below it):

<i>Disable</i>	Disable Panel Replay.
<i>Inactive mode</i>	Set mode to inactive.
<i>Active mode</i>	Set mode to active.
<i>Full-screen update</i>	Transmit Full-screen update.
<i>Selective update</i>	Transmit selective update (shown in <i>Command Status</i> and <i>History</i>).

Status

Status panel reflects the *Command Status*, *Status* and *Error*.

Command Status will show *Selective update* when *Active mode* and *Selective update* buttons have been selected (see above); otherwise it will display *No command*.

Status will show state: *Disable*, *Inactive mode* or *Active mode*.

Error will show *No error*, *Incorrect command* or an error message.

History

History panel displays results from applying commands in the *command* panel (see above).

Configuration

Configuration panel allows users to configure *Panel Replay* behavior.

The *Mode* combo box allows mode selection: *PR*, *PSR1*, *PSR2*.

Configuration checkboxes available are:

- Early transport: can be set when supported in Current Pattern Capabilities
- HPD_IRQ on missing AS SDP
- HPD_IRQ on uncorrectable VSC SDP error
- Enable CRC check
- HPD_IRQ on RFB storage error
- HPD_IRQ on active frame CRC error
- Main-link remains ON during PSR1/PSR2
- Self refresh unlock
- SU extended Y granularity
- Frame Capture
- SU:Region scan line capture

The available parameters for *Frame1* and *Frame 2* for *Region 1* and *Region 2* are:


<i>X coordinate</i>	X coordinate of region
<i>Y coordinate</i>	Y coordinate of region
<i>Width</i>	Width of region
<i>Height</i>	Height of region

These are the transmitted blocks sent when *command Selective update* is pressed (see above).

The *Apply* button is used to set the *Configuration* panel state.

Adaptive-Sync Tab

Adaptive-Sync feature is available for Stream 0.

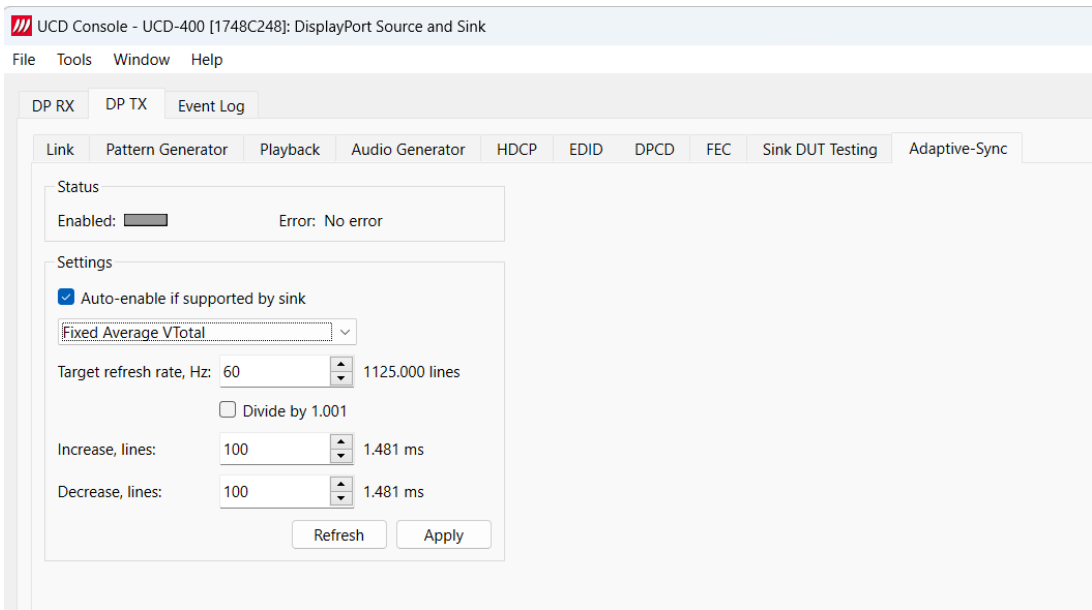



<i>Auto enabled if supported by Sink:</i>	The feature is enabled based on connected Sink status
<i>Disabled:</i>	Feature is disabled unless <i>Auto Enabled ... box is checked. Please see the note below.</i>
<i>Adaptive Total, constant refresh rate:</i>	Added blank lines
<i>Adaptive Total, Square pattern:</i>	Added blank lines, min; Added blank lines, max; Period, frames.
<i>Adaptive VTotal, Zigzag pattern:</i>	Added blank lines, min; Added blank lines, max; Increase, lines; Decrease, lines.
<i>Fixed Average VTotal:</i>	Target refresh rate, Hz; Increase, lines; Decrease, lines

Note:

Please note that in case *Auto enabled if supported by Sink* is selected and the connected Sink device supports Adaptive-Sync, but the selected mode is *Disabled*, then Adaptive-Sync is enabled in mode “*Adaptive Total, constant refresh rate*” with 0 (zero) added blank lines. Control dialog will be updated to indicate the status.

Sink DUT Testing Tab

Refer to *Appendix E* for descriptions of the tests available. The tests are presented in a split view, the left being test categories and the right being the tests within.

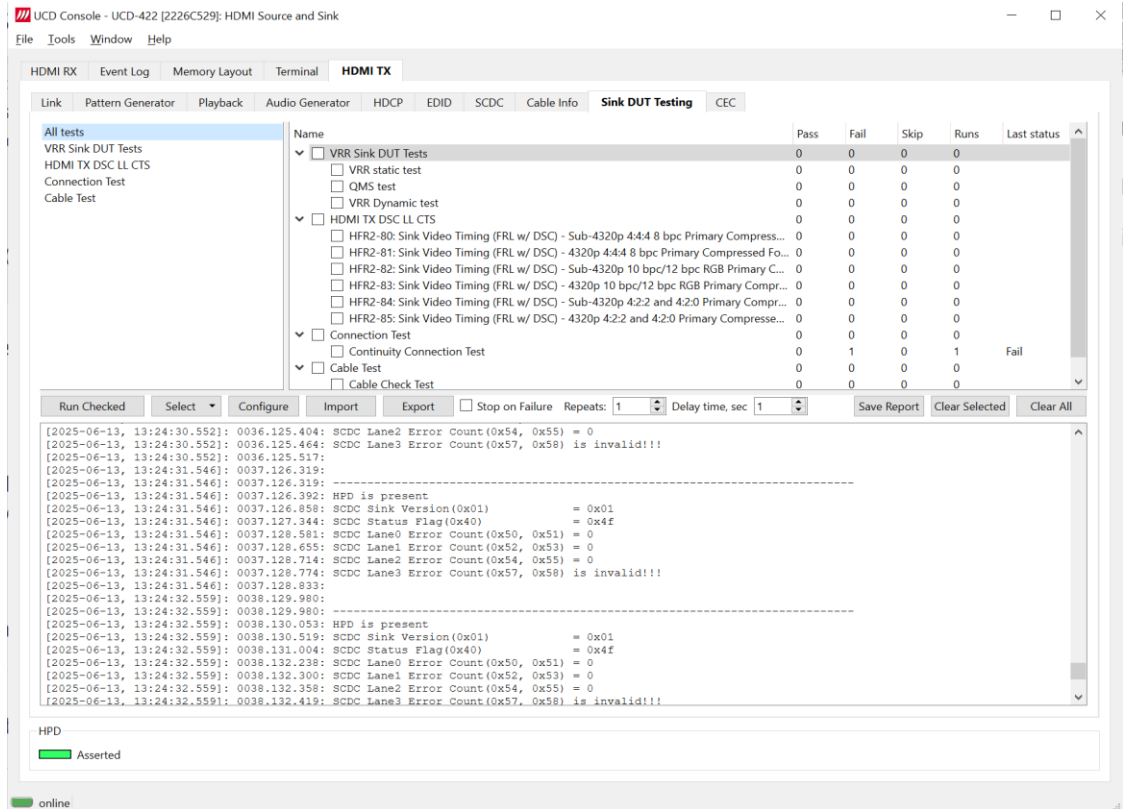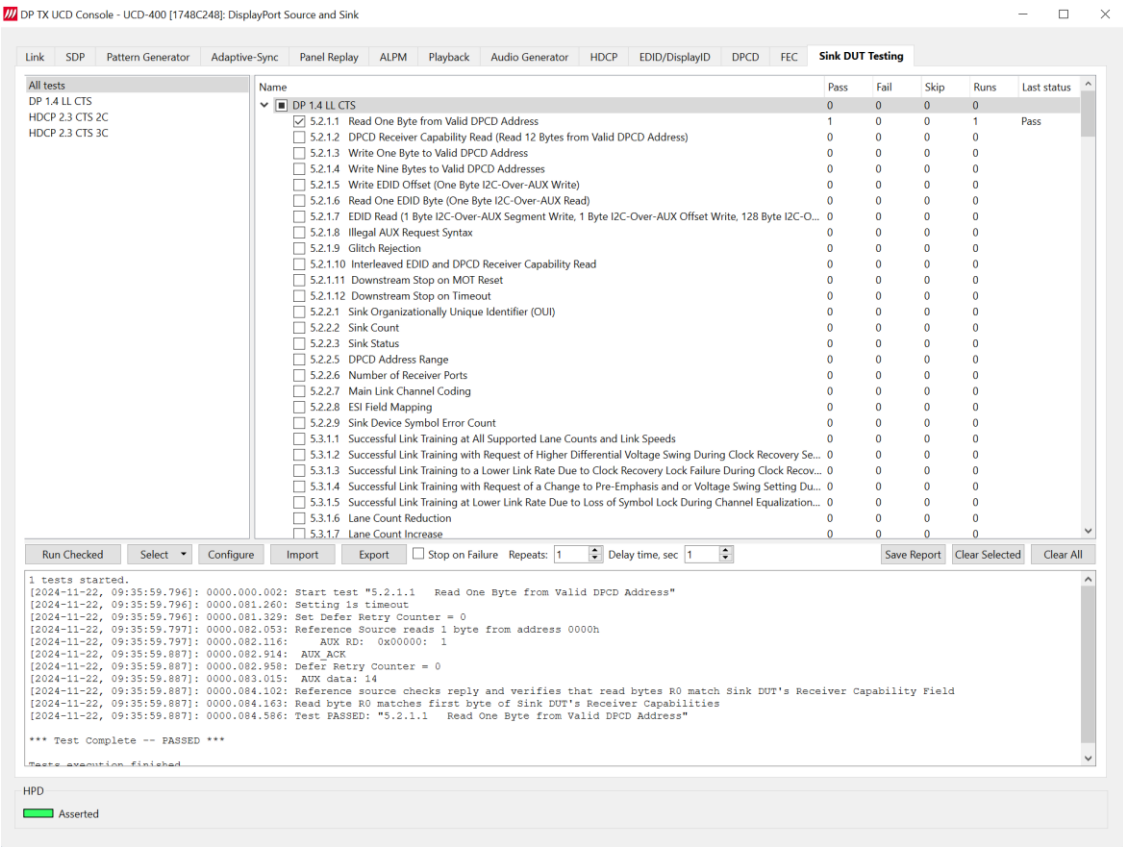

Select the tests for execution by checking checkboxes or by clicking the test name. *All tests* item on the left hand side is really just for viewing all tests available. Select the desired test category (ex. *DP 1.4 LL CTS*) when running tests.

Run/Run Checked: Select to start selected/checked tests. Once tests are running the *Run Checked* button is relabeled *Abort* to stop the test sequence if desired.

<i>Select:</i>	Includes three sets of options: <i>Select All</i> , <i>Clear All</i> , <i>Invert All</i> for changing the tests current selections; <i>Save</i> (checked items), <i>Load</i> (and check relevant items), <i>Remove</i> (named tests list) for handling named templates; <i>Import</i> (check all items contained in file) and <i>Export</i> (save all checked items to file) for loading and saving file-based templates. Do not confuse <i>Import</i> and <i>Export</i> with those below: These are for setting and saving tests to run.
<i>Configure:</i>	Opens a test parameters dialog for the selected test set. Make sure a test category other than <i>All</i> tests is selected. Refer to <i>Test Parameters</i> below for details.
<i>Import:</i>	Load saved test parameter files (*.td or *.json) for into UCD Console. Select <i>Configure</i> to see current parameters. Loading *.td files to UCD Console is currently unreliable.
<i>Export:</i>	Save test parameters for later use or for use in test automation. For saving parameters for later use in UCD Console, either format can be used. For saving parameters for TSI scripting, please use *.td files. For use with Python applications, use *.json files.
<i>Stop on Failure:</i>	Stops execution of tests if one fails.
<i>Repeats:</i>	Number of times to repeat the selected test sequence.
<i>Delay time:</i>	Delay in seconds between individual tests.

On completion of each test the result of the test is displayed in the table columns on the right. For each test the table lists the number *Pass*, *Fail*, *Skips*, *Runs* and *Last Status* (status of last run).

<i>Save Report:</i>	Select to generate a HTML report file. This will also open a tab in the default browser and display the results.
<i>Clear Selected</i>	Clear the test results of the <i>selected</i> (not checked) tests results. A subsequently saved report will not include these test results.
<i>Clear All:</i>	Clear the test log view and the outstanding results.

Test Parameters

Each test set has its dedicated set of test parameters. To open a dialog for defining the parameters click *Configure*.

Description of parameters for each test set can be found within the description of tests in Appendix E of this document.


Saving Test Parameters

Test parameters can be saved in various ways.

- Export parameters in *Sink DUT Testing* tab to a *.td file for later use in UCD Console, to run TSI scripts, or to share test parameters with someone. Presently importing *.td files into UCD Console is unreliable.
- Export parameters in *Sink DUT Testing* tab to a *.json file for later use in UCD Console, to run Python scripts, or to load test parameters into UCD Console.
- Save parameters in *Configure* dialog as Presets later to be used in UCD Console. See description below.

Presets

All *Configure* dialogs selected parameters can be saved and loaded via *Presets* dropdown menu. Select *Save* or *Load* for named internal configuration parameter sets. Select *Remove* to delete a named internal set. Select *Import* and *Export* for loading and saving parameter sets from and to external files. Note that *importing* and *Exporting* *.json files here have a different format than importing those described above.

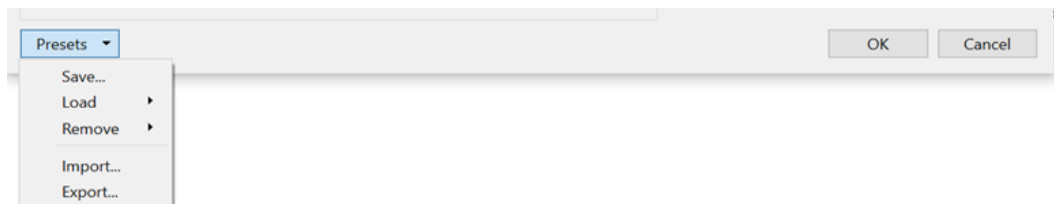

DP Reference Source

Role:

DP Reference Source (DP TX)

Product:


UCD-451

When roles *DP Reference Source* or *DP Alt Mode Reference Source* are in use, the following interface specific tabs are available.

- Status information and control of the downstream link (Link).
- DPCD monitor (DPCD)
- Forward Error Correction (FEC)

Link Tab

Link tab shows the status and control items for the DisplayPort link.

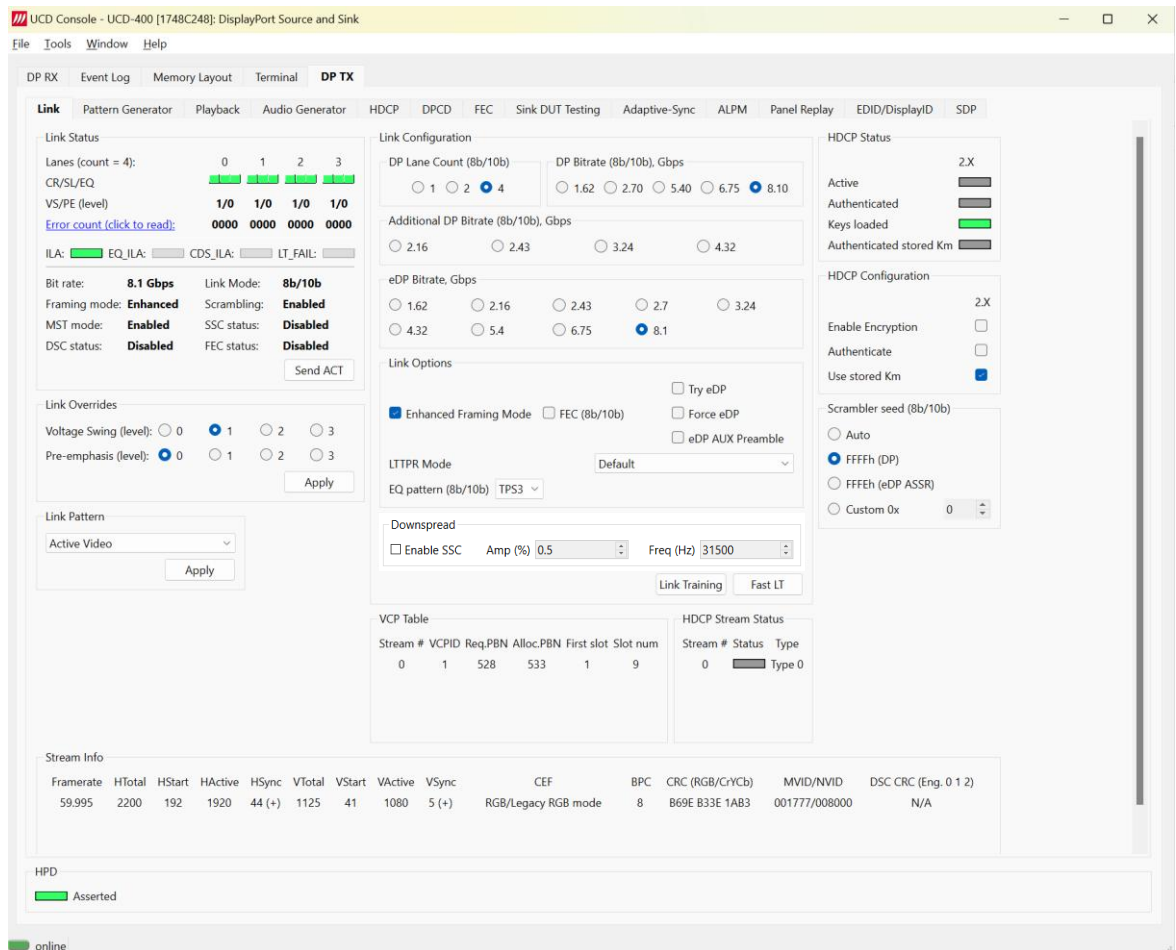

Link Status

Link Status displays the status of the link training and the link parameters negotiated between the connected Sink and UCD Source. It also lists status of other link modes. The data is retrieved from the DPCD status registers of the connected Sink. The status is updated automatically.

Link Status

Lanes (count = 4):	0	1	2	3
CR/SL/EQ				
VS/PE (level)	1/0	1/0	1/0	1/0
Error count (click to read):	-	-	-	-

ILA: EQ_ILA: CDS_ILA: LT_FAIL:

Bit rate:	8.1 Gbps	Link Mode:	8b/10b
Framing mode:	Enhanced	Scrambling:	Enabled
MST mode:	Disabled	SSC status:	Disabled
DSC status:	Disabled	FEC status:	Disabled

Send ACT

Lanes:	Indicates the number of lanes used for DisplayPort or DisplayPort Alt Mode.
CR/SL/EQ:	LED indicators for status of Clock Recovery / Symbol Lock / Channel Equalization
VS/PE (level):	Voltage Swing / Pre-emphasis level
Error count:	Content of DPCD Error Count registers
ILA:	Status LED for Inter-Lane Alignment
Bit rate:	Currently enabled link bit rate
Link mode:	Currently enabled channel coding (8b/10b only)
Framing mode:	Status of Enhanced Framing symbol sequence
Scrambling:	Status of link data scrambling (Enabled or Disabled)
MST mode:	Status of the Multistreaming (MST) mode
SSC status:	Status of down spreading of link frequency (SSC) function
DSC Status:	Status of Display Stream Compression (DSC) function
FEC status:	Status of Forward Error Correction (FEC) function.
Send ACT:	Force sending an Allocation Change Trigger (ACT) sequence over the Main-Link

HPD

HPD

Asserted

Asserted: LED indicates status of Hot Plug Detect (HPD) signal

Link configuration

Set target capabilities for the link training. Click *Link Training* or *Fast LT* to apply.

Link Configuration

DP Lane Count (8b/10b)

☐ 1

☐ 2

☒ 4

DP Bitrate (8b/10b), Gbps

☐ 1.62

☐ 2.70

☐ 5.40

☐ 6.75

☒ 8.10

Additional DP Bitrate (8b/10b), Gbps

☐ 2.16

☐ 2.43

☐ 3.24

☐ 4.32

eDP Bitrate, Gbps

☐ 1.62

☐ 2.16

☐ 2.43

☐ 2.7

☐ 3.24

☐ 4.32

☐ 5.4

☐ 6.75

☒ 8.1

Link Options

☒ Enhanced Framing Mode

☐ FEC (8b/10b)

☐ Try eDP

☐ Force eDP

☐ eDP AUX Preamble

LTTTPR Mode

Default

EQ pattern (8b/10b)

TPS3

Downspread

☐ Enable SSC

Amp (%/10) 0,5

Freq (Hz) 31500

Link Training

Fast LT

<i>Number of Lanes</i>	Lane count used when 8b/10b link coding is selected in LT
<i>Bitrate, Gbps</i>	Link rate used when 8b/10b link coding is selected in LT
<i>Additional DP Bitrate (8b/10b), Gbps</i>	Additional bit rates available.
<i>eDP Bitrate, Gbps</i>	Bitrates available for eDP.
<i>Enhanced Framing Mode</i>	Enable Enhanced Framing Mode.
<i>FEC (8/10b)</i>	Enable Forward Error Correction feature (only in 8b/10b coding).
<i>Try eDP</i>	Try to link with eDP.
<i>Force eDP</i>	Force eDP linking.
<i>eDP AUX Preamble</i>	Use <i>eDP AUX Preamble</i> protocol when linking.
<i>LTTTPR Mode</i>	Select LTTTPR mode; <i>Default, Ignore, Transparent, Non-Transparent</i> .
<i>EQ pattern (8b/10b)</i>	Pattern (8b/10b) to be used for equalization: auto, TPS2, TPS3 or TPS4.
<i>Enable SSC</i>	Enable Downspread of link frequency (SSC).
<i>Amp (‰)</i>	SSC Spreading Amplitude (0.1% to 2.5% in 0.1% steps).
<i>Freq (Hz)</i>	SSC Modulation frequency (30 to 33 kHz).

Link Overrides

Override Voltage Swing and Pre-emphasis levels selected during link training. Click **Apply** to validate changes. Overrides are applied immediately to DPTX transceiver when 'Apply' is clicked. Please note, that It affects main link signal amplitude and pulse shape only. No AUX exchange takes place. The change can be checked only with a scope. Overrides are removed at the beginning of the next link training.


Link Overrides

Voltage Swing (level): ☐ 0 ☒ 1 ☐ 2 ☐ 3

Pre-emphasis (level): ☐ 0 ☒ 1 ☐ 2 ☐ 3

Apply

Link Pattern

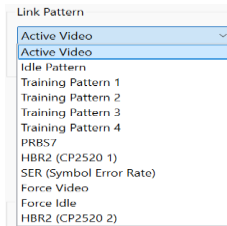

Select between Active video and audio, Idle pattern, or special bit patterns.

<i>Active Video</i>	Transmit Video Pattern, Audio and Metadata.
<i>Idle Pattern</i>	Link is active but no stream data is being transmitted.
<i>Training Pattern 1</i>	Send Link Training Pattern Sequence 1 (TPS1 same as D10.2).
<i>Training Pattern 2</i>	Send Link Training Pattern Sequence 2 (TPS2).
<i>Training Pattern 3</i>	Send Link Training Pattern Sequence 3 (TPS3).
<i>Training Pattern 4</i>	Send Link Training Pattern Sequence 4 (TPS4 same as CP2520 3).
<i>PRBS7</i>	Send PRBS7 Link Quality Test Pattern.
<i>HBR2 (CP2520 1)</i>	Send HBR2 Compliance pattern <i>CP2520 1</i> .
<i>SER (Symbol Error Rate)</i>	Send Symbol Error Rate Measurement pattern
<i>Force Video</i>	Character error messages from sink will not interrupt video transmission.
<i>Force Idle</i>	Link Training and Active Video will not be initiated even after a re-plug.
<i>HBR2 (CP2520 2)</i>	Send HBR2 Compliance pattern <i>CP2520 2</i> .

Note:

Please note that except for *Active Video* and *Idle Pattern*, Link Training will NOT be initiated on such events as cable re-plug, Long HPD pulse and IRQ_HPDP pulse due to link loss.

After using the special bit patterns, in order to return to the default operation mode, please select *Active Video* and click *Apply*.

Stream Info

Stream Info is achieved from the Main-Stream Attributes (MSA) of the stream.

Stream Info													
Framerate	HTotal	HStart	HActive	HSync	VTotat	VStart	VActive	VSynC	CEF	BPC	CRC (RGB/CrYCb)	MVID/NVID	DSC CRC (Eng. 0 1 2)
59.985	2200	192	1920	44 (+)	1125	41	1080	5 (+)	RGB/Legacy RGB mode	8	B69E B33E 1AB3	001776/008000	N/A
59.995	2200	192	1920	44 (+)	1125	41	1080	5 (+)	RGB/Legacy RGB mode	8	B69E B33E 1AB3	001777/008000	N/A

The content of *Stream Info* table can be copied by right-clicking on the table and selecting **Copy**.

<i>Framerate</i>	Vertical refresh rate
<i>HTotal</i>	Horizontal total of transmitted main video stream, measured in pixel count.
<i>HStart</i>	Horizontal active start from leading edge of HSync, measured in pixel count.
<i>HActive</i>	Horizontal active, number of active pixels in video line
<i>HSync</i>	HSync width, measured in pixel count. (+)/(-) positive / negative sync.
<i>VTotat</i>	Vertical total of transmitted main video stream, measured in line count.
<i>VStart</i>	Vertical active start from leading edge of VSync, measured in line count.
<i>VActive</i>	Vertical active, number of active lines in video frame
<i>VSync</i>	VSync width, measured in line count. (+)/(-) positive v.s. negative sync.

<i>CEF</i>	Used color mode: Color format + subsampling / colorimetry
<i>BPC</i>	Color depth in bits per color (BPC)
<i>CRC (RGB/CrYCb)</i>	16-bit Cyclic redundancy check (CRC) value per color component calculated from active pixels. Value order in YCbCr color format: Cr, Y, Cb.
<i>MVID/NVID</i>	Mvid and Nvid video time stamp values
<i>DSC CRC</i>	16-bit Cyclic redundancy check (CRC) calculated from compressed pixel stream. Value order Engine 0, 1, 2.

VCP Table

VCP Table					
Stream #	VCPID	Req.PBN	Alloc.PBN	First slot	Slot num
0	1	532	540	1	9
1	2	532	540	10	9
2	3	532	540	19	9
3	4	532	540	28	9

VCP table shows allocation of Virtual Channel Payload for active virtual MST channels.

The content of *VCP Table* can be copied by right-clicking on the table and selecting **Copy**.

<i>Stream #:</i>	Stream number where the virtual channel is directed.
<i>VCPID:</i>	Stream identification number of the virtual channel.
<i>Req.PBN:</i>	Requested PBN (payload bandwidth) value for the virtual channel
<i>Alloc.PBN:</i>	PBN value allocated for the virtual channel
<i>First slot:</i>	Time slot where the first VC Payload for the virtual channel is stored
<i>Slot num:</i>	Number of VC Payload slots reserved for the virtual channel.

Scrambler Seed

Scrambler seed (8b/10b)

☐ Auto
☒ FFFFh (DP)
☐ FFFFh (eDP ASSR)
☐ Custom 0x

Selection of the value to which the Linear Feedback Shift Register (LFSR) is reset during scrambler reset. Used only when 8b/10b link coding is enabled.

HDCP Status & Configuration

HDCP Status

2.X

Active ☐
 Authenticated ☐
 Keys loaded ☒
 Authenticated stored Km ☒

HDCP Configuration

2.X

Enable Encryption ☐
 Authenticate ☐
 Use stored Km ☒

Copy of HDCP status and controls on HDCP tab.

HDCP Stream Status

Shows HDCP stream status for each stream.

HDCP Stream Status		
Stream #	Status	Type
0		Type 0
1		Type 0
2		Type 0
3		Type 0

SDP Configuration

SDP Configuration

☐ Split SDP


Enable SDP Splitting.

Note

Selecting this configuration option does not guarantee that SDP splitting will occur for a given configuration of the Video and Audio pattern generators. SDP splitting will take place when it makes sense and required for SDP splitting conditions are met.

DPCD Tab

DPCD tab is a tool for monitoring and editing the DPCD registers of the connected DisplayPort or DisplayPort Alt Mode Sink.

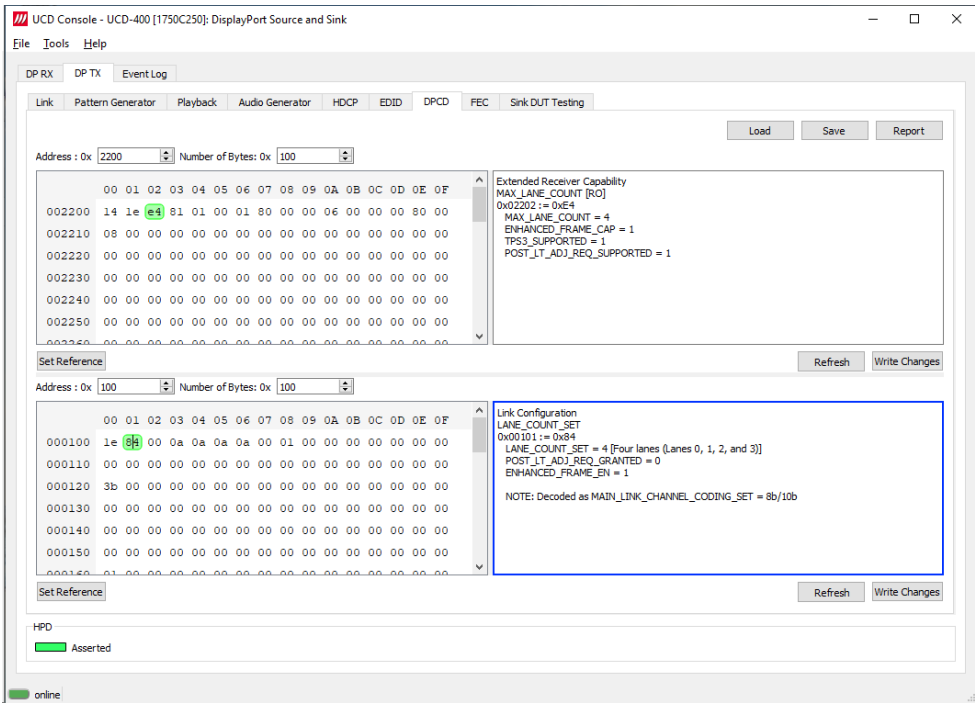

The *DPCD Decoder* panels on the right show the interpretation of the DPCD byte selected on the monitoring windows. The selected byte is shown with a green background.

- Save:

Select DPCD content to the PC (please see below).
- Load:

Retrieve previously saved DPCD data (please see below).
- Report:

Save parsed content of selected DPCD register ranges as HTML file
- Refresh:

Re-read the data from the DPCD registers to the window in question
- Write Changes:

To program the data into the DPCD registers of the connected Sink
- Set Reference:

Store currently shown data as a reference for comparison

When the data is *Refreshed* from the DPCD registers the changed bytes will be highlighted with **blue** color. The fields edited by the user will be highlighted with **red** color.


Saving and Loading DPCD Content

DPCD data in the selected address areas can be saved as a file in your PC. There are three alternative formats listed below. Please select the intended format when saving:

- Binary *DPCD Data File* format (*.DPD). This is Unigraf proprietary format. You can also load the DPCD content stored in this format.
- *Comma Separated Value* format (.CSV)
- *HEX Dump* (*.HEX) in a human readable text format.

FEC Tab

Forward Error Correction (FEC) can be enabled if connected sink supports it. For debug purposes, error injection to Main-link is possible. There is an error type for each standard sink DPCD error counter.

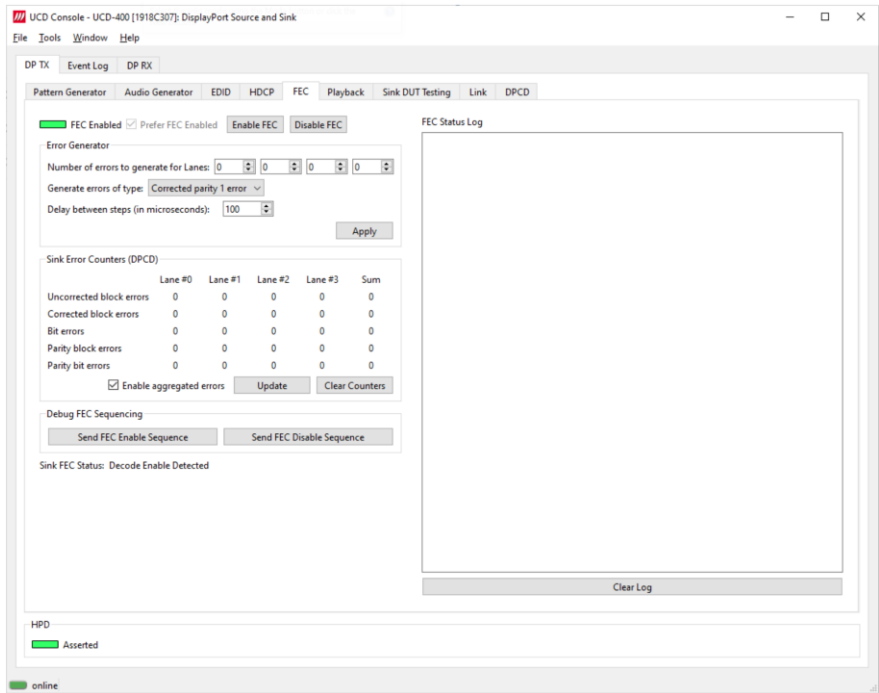

<i>Enable FEC</i>	UCD will verify if connected sink supports FEC and begins the handshake for enabling FEC.
<i>Disable FEC</i>	UCD will start the FEC disable handshake.
<i>Prefer FEC Enabled</i>	If selected, and the connected sink supports FEC, UCD will start the FEC Enable Sequence after a successful connection.

Error Generator

Selections will set how many errors will be inserted into one FEC block and to which link symbols. There are five options:


Uncorrected block	3 symbol errors with 3 error bits together
Corrected block	2 symbol errors with 2 error bits together
Corrected parity	2 parity byte errors with 2 error bits together
Corrected block 1 error	1 symbol error with 1 error bit together
Corrected parity 1 error	1 parity byte error with 1 error bit together

Note: FEC must be enabled and running before errors can be added.
Link training will reset sink FEC error counters.

Each lane can have its individual error amount. When only one lane is enabled, errors can be injected to even and odd decoders by using **lane #0** and **lane #1** counters.

<i>Apply</i>	Start error injection
<i>Update</i>	Read sink DPCD FEC error counter registers
<i>Clear counters</i>	Clear sink DPCD FEC error counter registers
<i>Send FEC Enable Sequence</i>	UCD-4XX will start adding FEC Enable Sequence in its main link data.
<i>Send FEC Disable Sequence</i>	UCD-4XX will start adding FEC Disable Sequence in its main link data.

ALPM Tab

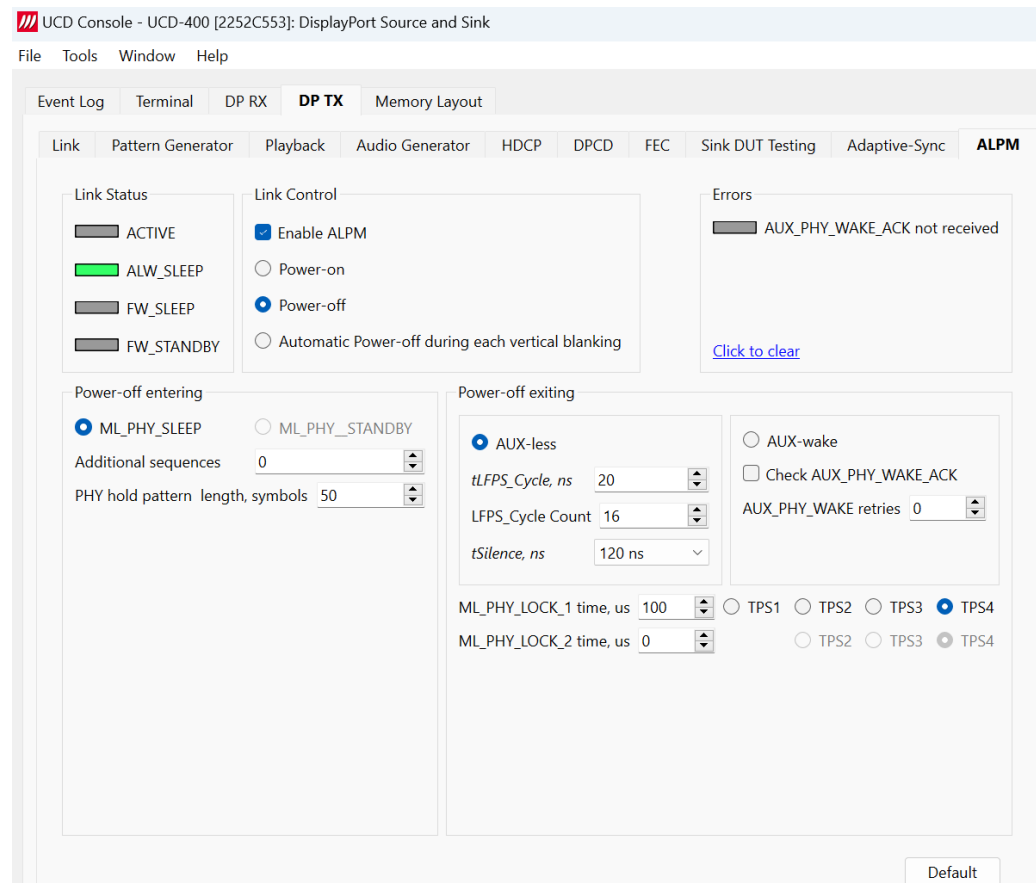

Link Status panel shows current ALPM status.

Link Control panel is for enabling ALPM and for setting ALPM state.

Power-off entering offers two modes via radio buttons *ML_PHY_SLEEP* and *ML_PHY_STANDBY*. *Additional sequences* and *PHY hold pattern length, symbols* can be set via the combo boxes.

Power-off exiting offers two methods via the *AUX-less* and *AUX_wake* radio buttons. Parameters for each can be set via the widgets in the respective groups.

If the *AUX_wake* method is selected and *AUX_PHY_WAKE_ACK* is checked and the sink does not respond with *AUX_PHY_WAKE_ACK*, the *Errors* group *AUX_PHY_WAKE_ACK not received* indicator will be lit.

ML_PHY_LOCK_1 and *ML_PHY_LOCK_2* times may be set along with their patterns: TPS1 – TPS4. *ML_PHY_LOCK_2* is available if TPS1 is selected for *ML_PHY_LOCK_1*.

HDMI Reference Source


Role:	Product:
HDMI Reference Source (HDMI TX)	UCD-452

When roles *HDMI Reference Source* is in use, the following interface specific tabs are available.

- Status information and control of the downstream link (Link)
- SCDC monitor (SCDC)

Link Tab

Link tab shows the status and control items for the HDMI link.

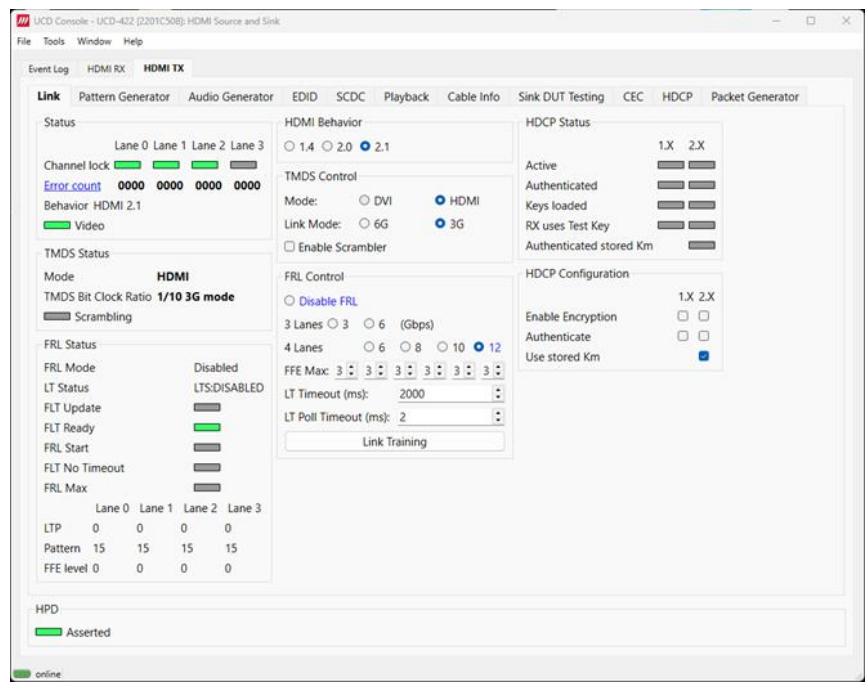

HDMI Behavior

Selection of the HDMI version to be used (HDMI 1.4 / HDMI 2.0 / HDMI 2.1).

Status

<i>Channel lock:</i>	Status of Channel Lock in the four lanes.
<i>Error count:</i>	Contents of the SCDC Error counter registers of the connected Sink.
<i>Behavior:</i>	Assigned HDMI mode.
<i>Video</i>	Video signal status.

TMDS Status (only in TMDS mode)

TMDS Status

Mode

HDMI

TMDS Bit Clock Ratio

1/10 3G mode

Scrambling

TMDS Control

Mode:

DVI

HDMI

Link Mode:

6G

3G

Enable Scrambler

Mode:	Status of the HDMI/TMDS mode (HDMI/DVI)
TMDS Bit Clock Ratio:	Status of TMDS_Bit_Clock_Ratio bit in SCDC – TMDS Configuration (1/10 or 1/40)
Scrambling:	Status of TMDS_Scrambler_Status bit in SCDC – TMDS Scrambler Status (1=LED on; 0=LED off)

TMDS Control (only in TMDS mode)

Mode:	Selection of the HDMI/TMDS mode (HDMI/DVI)
Link Mode:	Selection of TMDS Bit Period / TMDS Clock Period ratio (1/10 or 1/40) (3G / 6G)
Enable Scrambler:	Control of Scrambling_Enable bit

FRL Control

FRL Control

Disable FRL

3 Lanes

3

6

(Gbps)

4 Lanes

6

8

10

12

FFE Max:

0

0

0

0

0

0

LT Timeout (ms):

200

LT Poll Timeout (ms):


2

Link Training

Disable FRL:	Disable FRL mode
Capability Radio Buttons:	Selection of the link mode used for FRL link training.
FFE Max:	Set the maximum FFE level (0 to 4) supported for each FRL rate
LT Timeout:	The time used for FLT Timer (default = 200 ms)
LT Poll Timeout:	Poll interval for FLT_update flag (default = 2 ms)

Please click **Link Training** to apply

FRL Status

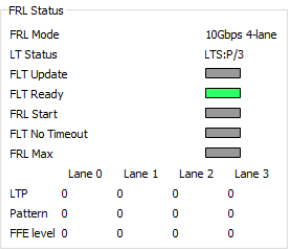


<i>FRL Mode:</i>	FRL Mode used by UCD-4XX HDMI source
<i>LT Status:</i>	FRL link training status of UCD-4XX HDMI source
<i>FLT Update:</i>	Status of FLT_update flag in SCDC Update Flags register of the connected HDMI sink.
<i>FLT Ready:</i>	Status of FLT_ready flag in SCDC Status Flags register of the connected HDMI sink.
<i>FRL Start:</i>	Status of FLT_start flag in SCDC Update Flags register of the connected HDMI sink.
<i>FLT No Timeout:</i>	Status of FLT_no_timeout flag in SCDC Source Test Configuration register of the connected HDMI sink.
<i>FRL Max:</i>	Status of FRL_Max flag in SCDC Source Test Configuration register of the connected HDMI sink.

Lane Status Matrix

<i>LTP:</i>	Status of Lnx_LTP_req (x = 0 to 3) fields in SCDC Status Flags register of the connected HDMI sink
<i>Pattern:</i>	Link Training Pattern used (0 to 8)
<i>FFE Level:</i>	FFE level used (0 to 3)

HDCP Status

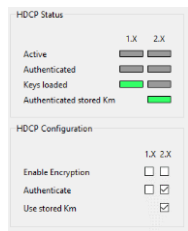

Copy of the status from HDCP Tab. Please refer to chapter *HDCP Tab* later in this document for detailed description.

HDCP Configuration

Enable and disable HDCP 1.4 or HDCP 2.3 capability of UCD-452. Duplicates of the controls found in HDCP tab.


HPD (Bottom panel)

The status LED indicates the state of the HPD signal Asserted (logical “high”) or De-asserted (logical “low”).

SCDC Monitor

SCDC monitor presents content of HDMI Status and Control Data Channel (SCDC) structured by its address range.

The *SCDC Monitor* panel on the right hand side shows the interpretation of the SCDC byte selected

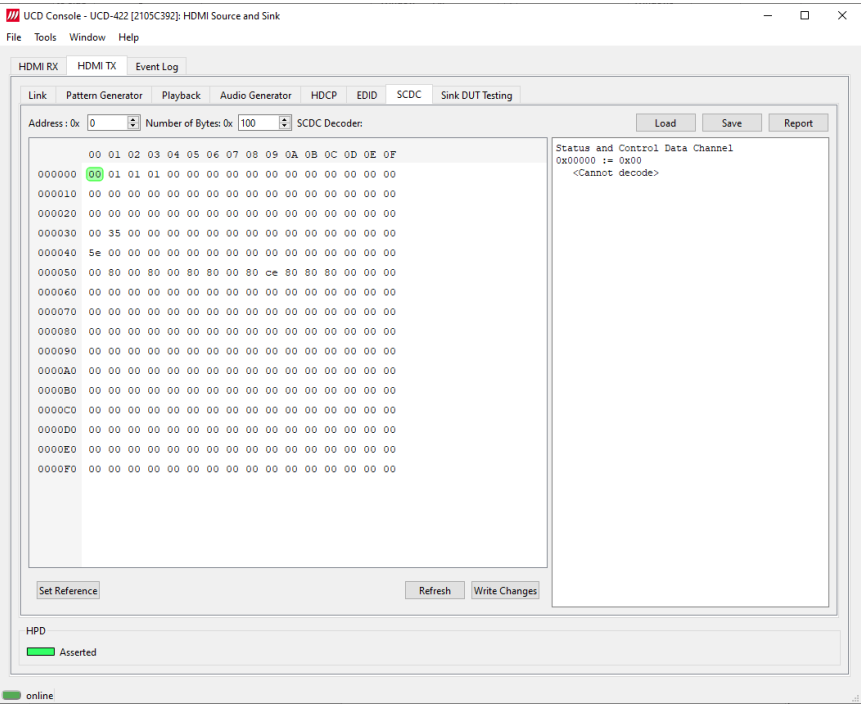

on the monitoring windows. The selected byte is shown with a green outline.

<i>Save:</i>	Select SCDC content to the PC (please see below).
<i>Load:</i>	Retrieve previously saved SCDC data (please see below).
<i>Report:</i>	Save parsed content of selected SCDC register ranges as HTML file
<i>Refresh:</i>	Re-read the data from the SCDC registers to the window in question
<i>Write Changes:</i>	To program the data into the SCDC registers of the connected Sink
<i>Set Reference:</i>	Store currently shown data as a reference for comparison

When the data is *Refreshed* from the DPCD registers the changed bytes will be highlighted with **blue** color. The fields edited by the user will be highlighted with **red** color.


Saving and Loading SCDC Content

SCDC data in the selected address areas can be saved as a file in your PC. There are three alternative formats listed below. Please select the intended format when saving:

- Binary *SCDC Data File* format (*.DPD). This is Unigraf proprietary format. You can also load the DPCD content stored in this format.
- *Comma Separated Value* format (.CSV)
- *HEX Dump* (*.HEX) in a human readable text format.

Cable Info Tab

The *Cable Info* tab displays cable specifications.

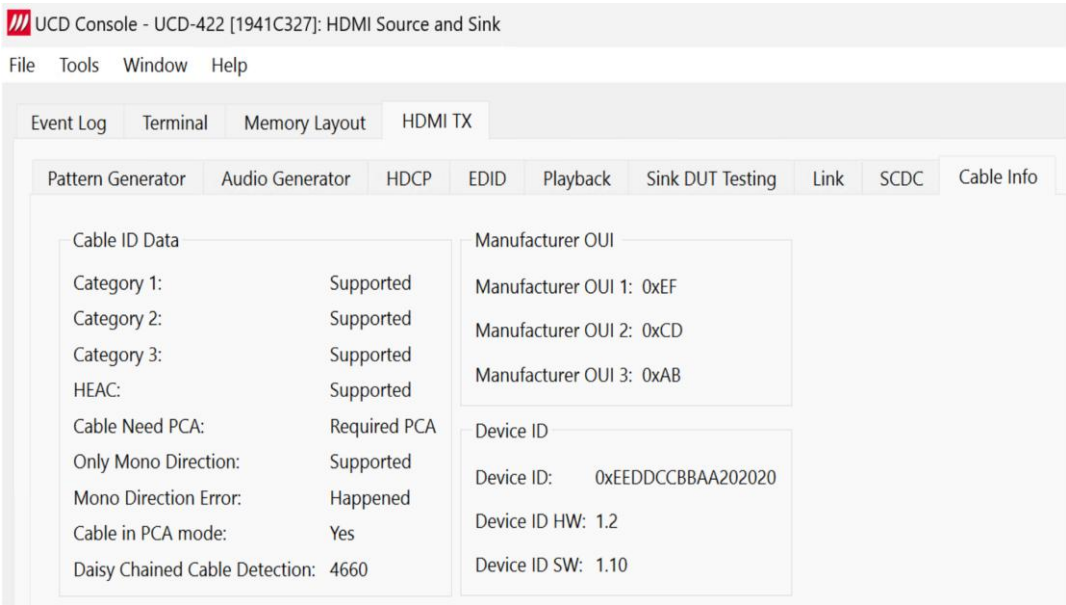


CEC Tab

Source *CEC Tab* functions in exactly the same manner as for Sink CEC Tab [CEC Tab](#).

Packet generator enables configuring and generating Custom SDP independently from the Audio and Video Pattern Generators.

Note: In Packet Generator the packet generation time is limited. After limitation generator must be restarted manually. For UCD-452 the limit is approximately 8 hours.


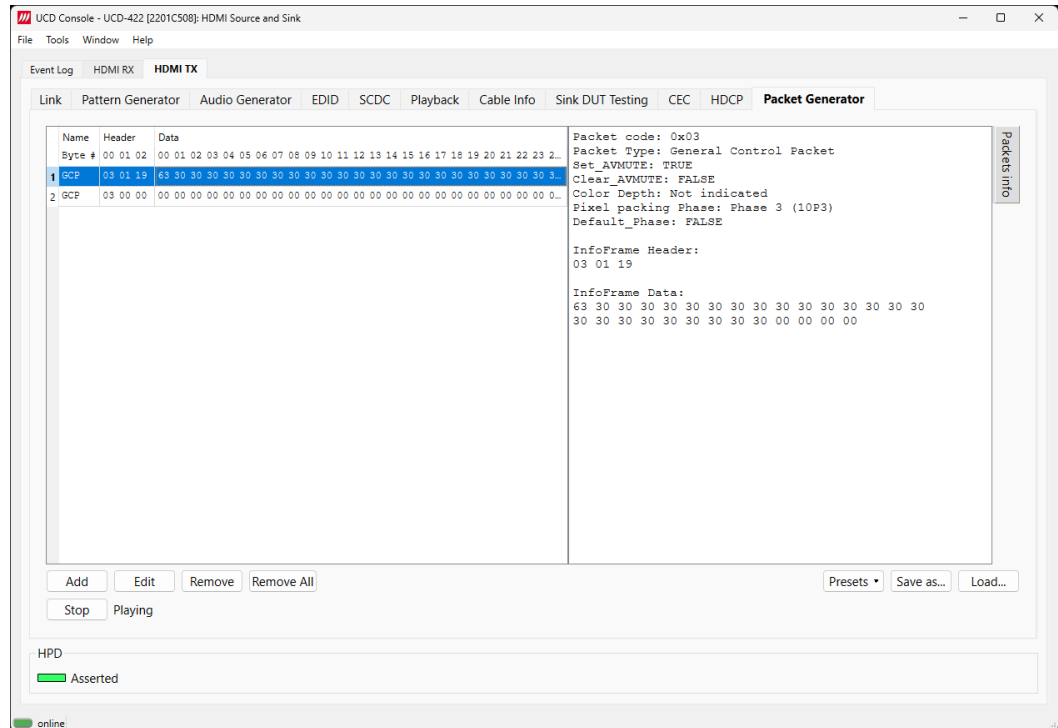


<i>Add:</i>	Add new packets. Opens packet editor.
<i>Edit:</i>	Edit existing packets
<i>Remove:</i>	Remove selected packet
<i>Remove All:</i>	Remove all packets
<i>Start:</i>	Start transferring the packets
<i>Presets:</i>	Save, Load, Remove, Import or Export packets
<i>Save as...</i>	Save packet
<i>Load:</i>	Load packets

For detailed information on the packet editor, please refer to [Packet Editor](#) chapter in this manual.

5. EVENT LOG

Event Log dialog is divided into two panels: the left panel lists all transactions, and the right panel shows the parsed transaction data for the line selected in the list on the left.

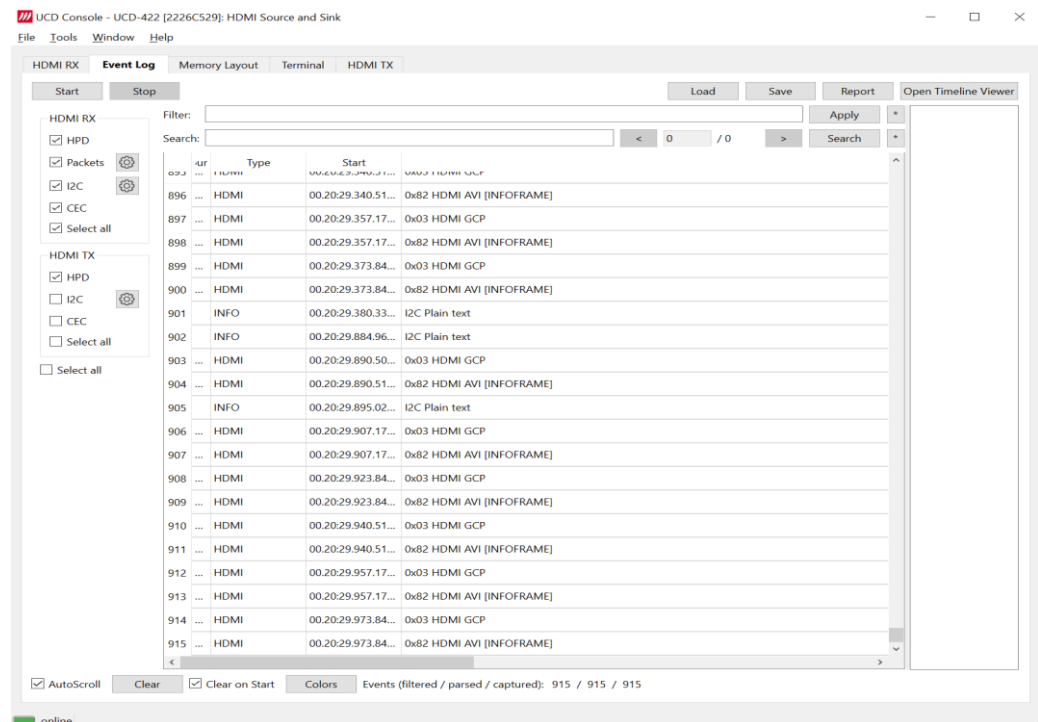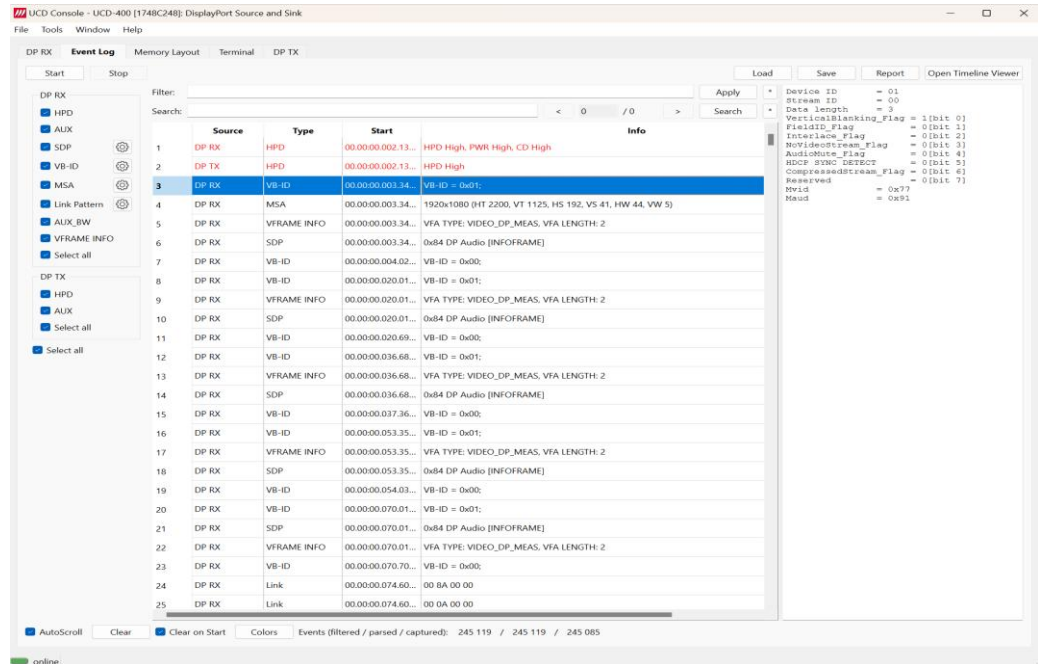

Role	Logged Events
DP Sink (UCD-451)	HPD, AUX, SDP, VB-ID, MSA, Link Pattern, AUX_BW, VFRAME INFO
HDMI Sink (UCD-452)	HPD, Packets, I2C, CEC
DP Source (UCD-451)	HPD, AUX
HDMI Source (UCD-452)	HPD, I2C, CEC

<i>Start</i>	Starts event logging and stop it by clicking <i>Stop</i> .
<i>Save</i>	Save transactions as Event Log data.
<i>Loa</i>	Load Event Log data.
<i>Repor</i>	Store event logs as reports in HTML format.
Open Timeline Viewer	Open Event timeline Viewer to inspect the captured data. For detailed instructions refer to chapters 6 and 7 of this manual.
<i>AutoScroll</i>	When selected, transaction list is scrolled vertically. The latest transaction is shown as the last item of the list. When not selected, the items shown before clicking <i>Start</i> will be shown.
<i>Events</i>	Number of events detected.
<i>Colors</i>	Open configure colors dialog.
<i>Clear/Clear on Start</i>	Click to clear transaction list. When <i>Clear on Start</i> is selected, the list is cleared when clicking <i>Start</i> .

Logged Events

HPD


Status and status changes of Hot Plug Detect (HPD) signal, power detection status and cable connection status.

AUX

DP Log DP AUX Channel transactions and Sideband Messaging.


SDP

Log DP Secondary-data Packets. Click the  button to open the *Event Filter Dialog*. The dialog enables filtering of SDP packets. In the dialog, the reference to Packet Type Value is indicated in square brackets “[]”.

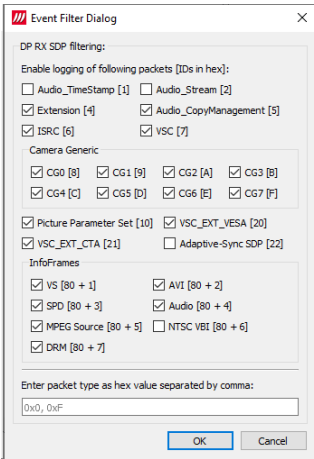


VB-ID

Log Vertical Blanking ID packets sent in DP stream. Click the  button to open the *Event Filter Dialog*. The dialog enables definition of which events will be logged.

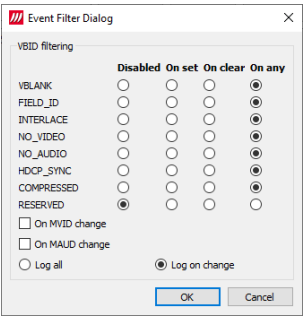

MSA

Log Main Stream Attributes sent in DP stream. Click the  button to open the *Event Filter Dialog*. The dialog enables logging of all MSA:s or just changes to selected parameters.

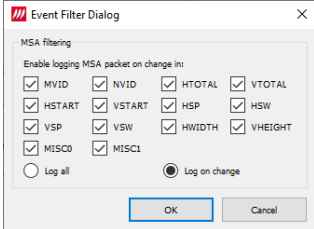


Link Pattern

Click the  button to open the *Event Filter Dialog*.

Log link patterns. Event filter dialog sets the type of link patterns that will be captured.

Custom Pattern (80 bit) is a sequence that either splits into 10 bytes or 8b/10b encoded symbols. For 10b symbols, either K/D codes or hex values must be provided. For bytes, hex values must be provided.

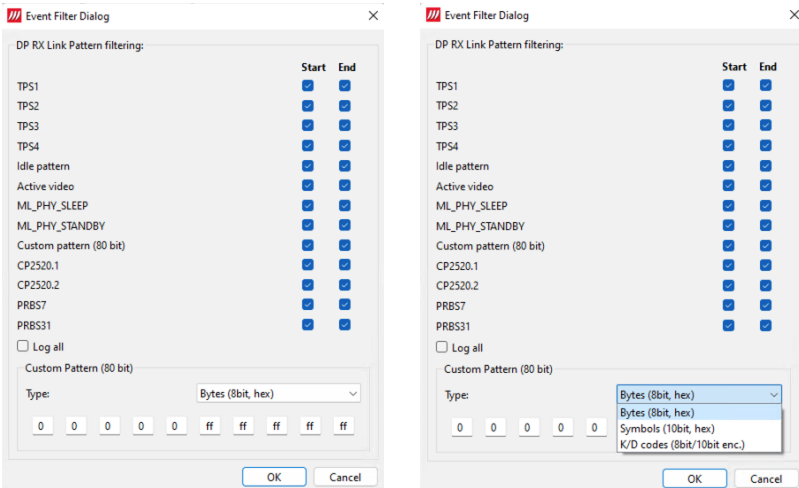

AUX_BW


Log AUX_Bitwise transactions as a series of Manchester II codes.

VFRAME INFO

Dimensions of the captured frame measured by the Sink.


Packets

Log metadata sent by Source device in HDMI stream.

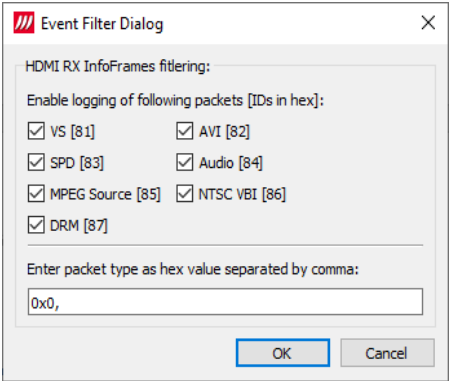

I2C

Log data sent over I2C communication lines of HDMI interface. Click the  button to open the *Event Filter Dialog* (either HDMI RX or HDMI TX dialogs).

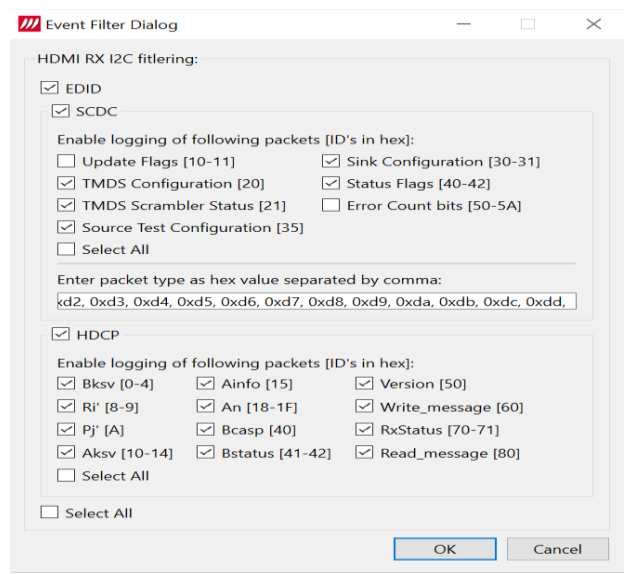


PD

Log USB-C PD communication messages.

CEC

Log HDMI CEC communication messages.

LSE

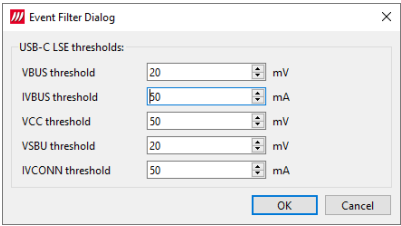


Low Speed Electrical logger captures the Voltage and Current on the low-speed lanes of the USB-C connector including CC, VBUS, VCONN, and SBU.

Event Filter Dialog sets the threshold values for capturing the changes. Parsed transaction data shows the captured data with indication of the changed values.

Event Transaction List

Transaction data in Transaction List is ordered in columns. Each column provides additional information about the data line, facilitating its viewing and interpretation.

You can search events by typing its name in the Search bar and pressing enter or selecting the *Search* button. Pressing F3 (Ctrl+G on macos) takes you to the next found and Shift+F3 (Shift+Ctrl+G on macOS) takes you to the previous found.

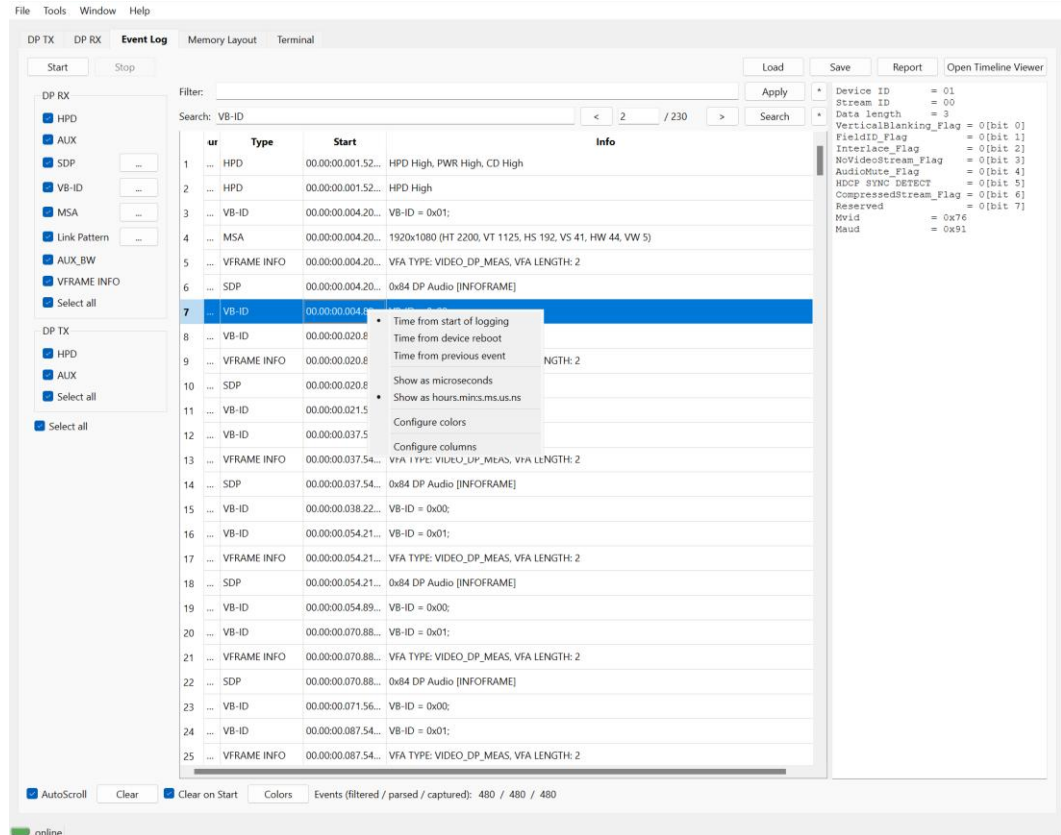

Source: The communication port: DP RX, DP TX, HDMI RX, HDMI TX or HDCP 1.X, HDCP 2.3

Type: The logged item:
HPD, AUX, SDP, VB-ID, MSA, Link Pattern, AUX_BW, VFRAME INFO (DP or DP Alt Mode)
HPD, Packets, I2C, CEC (HDMI)

Start: Each line is identified by its timestamp, marking the instant when an event or error was detected, or when a data transaction got started.
The timestamp can be displayed as a time delay from the start of the acquisition (absolute) or from the previous line (relative). The timestamp can be displayed in milliseconds or in minutes, seconds, and microseconds.


Info: This column provides a short description of the message content

When hovering the mouse over the transaction list, a mouse-over window will open. It provides a brief list of the content in the transaction under the mouse.

Customizing Transaction List

User Can change what data is shown in the transaction list by adding and removing columns or limiting the transaction types in the list. User can also color highlight various types of transactions for better readability.

Right-click on the list to open the menu.

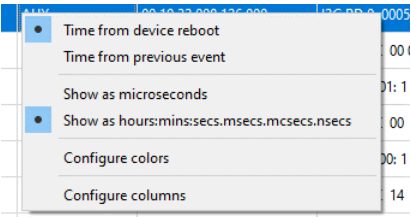

Configure Start

The time indicated in column *Start* can be either:


- Time from device reboot
- Time from previous event

The time can be expressed either:

- In microseconds (1/1 000 000 Second)
- Hours : minutes : seconds : milliseconds : nanoseconds

Configure Colors


Configure colors dialog allows the user to highlight various types of transactions in the list by changing character color and background color of the transaction line.

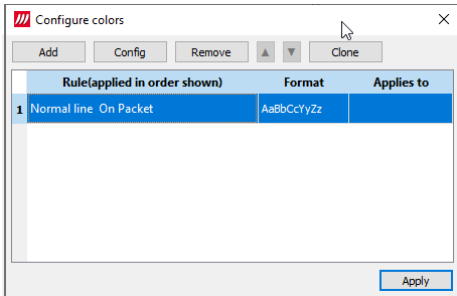

<i>Add:</i>	Add a new color highlight rule
<i>Config:</i>	Modify the selected rule
<i>Remove:</i>	Delete the selected rule
<i>Clone:</i>	Duplicate the selected rule
▲ ▼:	Change order where rules are applied. The rules are applied from the bottom to the top of the list.

Adding Rules


The color highlight rules are set by transaction type. The content of *Add rules* dialog is dependent on the type of item selected.

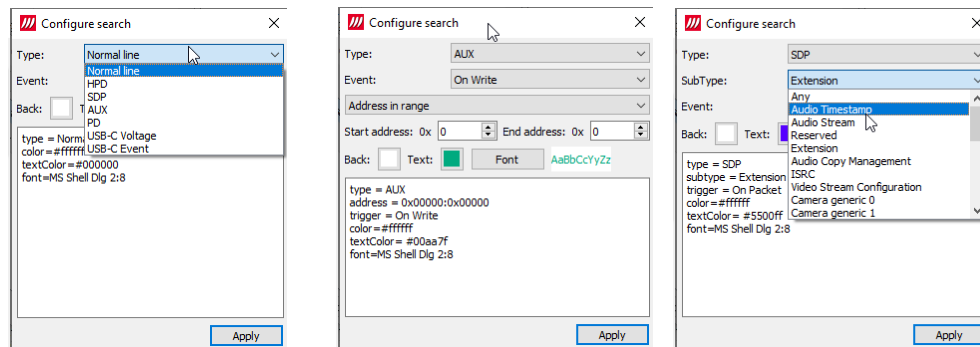

Configure Columns


In the dialog there are two columns: *Available* and *Active*. An item from Available list can be included in Active columns by selecting it and clicking on the right arrow [>] in the middle of the two columns.

The order of Active items can be changed by selecting an item and moving its position in the list with up ▲ and down ▼ arrows.

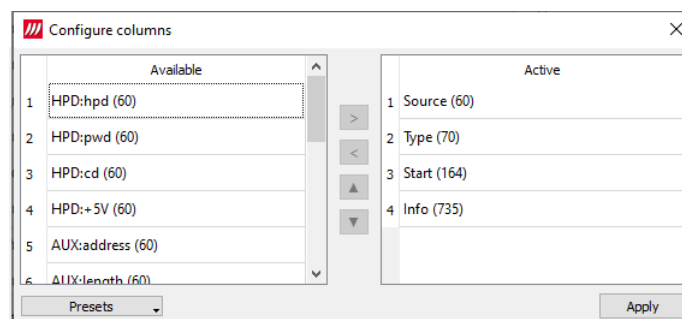

Type Filter

Type filter dialog lists the types of transactions found in the list and allows the user to select which

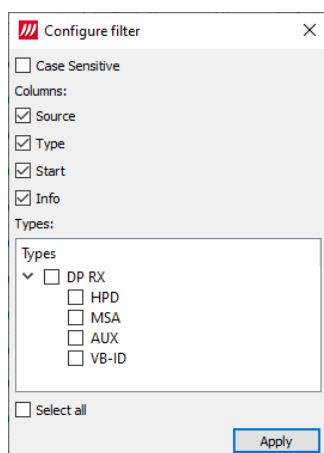

transaction lines are currently shown.

Quick Filter

By entering a DPCD address in the Quick Filter field on top of the transaction line, the user can limit the list to show only the reads or writes to this DPCD address.

Event Details

HPD

HPD transactions include the following statuses:

<i>Hot-Plug-Detect Level:</i>	Status of HPD signal: HIGH (Asserted), LOW (De-asserted)
<i>PWD Level:</i>	Status of source device detection: High (DP Tx detected), LOW (DP Tx not detected)
<i>Cable Detect Level:</i>	Status of cable detection HIGH (Cable connection detected) LOW (Cable connection not detected)

```
Device ID           = 01 [DP RX]
Hot-Plug-Detect Level = HIGH
PWD Level           = HIGH (DP Tx is connected to Rx and has power applied to AUX pull-up resistor)
Cable Detect Level   = HIGH
```

AUX (UCD-451)

Transaction list includes the following DP AUX Channel transactions. Parsed transactions panel provides details for each transaction.

<i>RD:</i>	Native AUX Request Transaction for read
<i>WR:</i>	Native AUX Request Transaction for write
<i>I2C RD:</i>	I2C-over-AUX Request Transaction for read
<i>I2C WR:</i>	I2C-over-AUX Request Transaction for write
<i>AUX_ACK:</i>	AUX Reply Transaction (Request accepted)
<i>AUX_NACK:</i>	AUX Reply Transaction (Request not accepted)
<i>AUX_DEFER:</i>	AUX Reply Transaction (Delayed, new request needed)
<i>Sideband REQ:</i>	Sideband down request message (DOWN_REQ_MSG)
<i>Sideband REP:</i>	Sideband down reply message (DOWN_REP_MSG)
<i>EDID Trace:</i>	Accumulated EDID content from I2C or sideband down messages
<i>DisplayID:</i>	Accumulated DisplayID content from I2C or sideband down messages
<i>HDCP Trace 1.X or HDCP Trace 2.3:</i>	HDCP Transmitter and HDCP Receiver communicate DPCD values over AUX Channel. Transactions are listed as DPCD Address Range Traces where HDCP Port name is indicated.

Native AUX Transaction Example

```

Direction          = Source to Sink
Native AUX Request  = Read
Length              = 6
Address             = 0x00200

```

```

Link/Sink Device Status
SINK_COUNT [RO]
0x00200

```

```

Link/Sink Device Status
DEVICE_SERVICE_IRQ_VECTOR
0x00201

```

```

Link/Sink Device Status
LANE0_1_STATUS [RO]
0x00202

```

```

Link/Sink Device Status
LANE2_3_STATUS [RO]
0x00203

```

```

Link/Sink Device Status
LANE_ALIGN_STATUS_UPDATED [RO]
0x00204

```

```

Link/Sink Device Status
SINK_STATUS [RO]
0x00205

```

```

Direction          = Sink to Source
Native AUX Reply    = AUX_ACK
I2C-over-AUX Reply  = AUX_ACK

```

```

Link/Sink Device Status
SINK_COUNT [RO]
0x00200 := 0x01
SINK_COUNT = 1
CP_READY = 0

```

```

Link/Sink Device Status
DEVICE_SERVICE_IRQ_VECTOR
0x00201 := 0x10
REMOTE_CONTROL_COMMAND_PENDING = 0
AUTOMATED_TEST_REQUEST = 0
CP_IRQ = 0
MCCS_IRQ = 0
DOWN_REQ_MSG_RDY = 1
UP_REQ_MSG_RDY = 0
SINK_SPECIFIC_IRQ = 0

```

```

Link/Sink Device Status
LANE0_1_STATUS [RO]
0x00202 := 0x77
LANE0_CR_DONE = 1
LANE0_CHANNEL_EQ_DONE = 1
LANE0_SYMBOL_LOCKED = 1
LANE1_CR_DONE = 1
LANE1_CHANNEL_EQ_DONE = 1
LANE1_SYMBOL_LOCKED = 1

```

```

Link/Sink Device Status

```

Sideband Message Example

```

Sideband message header
Link_Count_Total      1
Link_Count_Remaining  0
Broadcast_Message     0
Path_Message          1
MSG_Body_Length       3
Start_Of_MT           1
End_Of_MT             1
Message_Sequence_No   0

Sideband message validity check
MSG_Header_CRC        7[Good]
MSG_Body_CRC          95[Good]
Header Reserved (Zero) fields [Good]

Message Transaction decode
Request_Identifier     0x10[ENUM_PATH]
Port_Number           8

```

```

Sideband message header
Link_Count_Total      1
Link_Count_Remaining  0
Broadcast_Message     0
Path_Message          1
MSG_Body_Length       7
Start_Of_MT           1
End_Of_MT             1
Message_Sequence_No   0

Sideband message validity check
MSG_Header_CRC        0[Good]
MSG_Body_CRC          20[Good]
Header Reserved (Zero) fields [Good]

Message Transaction decode
Reply_Type             ACK
Request_Identifier     0x10[ENUM_PATH]
Port_Number           8
Full_Payload_Bandwidth_Available 7737
Payload_Bandwidth_Number 7737

```

HDCP Trace Example

```

E(kpub)_k(m)- DPDC Address range trace

0x69220 - 0x6929F
No extended trace decoding available.
Block dump:
CD C7 90 67 D8 D9 9A BD 43 56 64 18 52 A5 73 BB
41 56 E1 FD 82 F8 3A 24 9A BB 0C FD 42 98 3B 17
D8 E6 07 14 D6 E9 CA 25 19 10 3D 26 38 F6 15 B7
5E 4F BE 8B 25 B3 CC 62 0E 1D 00 21 41 E2 DD 09
50 A2 26 E5 8F 9D A0 2F F2 18 AA 98 48 C6 6D 49
AB D8 92 7E B3 A7 F2 CC 85 55 F7 51 53 31 41 FC
68 C2 6D BF 06 5A 8B D7 B9 17 87 53 8E 16 DE 74
00 E3 96 1C 4E A8 81 30 BA 68 B8 3D D6 EE C9 F7

```

SDP (UCD-451)

DP Secondary-data Packets.

SDP ID:	0x00					
SDP Type:	0x84					
SDP Length:	0x01B (27)					
SDP Version:	0x12 (18)					
Data Byte 1:						
CC[2-0]:	0x1	Channel Count	2			
CT[7-4]:	0x0	Refer to Stream Header				
Data Byte 2:						
SS[1-0]:	0x0	Sample Size	Refer to Stream Header			
SF[4-2]:	0x0	Sampling Frequency	Refer to Stream Header			
Data Byte 3:						
CXT[4-0]:	0x00	Refer to CT (Data Byte 1)				
Data Byte 4:						
CA[7-0]:	0x00	Channel Allocation	1	2	3	4
			FL	FR	-	-
Data Byte 5:						
LFEPL[1-0]:	0x0	LFE Playback Level	Unknown or refer to other inform			
LSV[6-3]:	0x0	Level Shift Value	0dB			
DM_INH[7]:	0x0	Down-mix Inhibit Flag	Permitted or no information about			
Raw Data:						
Head:	00 84 1B 48 (PB: 00 84 D7 D1)					
Body:	01 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 (PB: 98 00 00 00)					
	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 (PB: 00 00 00 00)					

VB-ID (UCD-451)

Vertical Blanking ID packets sent in DP stream.

Device ID	= 00
Stream ID	= 00
Data length	= 3
VerticalBlanking_Flag	= 1[bit 0]
FieldID_Flag	= 0[bit 1]
Interlace_Flag	= 0[bit 2]
NoVideoStream_Flag	= 0[bit 3]
AudioMute_Flag	= 1[bit 4]
HDCP_SYNC_DETECT	= 0[bit 5]
CompressedStream_Flag	= 0[bit 6]
Reserved	= 0[bit 7]
Mvid	= 0x33
Maud	= 0x00

MSA (UCD-451)

Main Stream Attributes sent in DP stream.

Device ID	= 01
Stream ID	= 03
Data length	= 28
Mvid	= 0x2333
Nvid	= 0x8000
H-Total	= 2200
V-Total	= 1125
H-Active	= 1920
V-Active	= 1080
H-Sync Width	= 44
V-Sync Width	= 5
H-Sync Start	= 192
V-Sync Start	= 41
MISC0	= 0x20
MISC0.Clock	= Asynchronous
MISC1	= 0x00
MISC1.Interlaced Vertical Total Even:	Number of lines per interlaced frame (consist
MISC1.Interlaced Vertical Total Even:	No 3D stereo video in-band signaling

Status of link pattern detected in which lane.

```
Device ID = 01
Lane 0 []
Lane 1 []
Lane 2 []
Lane 3 [TPS1; Detected; ]
```

Status of captured binary Manchester II codes. The duration of the preamble and postamble is presented.

```
Packet content type = 0x00 [Data message]
Packet size       = 24 [bytes]
Direction        = Source to Sink
Native AUX Request = Write
Length           = 3
Data             = 08 08
Address          = 0x00103

Link Configuration
TRAINING_LANE0_SET
0x00103 := 0x08
VOLTAGE_SWING_SET = level 0
MAX_SWING_REACHED = level 0
PRE_EMPHASIS_SET = level 1
MAX_PRE_EMPHASIS_REACHED = 0
NOTE: Decoded as MAIN_LINK_CHANNEL_CODING_SET = 8b/10b

TX_FFE_PRESET_VALUE = 8
NOTE: Decoded as MAIN_LINK_CHANNEL_CODING_SET = 128b/132b

Link Configuration
TRAINING_LANE1_SET
0x00104 := 0x08
VOLTAGE_SWING_SET = level 0
MAX_SWING_REACHED = level 0
PRE_EMPHASIS_SET = level 1
MAX_PRE_EMPHASIS_REACHED = 0
NOTE: Decoded as MAIN_LINK_CHANNEL_CODING_SET = 8b/10b

TX_FFE_PRESET_VALUE = 8
NOTE: Decoded as MAIN_LINK_CHANNEL_CODING_SET = 128b/132b

Transaction Data
80 01 03 01 08 08

Manchester II codes:
preamble: L O O O O O O O O O O O O O O O O O O O H N L L
codeword: 1 0 0 0 [0x08]
address:  0 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 0 0 1 1 [0x00103]
length:   0 0 0 0 0 0 0 1 [0x01]
data:     0 0 0 1 0 0 0 [0x08]
          0 0 0 1 0 0 0 [0x08]
postamble: H N L L
```

Measure dimensions of capture video frame.

```
Stream ID          = 0
VFRECORD 1
VFA TYPE           VIDEO_DP_MEAS
VFA LENGTH         2
Vtotal             1125
Hactive            1920
Vactive            1080
```

Packets (UCD-452)

Log metadata sent by Source device in HDMI stream

Packet code: 0x82	
Packet Header:	
Packet Length:	13
Checksum:	57
Version:	2
Packet Data:	
Scan Info(0:1)	0(No Data)
Bar Data(2:3)	0(Not present)
Format Info(4)	0(Not present)
Color Space(5:7)	0(RGB)
AFD Aspect(8:11)	8((ATSC: Same as Picture Aspect Ratio) (
Coded frame AR(12:13)	0(No Data)
Colorimetry(14:15)	0(No Data)
Non-U Scaling(16:17)	0(No Known non-uniform scaling)
RGB Quant(18:19)	0(Default (depends on video format))
E-Colorimetry(20:22)	0(No data)
ITC Content(23)	0(No Data)
VIC(24:31)	16
Pixel repeats(32:35)	0(No repeats)
ITC Type(36:37)	0(Graphics)
YCC Quant(38:39)	0(Limited range)
ETB(40:55)	0
SBB(56:71)	0
ELB(72:87)	0
SRB(88:103)	0
Transformed HDMI Data:	
82 02 0D 57 00 08 00 10 00 00 00 00 00 00 00	
00 00 00 00 00 00 00 00 00 00 00 00 00 00 38	
00 00 00	

I2C (UCD-452)

Log data sent over I2C communication lines of HDMI interface

Message:
HDRX SCDC: RD 0x10:UPDATE[0] 0x0

CEC (UCD-452)

CEC messages

Device ID: 00	
Flags: 00	
Data length: 7	
Acknledges vector: 0x001F	


Header:	
Initiator address:	0x00
Destination address:	0x0F

Opcode Block:	
Opcode:	<Report Physical Address>(0x84)

[Physical Address]	0.0.0.0
[Device Type]	TV(0x00)

6. EDID/DISPLAYID EDITOR

The *EDID/DisplayID Editor* main window is divided into three views. The bottom area additionally has command buttons. The top left tree view selection determines the blocks to be edited. The top right view shows data for the currently selected item in the top left view. These values may be edited when the *Editor Mode* checkbox is checked. The bottom right hex view shows that data as hex values. The hex values of the currently selected item in the top left view are highlighted. Values can be edited when the *HEX Edit Mode* checkbox is checked.

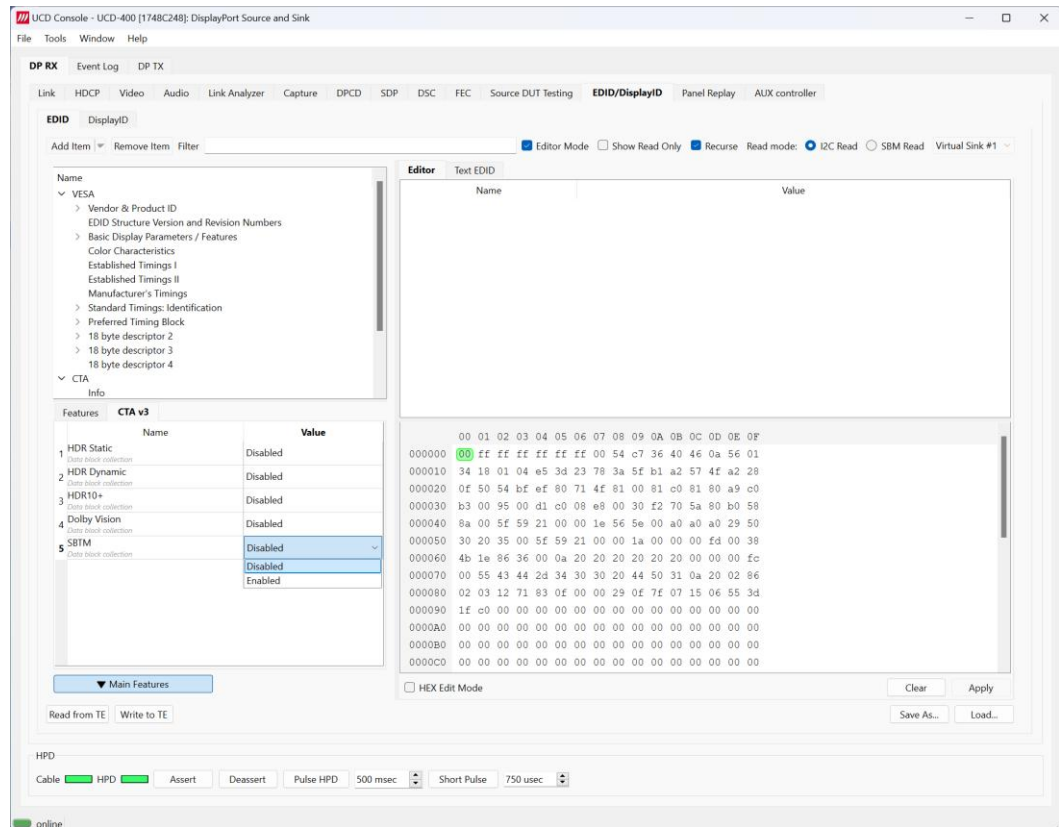

Add Item	Add a new EDID or DisplayID block. Available when in <i>Editor Mode</i> exclusively and a top node in treeview (CTA or VESA) is selected.
Remove Item	Delete the selected EDID or DisplayID block. Available when in <i>Editor Mode</i> exclusively and a top node in treeview (CTA or VESA) is selected.
Filter	Show only items having the filter string in the field name.
Editor Mode	See below.
Show Read Only	Automatically generated non-editable fields are additionally shown.
Read mode	Data read mode: I2C (using I2C protocol) or SBM (MST mode only): virtual channels read via SBM protocol.
Recurse	All subitems of the selected item are presented in <i>Editor View</i> .
Virtual Sink #1 (DP)	Dropdown labled with the currently selected virtual sink (MST).

The buttons at the bottom of the dialog differ based on role: *Analyser* (*Read from TE* and *Write to TE*) or *Generator* (*Download from Sink* and *Upload to Sink*).

▼ Main Features ☐ HEX Edit Mode Read from TE Write to TE Clear Apply Save As... Load...	
<i>Read from TE (Analyzer)</i>	Read device local EDID/DisplayID blocks into editor (<i>HEX Edit Mode</i> must be unchecked).
<i>Write to TE (Analyzer)</i>	Write editor data to device local EDID/DisplayID blocks.
<i>Download from Sink (Generator)</i>	Read EDID/DisplayID blocks from connected sink device into editor.
<i>Upload to Sink (Generator)</i>	Write editor EDID/DisplayID blocks to connected sink device. See note below.
<i>Editor Mode</i>	Enable editing EDID/DisplayID content in top right view. For example, for testing purposes, it's possible to load invalid EDID/DisplayID data and write it to TE without modifications. Once <i>Editor Mode</i> is enabled, the validator corrects errors such as invalid checksums. Top right view name-value pairs can be edited.
<i>HEX Edit Mode</i>	Enable editing EDID/DisplayID content in bottom right HEX view. When enabled, HEX values may be edited. Click <i>Apply</i> to validate changes and update other views.
<i>Save As...</i>	Save the current editor data to disk in various formats: binary, hex, ecd, txt and xml.
<i>Load ...</i>	Load EDID/DisplayID data from disk. Same formats as above available.

Note: A source device is always able to read EDID data of the connected Sink device. A source device can read the DisplayID data of the sink device if the sink device permits. The connected sink device may or may not allow its EDID/DisplayID content to be modified.

Select the *Main Features* button to view items of common interest. For example, whether the sink is capable of HDR, or Dolby Vision, etc.

Features CTA v3		
	Name	Value
1	Max Resolution	10240 x 4320
2	10K Max Frame Rate	60 Hz
3	8K Max Frame Rate	60 Hz
4	4K Max Frame Rate	145 Hz
5	2K Max Frame Rate	145 Hz
6	HDR Static	Disabled
7	HDR Dynamic	Disabled
8	HDR10+	Disabled
9	Dolby Vision	Disabled
10	SBTM	Disabled

The *Main Features* view *CTA v3* tab (available only in EDID tab not DisplayID tab) allows enabling/disabling features. You enable/disable a feature by selecting the *Value* field with *Editor Mode* enabled (*AND* *HEX Edit Mode* disabled). When a value is disabled and you want to enable it, the *Editor View* will be blank as focus has been set on the values to be enabled (and are zero when disabled). New highlighted hex values will be added and highlighted in the lower right *Hex View*. New node data will also appear under the CTA node in the top left tree view.

Features CTA v3		
	Name	Value
1	HDR Static Data block collection	Disabled
2	HDR Dynamic Data block collection	Disabled
3	HDR10+ Data block collection	Disabled
4	Dolby Vision Data block collection	Disabled
5	SBTM Data block collection	Enabled
		Disabled
		Enabled

EDID Editor Features

A practically unlimited number of extension blocks may exist in a single collection. The number of blocks is limited by VESA Specifications and possibly by available system resources. Most EDID/DisplayID blocks contain a structure that is very similar to a tree structure. The Editor decodes each block into a tree view of the block. The tree view then contains all values within the data block. Contents can be browsed. The Editor has a support for automatic variables, such as the block checksum. When a value in a block is modified, the checksum will be updated. Automatic variables are read only. A log print will be made when an automatic variable is updated by the editor.

Editing Tips

- Editing is straightforward:
- Select property fields to edit.
- Red values in *HEX View* show that values have been modified.
- Press *Enter* to apply edit values and combo box selections.

In CTA-861 blocks, you can add and remove 18-byte descriptors and CEA data blocks by setting the values “18-byte Descriptors in this block” and “CEA Data block count”.

Enter hex values with prefixes “0x” or “\$”. No prefix represents a decimal value.

Values may be entered as hexadecimal or decimal regardless of presentation.

Floating point values must have a period “.” decimal separator.


Click *Set* after changing a bit-value presented as a single checkbox if you want the new value applied.

Note:

EDID Editor does not have an *Undo* function. Therefore, it is highly recommended that you back up un-edited EDID contents to a file before editing it.

7. PACKET EDITOR

Packet Editor enables creation and editing metadata packets.

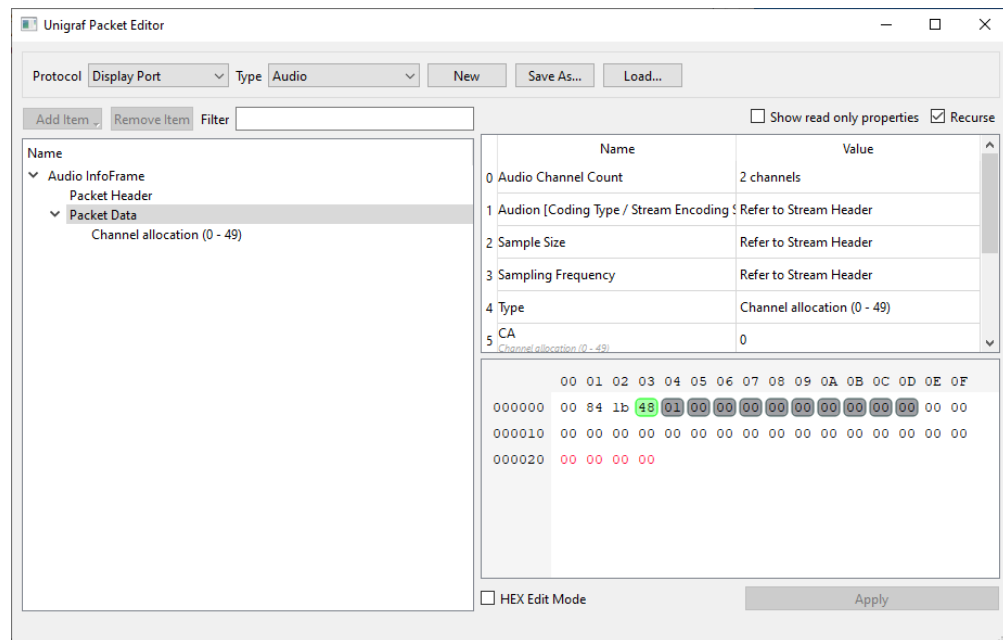

The types of supported packets are:

- Audio InfoFrame (Audio)
- AVI InfoFrame (AVI)
- Custom InfoFrame (Custom) (HDMI)
- Custom Packet (Custom) (DP)
- DR&M InfoFrame (DR&M) (HDMI)
- DR&M Packet (DR&M) (DP)
- EMP-VRR (EMP-VRR)
- GCP InfoFrame (GCP)
- SBTMEM Source-Based Tone Mapping Extended Metadata (HDMI)
- SPD InfoFrame (SPD)
- Vendor-Specific InfoFrame (VS) (HDMI)*
- Vendor-Specific SDP (VS) (DP)*

*) Please select from available VS packet types in field “4: Type” in the packet editor.

8. PATTERN EDITOR


Pattern Editor is a tool for editing and debugging Unigraf Custom VTP Pattern scripts.

Please refer to APPENDIX F: VTP PATTERN LANGUAGE later in this document for description of the VTP Pattern Language syntax.

Pattern Editor consists of three tabs:


Image Tab

Monitoring the rendering of the VTP pattern script.

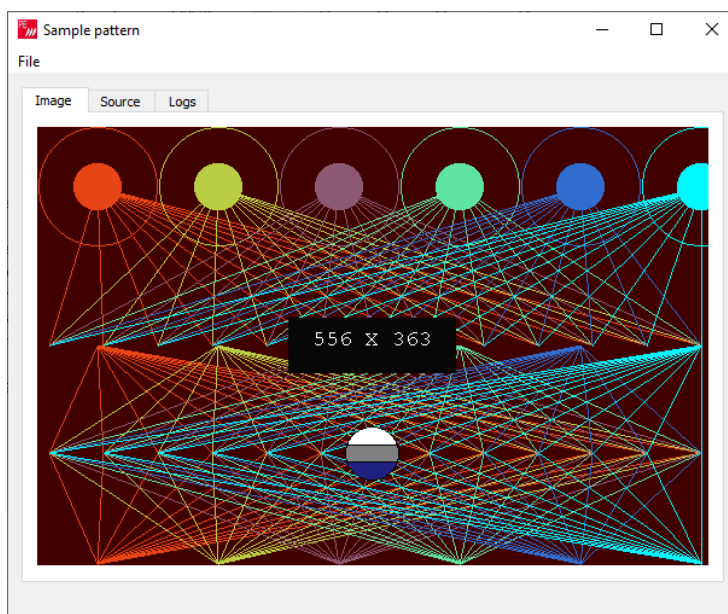


Source Tab

Tool for editing VTP Pattern Language script. Click Apply to render the code in the resolution of the preview image in *Image* tab.

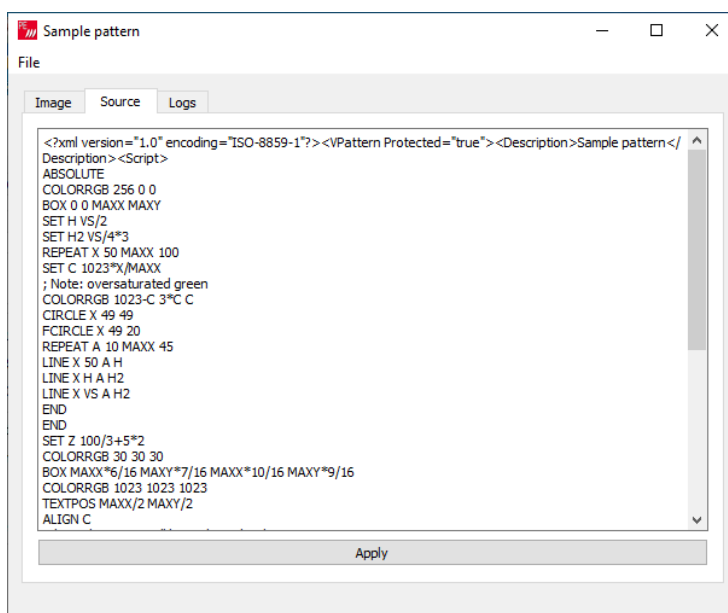

Logs Tab

Log of the pattern code parsing indicating the values assigned to logical variables and the actual parameter values used for render instructions.

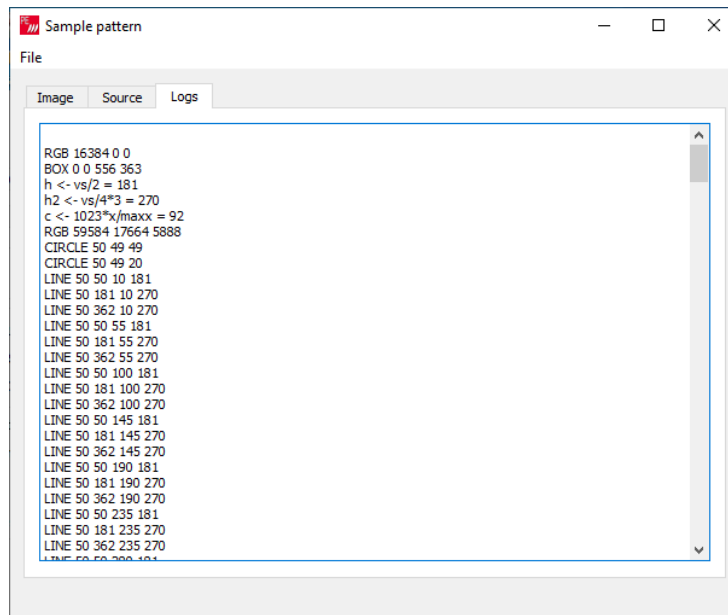

Saving and Recalling the Script

In File pull-down menu the user can save his work.

Open: Open a VTP language script from PC

Save Script: Save the script currently in Source tab to PC

Save Image: Save a rendered pattern in PNG, BMP, JPG or PPM format

Select Save Resolution: Select from six common resolutions the size in which the pattern script will be rendered when saved.

9. IMAGE CONVERTER

Image Converter is a tool for converting images from one color format to another. This kind of conversion is typically needed when creating YCbCr test images from RGB bitmaps.


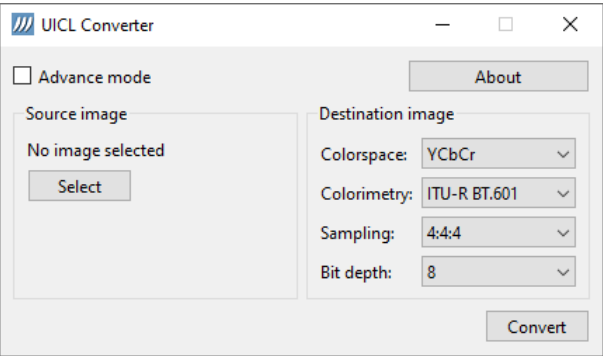


Image Converter has two operating modes: Standard mode and Advanced mode. In Standard mode typical image file formats are used as Source image and the user sets basic color formats for the Destination image. In Advanced mode, the user is able to define the Source and Destination image parameters in detail.

Click **Select** to load the Source image. Click **Convert** to store the Destination image. File name for

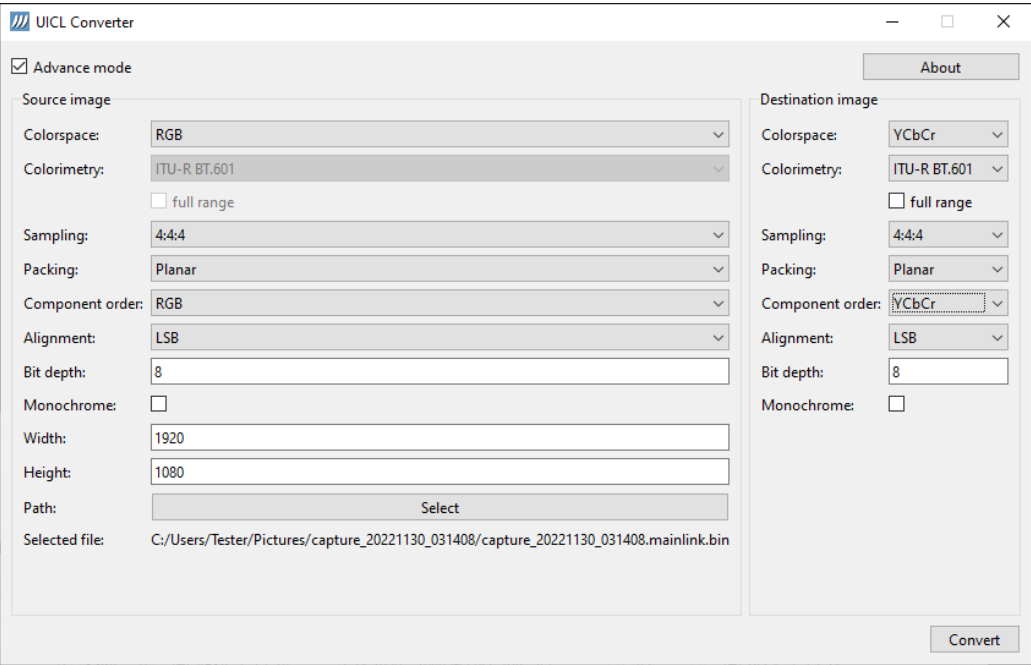

the Destination image is of form:

```
Source_image_1920x1080_8bits_yuv444_lsb.bin
```

<i>Source_image</i>	Name of the image file used as Source image
<i>1920x1080</i>	Resolution of the Source Image
<i>8bits</i>	Bit depth of the Destination image
<i>yuv444</i>	Color space and sampling of the Destination image
<i>lsb</i>	Data alignment of the Destination image

APPENDIX A: PRODUCT SPECIFICATION

UCD-451

Output	DisplayPort™ 1.4a compliant (DP Tx)
Max video mode	7680 × 4320 p30 , 3840 × 2160 p120
Content Protection	HDCP 2.3, HDCP 1.3
Additional features	FEC, LTTPR, DSC DP & HDCP CTS tests*
DSC Capability	DSC source using pre-compressed content
User Interface	Computer with monitor, keyboard and mouse
Operating System	Debian 11.0 or higher. Ubuntu 20.04.4 LTS or higher. macOS Big Sur 11.7.10 or higher (Intel & Apple Silicon) Windows 10 10.0.19045 or higher (x86-64 & arm64)
Video memory	Extended video memory up to 32 GBytes
Connections	6 x USB 3.0, 2 x Ethernet, 1 x HDMI
Power supply	AC/DC Power supply (100 to 240 Vac 50/60 Hz input, +12 Vdc output)
Environmental	Operating temperature: 15 to 35 deg C Storage temperature: 0 to 50 deg C Humidity 30% to 70% RH, non-condensing
Mechanical Size	329 × 188 × 215 mm
Weight	3.9 kg w/o power supply

*) Please contact Unigraf for availability

UCD-452

Output	HDMI 2.1 (HDMI Tx)
Max video mode	10240 x 4320 @ 30Hz , 10240 x 4320 @ 60Hz with DSC
HDMI 2.1 Features	FRL, TMDS, ALLM, VRR, QMS-VRR, SBTM DSC 1.2a, FEC, eARC
Content Protection	HDCP 2.3, 1.4
User Interface	Computer with monitor, keyboard and mouse
Operating System	Debian 11.0 or higher. Ubuntu 20.04.4 LTS or higher. macOS Big Sur 11.7.10 or higher (Intel & Apple Silicon) Windows 10 10.0.19045 or higher (x86-64 & arm64)
Video memory	Extended video memory up to 32 GBytes
Connections	6 x USB 3.0, 2 x Ethernet, 1 x HDMI
Power supply	AC/DC Power supply (100 to 240 Vac 50/60 Hz input, +12 Vdc output)
Environmental	Operating temperature: 15 to 35 deg C Storage temperature: 0 to 50 deg C Humidity 30% to 70% RH, non-condensing
Mechanical Size	329 × 188 × 215 mm
Weight	3.9 kg w/o power supply

APPENDIX B: PRODUCT FEATURES

Hardware Product Options

Hardware Test Platform	Product Number
UCD-452 Device	066615
UCD-451 Device	066617

DP Reference Source Default Features (UCD-451)

License	UCD-4XX Default	DSC Encoder	LTPR	TSI Basic
DP Reference Source				
Video pattern generator (fixed patterns and timings)	•			▲
Custom video patterns and timings	•			▲
Audio generator	•			▲
Playback	•			▲
Link status	•			▲
Link control	•			▲
HPD status	•			▲
EDID read and write	•			▲
EDID / DisplayID Editor	•			
Fast Link Training (Link Training without AUX Transaction)	•			
MST Feature (up to 4 streams)	•			▲
FEC Feature	•			▲
Adaptive-Sync Feature	•			▲
DPCD editor	•			
LTPR Feature			•	▲
HDCP 1.3 status and control	•			▲
HDCP 2.3 status and control	•			▲
Event Log, AUX Analyzer	•			
Sink DUT Testing	•			

DP Reference Source Optional Features (UCD-451)

Feature	License Product Number
DSC Encoder for testing Sink DUT on DP	MT6671
DP Link Analyzer	MT6688

eDP Reference Source and Panel Replay Features

	License	UCD-4XX Default License	eDP support (8b/10b)	Panel Replay support (8b/10b)
	Product Number	N/A	MT6686	MT6685
Feature	eDP Link Training & Link Rate Support*		•	
	Panel Replay			•
	Alternate Scrambler Seed Reset (ASSR)	•		
	OUI Support	•		
	GUID Register Support	•		
	Live Frame Mode	•		
	PSR1		•	
	PSR2		•	
	Early Transport		•	•
	Selective Update		•	•
	AUX-less ALPM		•	•
	AUX-wake ALPM		•	

DP Reference Source Compliance Test Options

	DP 1.4 / 2.1 LL CTS for testing Sink DUT*	License Product number
CTS Test	DP 1.4 LL, Audio, FEC CTS for testing Sink DUT	MT6635
	DP 1.4a DSC CTS for testing Sink DUT	MT6643
	DisplayID / EDID CTS for testing Sink DUT (8b/10b)	MT6647
	Adaptive-Sync CTS for testing Sink DUT (8b/10b)	MT6649

*) Contact Unigraf for availability

	HDCP 2.3 CTS for testing Source and Repeater DUT*	License Product number
CTS Test	HDCP 2.3 CTS for testing Sink DUT on DP	MT6636
	HDCP 2.3 CTS for testing Repeater DUT on DP	MT6638

*) Contact Unigraf for availability

	HDR10+ CTS	License Product number
CTS Test	HDR 10+ Display Device and SSTM for testing Sink DUT on HDMI	MT6676

HDMI Reference Source Default Features (UCD-452)

	License	UCD-4XX Default	TSI Basic
HDMI Reference Source			
Video pattern generator (fixed patterns and timings)		•	▲
Custom video patterns and timings		•	▲
Playback		•	▲
Audio Generator		•	▲
Link status		•	▲
Link control		•	▲
EDID read and write		•	▲
EDID Editor		•	
DSC Encoder		•	
SCDC Editor		•	
Event Log		•	
Sink DUT Testing		•	
HDCP 1.4 status and control		•	▲
HDCP 2.3 status and control		•	▲

HDMI Reference Source Compliance Test Options

	HDR10+ Testing	License Product number
CTS Test	HDR10+ Display Device and SSTM for testing Sink DUT on HDMI	MT6675

APPENDIX C: SINK AND REPEATER TESTS

Sink DUT Testing		Default	DP 1.4a LL CTS	DP 1.4a DSC CTS Sink DUT	DP 2.1 DisplayID / EDID CTS for testing Sink DUT (8b/10b)	DP 2.1 Adaptive-Sync CTS for testing Sink DUT (8b/10b)	DP HDCP 2.3 CTS	HDR10+ DD & SSTM CTS
VRR Sink DUT Tests (HDMI) (UCD-452)	VRR static test, QMS Test, VRR Dynamic test	●						
DP 1.4a Link Layer CTS (UCD-451)	5.2.1.1 – 5.2.1.12, 5.2.2.1 – 5.2.2.9, 5.3.1.1 – 5.3.1.9, 5.3.2.1 – 5.3.2.2, 5.4.1.1 – 5.4.1.4, 5.4.2, 5.4.3.1 – 5.4.3.2, 5.4.4.1 – 5.4.4.6, 5.5.1.1 – 5.5.1.7		●					
DP 1.4a DSC CTS (UCD-451)	5.6.1.1 – 5.6.1.26, 5.6.2.1 – 5.6.2.14			●				
DP 2.1 DisplayID-EDID CTS for testing Sink DUT (8b/10b) (UCD-451)	5.7.1.1 – 5.7.1.2, 5.7.1.7, 5.7.1.3.1 – 5.7.1.3.4, 5.7.1.4.1 – 5.7.1.4.9, 5.7.1.5 - 5.7.1.6, 5.7.2.1 – 5.7.2.2, 5.7.2.3.1 – 5.7.2.3.5, 5.7.2.4.1 – 5.7.2.4.2, 5.7.2.5.1 – 5.7.2.5.2, 5.7.2.6.1 – 5.7.2.6.2, 5.7.2.7.1, 5.7.2.8, 5.7.3.1 – 5.7.3.5, 5.7.4.1 – 5.7.4.3, 5.7.4.5, 5.7.4.10 –12, 5.7.4.14, 5.7.5.1 – 2, 5.7.6.1 – 5.7.6.10, 5.7.7.1 – 5.7.7.12, 5.7.8.1 – 5.7.8.12, 5.7.9.1 – 5.7.9.6, 5.7.10.1 – 5.7.10.6, 5.7.11.1 – 5.7.11.10, 5.7.12.1 – 5.7.12.8, 5.7.13.1- 5.7.13.2, 5.7.14.1 – 5.7.14.16, 5.7.15.1 – 5.7.15.12, 5.7.16.1 – 5.7.16.7, 5.7.16.9-5.7.16.11, 5.7.17.1 – 5.7.17.10, 5.7.18.1 , 5.7.19.1 - 5.7.19.7, 5.7.20.1 - 5.7.20.8, 5.7.21.1 - 5.7.21.12, 5.7.22.1 - 5.7.22.14				●			
DP 2.1 Adaptive-Sync CTS for testing Sink DUT (8b710b) (UCD-451)	5.8.1.1 – 5.8.1.6					●		
DP HDCP 2.3 CTS 2C Test Set (UCD-451)	HDCP2.3 CTS 2C-01 – HDCP2.3 CTS 2C-06						●	
HDR10+ CTS Tests (HDMI & DP)	HDR10+ Display Device and SSTM Tests							●
Cable test (UCD-422)	Cable Test Check	●						

Repeater DUT Testing		Default	DP HDCP 2.3 CTS
DP HDCP 2.3 CTS 3A Test Set (UCD-451)	HDCP2.3 CTS 3A-01 – HDCP2.3 CTS 3A-06		●
DP HDCP 2.3 CTS 3B Test Set (UCD-451)	HDCP2.3 CTS 3B-01 – HDCP2.3 CTS 3B-07		●
DP HDCP 2.3 CTS 3C Test Set (UCD-451)	HDCP2.3 CTS 3C-01 – HDCP2.3 CTS 3C-25		●

DP Compliance Tests

Role:	Product:
DP Reference Source (DP TX)	UCD-451

Compliance test capability is a license enabled add-on to UCD Console.

The tests are included in the GUI software, license codes enable the tests for use. Please refer to *Appendix B Licensing* for details. The list of compliance tests that UCD Console supports, please refer to document *DP CTS Tool Options for Unigraf UCD-400.pdf*. It can be downloaded in Unigraf Document Center at <https://www.unigraf.fi/documents/>. If you have any additional questions, please contact Unigraf or your local representative.

Compliance tests (CTS Tests) are part of tests included in **Source DUT Testing** tab of **DP RX** and **Sink DUT Testing** tab of **DP TX**.

The tests cases are divided to test categories as described in *Appendix E* of this document. Test categories are placed in sub-tabs. Test category tabs are enabled based on licenses present. Please refer to chapter 3 *License Manager* earlier in this document.

Test Parameters

Before running the tests, capabilities of the DUT have to be defined for the test engine. Each test category has its dedicated test parameter dialog. Click **Configure** in *Source DUT Testing* or *Sink DUT Testing* tab to open the parameter dialog.

DP 1.4 Link Layer Source DUT CTS

General Audio DSC DisplayID Adaptive-Sync

Test Timeouts

Test Timeout (ms): 5000

Long HPD pulse duration (ms): 1000

Colorimetry

RGB: ☒ 6 bpc VESA ☐ 8 bpc CTA (ITU.601) ☐ 8 bpc CTA (ITU.601)

☒ 8 bpc VESA ☐ 10 bpc CTA (ITU.601) ☐ 10 bpc CTA (ITU.601)

☐ 10 bpc VESA ☐ 8 bpc CTA (ITU.709) ☐ 8 bpc CTA (ITU.709)

☐ 6 bpc CTA ☐ 10 bpc CTA (ITU.709) ☐ 10 bpc CTA (ITU.709)

☐ 8 bpc CTA

☐ Select All

Test Automation

☐ TEST_LINK_TRAINING

☒ TEST_EDID_READ

☐ TEST_VIDEO_PATTERN

☐ TEST_AUDIO_PATTERN

Event indicating DUT ready: Always ready

DUT Capabilities

Max lanes supported: 4

Max Bitrate supported: HBR3 (8.10 Gbps)

☒ Voltage Swing level 3 (1.2V) supported

☒ Pre-Emphasis level 3 (9.5dB) supported

☐ Fixed timing DUT

☐ Spread Spectrum Supported

☒ Video format change without LT supported.

☒ Lane count reduction without LT supported.

☒ E-DDC supported

☐ Audio Info Frame supported for 2 channel audio

☐ DUT is Type-C Device

☒ FEC supported

☐ FEC disable sequence supported

☒ Audio without Video supported

Video Modes

Fail-safe video mode: 640 x 480 @ 60Hz 6 BPC

Maximum supported video mode: 3840 x 2160 @ 60Hz 8 BPC

Most Packed Timings

1 Lane: DMT 1280 x 768p @ 60Hz, RB1, 6 bpc

2 Lanes: DMT 1400 x 1050p @ 60Hz, RB1, 8 bpc

4 Lanes: CTA 1920 x 1080p @ 60Hz, 10 bpc

Time-stamp generation

	1 lane	2 lanes	4 lanes
RBR	848 x 480 @ 60Hz 8 BPC	1280 x 720 @ 60Hz 8 BPC	1920 x 1080 @ 60Hz 8 BPC
HBR	1280 x 720 @ 60Hz 8 BPC	1280 x 960 @ 60Hz 8 BPC	1920 x 1080 @ 60Hz 8 BPC
HBR2	1280 x 960 @ 60Hz 8 BPC	1920 x 1080 @ 60Hz 8 BPC	1920 x 1080 @ 120Hz 8 BPC
HBR3	1920 x 1440 @ 60Hz 8 BPC	3840 x 2160 @ 30Hz 8 BPC	3840 x 2160 @ 60Hz 8 BPC

Presets OK Cancel

For a detailed description of capabilities listed on the tab please refer to Chapter 3 Compliance Test Operation of document VESA DisplayPort v1.4a Link Layer Compliance Test Specification.

Note:

Please make sure that the capability tables are completed before running the tests. The result of the test might be misleading if the DUT capabilities and the table do not match.

DSC Test Content

When running DSC Compliance Tests, Console needs to have access to DSC content used as test patterns. This content will be automatically created during test execution. Creation of the test content takes time and considerably slows down the execution of the test. To avoid this after the first test run, users are able to save the created DSC content by selecting the option *Keep auto-created DSC content files* described below.

Warning

Please note, that the space needed for storing the full library **can be very large** (appr. 400 GBytes). Please make sure that the content will be stored in a medium that has the required space available.

Options

In Tools > Options menu you can define DSC Work folder and DSC test content directory.


<i>DSC temp folder:</i>	Folder for DSC Work files.
<i>DSC test content folder:</i>	Folder where DSC source bitmap files, related configuration files and DSC conversion tools are stored.
<i>Keep auto-created DSC content files:</i>	By default, the DSC compressed content is deleted after use. If selected, the content is not deleted

Running CTS Tests

Source DUT Testing and *Sink DUT Testing* tabs include the tests enabled with the set of licenses present in UCD Console grouped in test set tabs. In tabs the tests are listed by the test name and reference number as in applicable compliance test specification. UCD-400 firmware implements the test according to the test specification.

For running a test, select it and click **Run selected**. For selecting multiple consecutive tests in the list hold down the **Shift** key of your keyboard while selecting the tests. For selecting multiple individual tests hold down the **Ctrl** key in your keyboard while selecting.

Test flow parameters like **Test timeout** and **Test cycle delay** can be defined in *Test Parameter* dialog launched by clicking **Configure**.

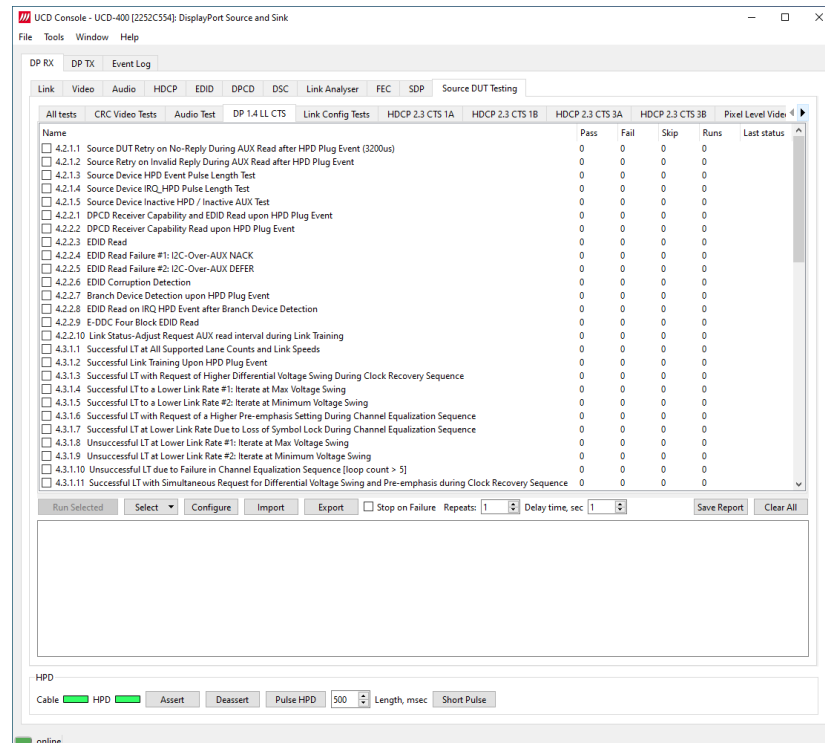

Run Selected	Click to start selected tests. By clicking <i>Abort</i> the sequence is stopped.
Select:	Includes the following options for creating templates for tests execution: Select All, Clear All, Invert All, Save, Import and Export
Configure	Clicking opens a dialog for defining the test parameters for that set. Please refer to <i>Test Parameters</i> below for description.
Import:	Load saved test parameter files (*.td or *.json).
Export:	Save test parameters for later use or for use in test automation. For saving parameters for later use in UCD Console, either format can be used. For saving parameters for TSI scripting, please use *.td files. For use with Python applications, please use *.json files.
Stop on Failure:	Stops execution of the selected tests if one of the tests fail
Repeats:	Repeat the selected test several times. When repeating a sequence of tests, all selected tests are performed in each repetition. E.g., when you repeat tests 1, 2 and 3 two times, the sequence is: 1, 2, 3, 1, 2, 3.
Delay time	Delay in seconds between individual tests.
Save Report:	Click to generate a report file in HTML format for sharing the results with other parties for viewing without UCD Console.
Clear Log	Clear the test log and the results matrix

Saving Test Parameters

Test parameters can be saved in various ways.


Export parameters in *Sink DUT Testing* tab to a *.td file for later use in UCD Console or with TSI scripting or sharing.

Export parameters in *Sink DUT Testing* tab to a *.json file for later use in UCD Console or with Python applications or sharing.

Save parameters in *Configure* dialog as Presets to be later used in UCD Console. Please find a description below.

Presets



In all *Configure* dialogs the selected parameters can be saved as Presets. Please click **Presets...** to save or recall a configuration. Click Save first to assign the configuration a name, and after that you can e.g. Export it to a file.

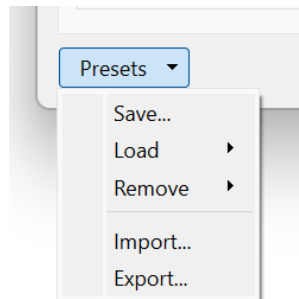

Operator Feedback


In some compliance tests operator action or feedback is required for items that the test itself cannot perform or confirm. In these cases test opens a pop-up dialog. In the dialog the operator is instructed about items to do or to be verified and buttons for providing the “Proceed” instruction or “Pass” and “Fail” feedback.

Clicking “Abort” stops execution of the test.

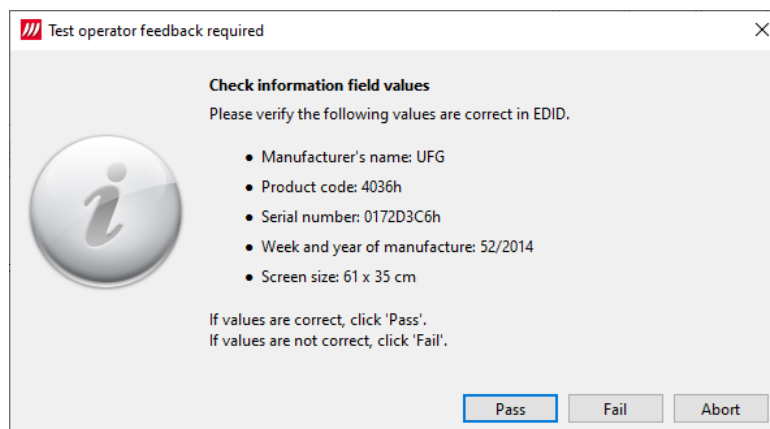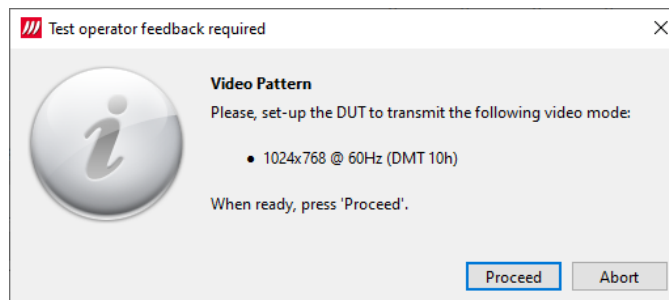

Evaluating CTS Test Results

The test procedure advancement can be monitored in the *Test Log* panel. It describes the steps of each individual test in the way defined in the corresponding VESA Compliance Test Specification. Please use the Status Log and Specification side by side when interpreting the results.

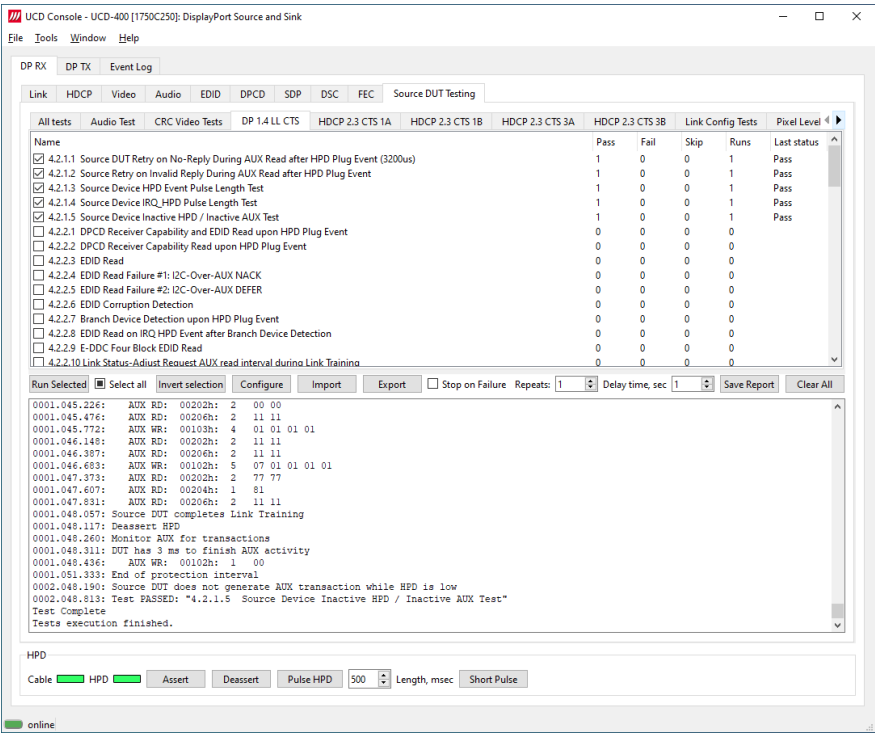


At the completion of each test the result of the test is indicated in the matrix on the right hand side of the test panel. For each test the matrix lists the number of occurrences of each result and the number of tries performed.

Test Report

Results of the test can be saved as a report in HTML format by clicking **Save Report**.

Viewing the CTS Test Report

The report file can be viewed with any HTML browser. The report has built-in views for Report Summary, Test Summary

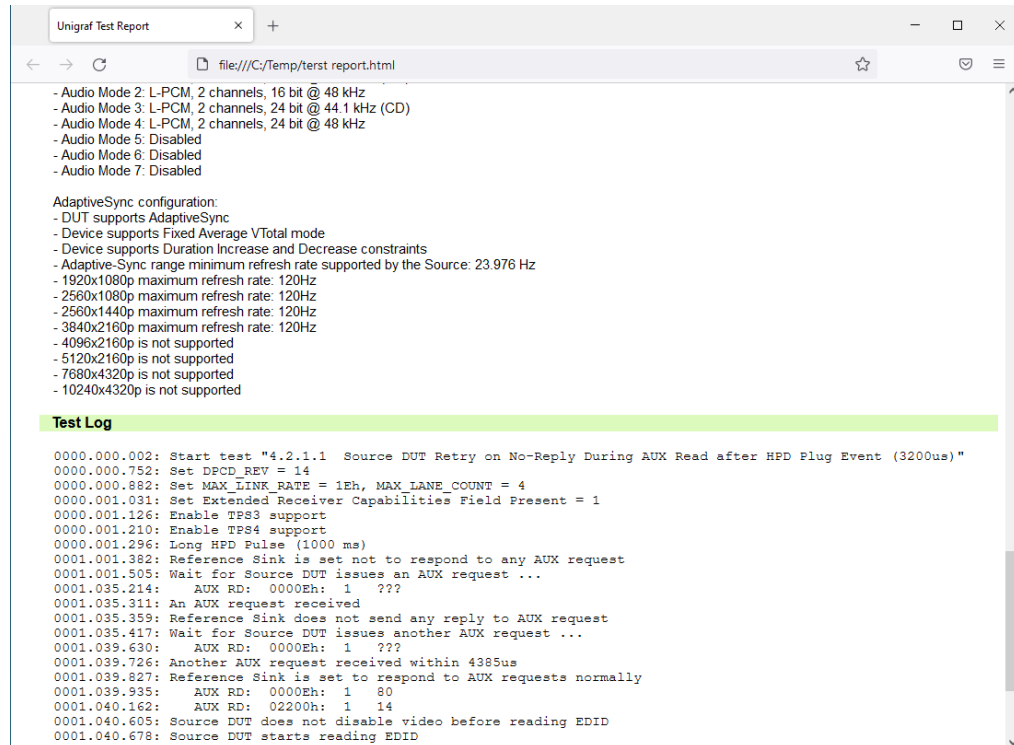

VRR Sink DUT Tests – HDMI Tx

Role:	Product:
HDMI Reference Source (HDMI TX)	UCD-452

Configure

VRR Sink DUT Tests

Name	Value
Test timeout, in milliseconds	10000
VRR Max value	60
VRR Min value	30
VRR Static value	45
VRR Step value	1
VRR Time step value	1000
VRR Enable and M_CONST	3
VFront and RB	0
Base Refresh Rate	50

Presets

OK

Cancel

<i>VRR Max value:</i>	Maximum VRR frame rate
<i>VRR Min value:</i>	Minimum VRR frame rate
<i>VRR Static value:</i>	Static VRR frame rate
<i>VRR Step value:</i>	Change of current VRR value during a test
<i>VRR Time step value:</i>	Change of current VRR value during a test
<i>VRR Enable and M_Const:</i>	Click to open dialog for enabling <i>VRR Enable</i> and <i>M_CONST</i>
<i>VFront value:</i>	Click to open dialog for enabling <i>Base VFront</i> and <i>RB</i>
<i>Base Refresh Rate:</i>	Set Base Refresh Rate

Static VRR Test

Test verifies that DUT Sink correctly applies a static VRR value.

After configuring the parameters operator starts the test. Operator verifies that DUT Sink has applied VRR correctly and provides the information in the dialog of the test.

Quick Media Switching (QMS) Test

Verify that VRR is set correctly when frame rate is changing with a set time interval. For example, change VRR from 30 to 60 Hz with step 1 each 1 second.

After configuring the parameters operator starts the test. Operator verifies that DUT Sink has applied VRR correctly and frame rate is changing as expected. Operator provides the information in the dialog of the test.

Dynamic Test

Verify that VRR is set correctly when frame rate is changing with each frame. For example, change VRR from 60 to 120 Hz with step 1 each frame.

After configuring the parameters operator starts the test. Operator verifies that DUT Sink has applied VRR correctly and frame rate is changing as expected. Operator provides the information in the dialog of the test.

Connection Test

Role:	Product:
HDMI Reference Source (HDMI TX)	UCD-422, UCD-412

Configure

Connection Test

Name	Value
Total test time, in seconds	60
Period, in seconds	1
Stop testing when status fail	False
Enable to check SCDC version	True
Enable to check SCDC status flag	True
Enable to check SCDC error counters	True
SCDC error counter fail threshold	10

Presets

OKCancel

<i>Total test time, in seconds:</i>	Set total test time in seconds
<i>Period, in seconds:</i>	Set periods in seconds
<i>Stop testing when status fail:</i>	Set False / True
<i>Enable to check SCDC version:</i>	Set False / True
<i>Enable to check SCDC status flag:</i>	Set False / True
<i>Enabl to check SCDC error counters:</i>	Set False / True
<i>SCDC error counter fail threshold:</i>	Set threshold for error counter failure

Cable Test

Role:	Product:
HDMI Reference Source (HDMI TX)	UCD-452

Cable Check Test

Test is intended to check that cable can be properly used with UCD-452. Cable should be connected in loopback mode.

Test tries to pass Link training on different rates. If errors are presented on the lanes, then TE applies different FFE level to find configuration where is the best quality (minimum of errors). If Link training can be done without errors on all link rates then cable qualified as acceptable for usage with UCD-452.

Configure

Name	Value
Test timeout, in seconds	120
Cable test mode	All
Minimum FRL rate	3G 3 Lane
Maximum FRL rate	12G 4 Lane
Threshold of allowed errors per lane	10
Timeout for capturing errors, in seconds	5
Low Speed Line Select	31

Presets ▼ OK Cancel

<i>Test timeout, in seconds:</i>	Timelimit for the test
<i>Cable test mode:</i>	High speed can include detection errors on the high speed lanes. Low speed - detect that i2c and ddc lanes are working properly. All modes checks both High speed and low speed.
<i>Minimum FRL rate:</i>	Determine minimum of range for detection of cable quility
<i>Maxmum FRL rate:</i>	Determine maximum of range for detection of cable quility
<i>Threshold of allowed errors per lane:</i>	Determine allowed number of errors
<i>Timeout for capturing errors, in seconds:</i>	Determine period for screening errors
<i>Low speed line select:</i>	Configure witch lines of Low speed will be checked.

APPENDIX D: PREDEFINED TIMINGS

Description*	HA	VA	HT	VT	HST	VST	HSYN	VSYN	FR	Pixel Clock (MHz)
CVT 640 × 480 @ 60 Hz	640	480	800	525	144	35	96	2	60	25,20
CTA 640 × 480 @ 60 Hz (VIC 1)	640	480	800	525	144	35	96	2	60	25,17
CTA 720 × 480 @ 60 Hz (VIC 2)	720	480	858	525	122	36	62	6	60	27,03
CTA 720 × 480 @ 60 Hz (VIC 3)	720	480	858	525	122	36	62	6	60	27,00
CTA 720 × 576 @ 50 Hz (VIC 17)	720	576	864	625	132	44	64	5	50	27,00
CTA 720 × 576 @ 50 Hz (VIC 18)	720	576	864	625	132	44	64	5	50	27,00
CTA 720 × 576 @ 100 Hz (VIC 42)	720	576	864	625	132	44	64	5	100	54,00
CTA 720 × 576 @ 100 Hz (VIC 43)	720	576	864	625	132	44	64	5	100	54,00
CTA 720 × 480 @ 120 Hz (VIC 49)	720	480	858	525	122	36	62	6	120	54,00
CTA 720 × 480 @ 120 Hz (VIC 48)	720	480	858	525	122	36	62	6	120	54,05
CTA 720 × 576 @ 200 Hz (VIC 52)	720	576	864	625	132	44	64	5	200	108,00
CTA 720 × 576 @ 200 Hz (VIC 53)	720	576	864	625	132	44	64	5	200	108,00
CTA 720 × 480 @ 240 Hz (VIC 56)	720	480	858	525	122	36	62	6	240	108,00
CTA 720 × 480 @ 240 Hz (VIC 57)	720	480	858	525	122	36	62	6	240	108,00
DMT 800 × 600 @ 60 Hz (ID Eh)	800	600	1056	628	216	27	128	4	60	39,79
DMT 848 × 480 @ 60 Hz (ID 14)	848	480	1088	517	224	31	112	8	60	33,75
DMT 1024 × 768 @ 60 Hz (ID 10h)	1024	768	1344	806	296	35	136	6	60	65,00
CTA 1280 × 720 @ 50 Hz (VIC 19)	1280	720	1980	750	260	25	40	5	50	74,25
CTA 1280 × 720 @ 100 Hz (VIC 41)	1280	720	1980	750	260	25	40	5	100	148,50
CTA 1280 × 720 @ 24 Hz (VIC 60)	1280	720	3300	750	260	25	40	5	24	59,40
CTA 1280 × 720 @ 25 Hz (VIC 61)	1280	720	3960	750	260	25	40	5	25	74,25
CTA 1280 × 720 @ 30 Hz (VIC 62)	1280	720	3300	750	260	25	40	5	30	74,25
CTA 1280 × 720 @ 24 Hz (VIC 65)	1280	720	3300	750	260	25	40	5	24	59,40
CTA 1280 × 720 @ 25 Hz (VIC 66)	1280	720	3960	750	260	25	40	5	25	74,25
CTA 1280 × 720 @ 30 Hz (VIC 67)	1280	720	3300	750	260	25	40	5	30	74,25
CTA 1280 × 720 @ 50 Hz (VIC 68)	1280	720	1980	750	260	25	40	5	50	74,25
CTA 1280 × 720 @ 60 Hz (VIC 69)	1280	720	1650	750	260	25	40	5	60	74,25
CTA 1280 × 720 @ 100 Hz (VIC 70)	1280	720	1980	750	260	25	40	5	100	148,50
CTA 1280 × 720 @ 120 Hz (VIC 71)	1280	720	1650	750	260	25	40	5	120	148,50
CTA 1280 × 720 @ 48 Hz (VIC 108)	1280	720	2500	750	260	25	40	5	48	90,00
CTA 1280 × 720 @ 48 Hz (VIC 109)	1280	720	2500	750	260	25	40	5	48	90,00
CTA 1280 × 720 @ 60 Hz (VIC 4)	1280	720	1650	750	260	25	40	5	60	74,25
CTA 1280 × 720 @ 120 Hz (VIC 47)	1280	720	1650	750	260	25	40	5	120	148,50
CVT 1280 × 768 @ 60 Hz [RB1]	1280	768	1440	790	112	19	32	7	60	68,26
DMT 1280 × 768 @ 60 Hz (ID 17h)	1280	768	1664	798	320	27	128	7	60	79,67
DMT 1280 × 800 @ 60 Hz (ID 1Bh) [RB1]	1280	800	1440	823	112	20	32	6	60	71,11
DMT 1280 × 800 @ 60 Hz (ID 1Ch)	1280	800	1680	831	328	28	128	6	60	83,76
DMT 1280 × 960 @ 60 Hz (ID 20h)	1280	960	1800	1000	424	39	112	3	60	108,00
DMT 1280 × 1024 @ 60 Hz (ID 23h)	1280	1024	1688	1066	360	41	112	3	60	107,96
DMT 1360 × 768 @ 60 Hz (ID 27h)	1360	768	1792	795	368	24	112	6	60	85,48
DMT 1400 × 1050 @ 60 Hz (ID 29h) [RB1]	1400	1050	1560	1080	112	27	32	4	60	101,09
DMT 1400 × 1050 @ 60 Hz (ID 2Ah)	1400	1050	1864	1089	376	36	144	4	60	121,79

*) CVT: Coordinated Video Timings (CVT; VESA-2021-09-27 v2.0)

DMT: VESA and Industry Standards and Guidelines for Computer Display Monitor Timings

CTA: A DTV Profile for Uncompressed High Speed Digital Interfaces (CTA-861-H)

Description*	HA	VA	HT	VT	HST	VST	HSYN	VSYN	FR	Pixel Clock (MHz)
CTA 1440 × 240 @ 60 Hz (VIC 8)	1440	240	1716	263	238	18	124	3	60	27,00
CTA 1440 × 240 @ 60 Hz (VIC 9)	1440	240	1716	263	238	18	124	3	60	27,00
CTA 1440 × 480 @ 60 Hz (VIC 14)	1440	480	1716	525	244	36	124	6	60	54,00
CTA 1440 × 480 @ 60 Hz (VIC 15)	1440	480	1716	525	244	36	124	6	60	54,00
CTA 1440 × 576 @ 50 Hz (VIC 22)	1440	576	1728	625	264	22	126	3	50	54,00
CTA 1440 × 288 @ 50 Hz (VIC 23)	1440	288	1728	314	264	22	126	3	50	27,00
CTA 1440 × 288 @ 50 Hz (VIC 24)	1440	288	1728	314	264	22	126	3	50	27,00
CTA 1440 × 576 @ 50 Hz (VIC 29)	1440	576	1728	625	264	44	128	5	50	54,00
CTA 1440 × 576 @ 50 Hz (VIC 30)	1440	576	1728	625	264	44	128	5	50	54,00
CVT 1600 × 1200 @ 60 Hz [RB1]	1600	1200	1760	1235	112	32	32	4	60	130,42
DMT 1600 × 1200 @ 60 Hz (ID 33h)	1600	1200	2160	1250	496	49	192	3	60	162,00
CTA 1680 × 720 @ 24 Hz (VIC 79)	1680	720	3300	750	260	25	40	5	24	59,40
CTA 1680 × 720 @ 25 Hz (VIC 80)	1680	720	3168	750	260	25	40	5	25	59,40
CTA 1680 × 720 @ 30 Hz (VIC 81)	1680	720	2640	750	260	25	40	5	30	59,40
CTA 1680 × 720 @ 50 Hz (VIC 82)	1680	720	2200	750	260	25	40	5	50	82,50
CTA 1680 × 720 @ 100 Hz (VIC 84)	1680	720	2000	825	260	100	40	5	100	165,00
CTA 1680 × 720 @ 48 Hz (VIC 110)	1680	720	2750	750	260	25	40	5	48	99,00
CTA 1680 × 720 @ 60 Hz (VIC 83)	1680	720	2200	750	260	25	40	5	60	99,00
CTA 1680 × 720 @ 120 Hz (VIC 85)	1680	720	2000	825	260	100	40	5	120	198,00
DMT 1680 × 1050 @ 60 Hz (ID 39h) [RB1]	1680	1050	1840	1080	112	27	32	6	60	119,23
DMT 1680 × 1050 @ 60 Hz (ID 3Ah)	1680	1050	2240	1089	456	36	176	6	60	146,36
DMT 1792 × 1344 @ 60 Hz (ID 3Eh)	1792	1344	2448	1394	528	49	200	3	60	204,75
DMT 1856 × 1392 @ 60 Hz (ID 41h)	1856	1392	2528	1439	576	46	224	3	60	218,27
CTA 1920 × 1080 @ 50 Hz (VIC 31)	1920	1080	2640	1125	192	41	44	5	50	148,50
CTA 1920 × 1080 @ 24 Hz (VIC 32)	1920	1080	2750	1125	192	41	44	5	24	74,25
CTA 1920 × 1080 @ 25 Hz (VIC 33)	1920	1080	2640	1125	192	41	44	5	25	74,25
CTA 1920 × 1080 @ 100 Hz (VIC 64)	1920	1080	2640	1125	192	41	44	5	100	297,00
CTA 1920 × 1080 @ 24 Hz (VIC 72)	1920	1080	2750	1125	192	41	44	5	24	74,25
CTA 1920 × 1080 @ 25 Hz (VIC 73)	1920	1080	2640	1125	192	41	44	5	25	74,25
CTA 1920 × 1080 @ 30 Hz (VIC 74)	1920	1080	2200	1125	192	41	44	5	30	74,25
CTA 1920 × 1080 @ 50 Hz (VIC 75)	1920	1080	2640	1125	192	41	44	5	50	148,50
CTA 1920 × 1080 @ 60 Hz (VIC 76)	1920	1080	2200	1125	192	41	44	5	60	148,50
CTA 1920 × 1080 @ 100 Hz (VIC 77)	1920	1080	2640	1125	192	41	44	5	100	297,00
CTA 1920 × 1080 @ 120 Hz (VIC 78)	1920	1080	2200	1125	192	41	44	5	120	297,00
CVT 1920 × 1080 @ 30 Hz [RB1]	1920	1080	2080	1096	112	13	32	5	30	68,39
CVT 1920 × 1080 @ 30 Hz [RB2]	1920	1080	2000	1096	72	14	32	8	30	65,76
CVT 1920 × 1080 @ 144 Hz [RB3]	1920	1080	2080	1157	152	14	32	8	144	346,66
CVT 1920 × 1080 @ 200 Hz [RB3]	1920	1080	2080	1190	152	14	32	8	200	495,21
CTA 1920 × 1080 @ 30 Hz (VIC 34)	1920	1080	2200	1125	192	41	44	5	30	74,25
CVT 1920 × 1080 @ 60 Hz [RB1]	1920	1080	2080	1111	112	28	32	5	60	138,65
CVT 1920 × 1080 @ 60 Hz	1920	1080	2000	1111	72	14	32	8	60	133,32
DMT 1920 × 1080 @ 60 Hz (ID 52h)	1920	1080	2200	1125	192	41	44	5	60	148,50
CTA 1920 × 1080 @ 60 Hz (VIC 16)	1920	1080	2200	1125	192	41	44	5	60	148,50
CVT 1920 × 1080 @ 120 Hz [RB1]	1920	1080	2080	1144	112	61	32	5	120	285,54
CVT 1920 × 1080 @ 120 Hz [RB2]	1920	1080	2000	1144	72	14	32	8	120	274,56
CTA 1920 × 1080 @ 120 Hz (VIC 63)	1920	1080	2200	1125	192	41	44	5	120	297,00

*) CVT: Coordinated Video Timings (CVT; VESA-2021-09-27 v2.0)

DMT: VESA and Industry Standards and Guidelines for Computer Display Monitor Timings

CTA: A DTV Profile for Uncompressed High Speed Digital Interfaces (CTA-861-H)

Description*	HA	VA	HT	VT	HST	VST	HSYN	VSYN	FR	Pixel Clock (MHz)
CTA 1920 × 1080 @ 48 Hz (VIC 111)	1920	1080	2750	1125	192	41	44	5	48	148,50
CTA 1920 × 1080 @ 48 Hz (VIC 112)	1920	1080	2750	1125	192	41	44	5	48	148,50
DMT 1920 × 1200 @ 60 Hz (ID 45h)	1920	1200	2592	1245	536	42	200	6	60	193,62
DMT 1920 × 1440 @ 60 Hz (ID 49h)	1920	1440	2600	1500	552	59	208	3	60	234,00
CVT 2048 × 1536 @ 60 Hz [RB1]	2048	1536	2208	1580	112	41	32	4	60	209,32
CTA 2560 × 1080 @ 24 Hz (VIC 86)	2560	1080	3750	1100	192	16	44	5	24	99,00
CTA 2560 × 1080 @ 25 Hz (VIC 87)	2560	1080	3200	1125	192	41	44	5	25	90,00
CTA 2560 × 1080 @ 30 Hz (VIC 88)	2560	1080	3520	1125	192	41	44	5	30	118,80
CTA 2560 × 1080 @ 50 Hz (VIC 89)	2560	1080	3300	1125	192	41	44	5	50	185,63
CTA 2560 × 1080 @ 100 Hz (VIC 91)	2560	1080	2970	1250	192	166	44	5	100	371,25
CVT 2560 × 1440 @ 60 Hz [RB2]	2560	1440	2640	1481	72	14	32	8	60	234,59
CVT 2560 × 1440 @ 60 Hz [RB1]	2560	1440	2720	1481	112	38	32	5	60	241,70
CVT 2560 × 1440 @ 144 Hz [RB3]	2560	1440	2720	1543	152	14	32	8	144	604,57
CVT 2560 × 1440 @ 200 Hz [RB3]	2560	1440	2720	1586	152	14	32	8	200	863,09
CTA 2560 × 1080 @ 48 Hz (VIC 113)	2560	1080	3750	1100	192	16	44	5	48	198,00
CVT 2560 × 1080 @ 60 Hz	2560	1080	3424	1120	704	37	272	10	60	230,09
CVT 2560 × 1080 @ 60 Hz [RB1]	2560	1080	2720	1111	112	28	32	10	60	181,32
CVT 2560 × 1080 @ 144 Hz [RB3]	2560	1080	2720	1157	152	14	32	8	144	453,33
CVT 2560 × 1080 @ 200 Hz [RB3]	2560	1080	2720	1190	152	14	32	8	200	647,59
CTA 2560 × 1080 @ 60 Hz (VIC 90)	2560	1080	3000	1100	192	16	44	5	60	198,00
CTA 2560 × 1080 @ 120 Hz (VIC 92)	2560	1080	3300	1250	192	16	44	5	120	495,00
DMT 2560 × 1600 @ 60 Hz (ID 4Dh)	2560	1600	3504	1658	752	55	280	6	60	348,58
DMT 2560 × 1600 @ 60 Hz (ID 4Ch) [RB1]	2560	1600	2720	1646	112	43	32	6	60	268,63
CTA 2880 × 240 @ 60 Hz (VIC 12)	2880	240	3432	263	476	18	248	3	60	54,00
CTA 2880 × 240 @ 60 Hz (VIC 13)	2880	240	3432	263	476	18	248	3	60	54,00
CTA 2880 × 288 @ 50 Hz (VIC 27)	2880	288	3456	314	528	22	252	3	50	54,00
CTA 2880 × 288 @ 50 Hz (VIC 28)	2880	288	3456	314	528	22	252	3	50	54,00
CTA 2880 × 480 @ 60 Hz (VIC 35)	2880	480	3432	525	488	36	248	6	60	108,00
CTA 2880 × 480 @ 60 Hz (VIC 36)	2880	480	3432	525	488	36	248	6	60	108,00
CTA 2880 × 576 @ 50 Hz (VIC 37)	2880	576	3456	625	528	44	256	5	50	108,00
CTA 2880 × 576 @ 50 Hz (VIC 38)	2880	576	3456	625	528	44	256	5	50	108,00
2880 × 1440 @ 60 Hz	2880	1440	2976	1456	48	8	8	1	60	259,98
CVT 3440 × 1440 @ 60 Hz	3440	1440	4688	1493	992	50	368	10	60	419.951
CVT 3440 × 1440 @ 60 Hz [RB1]	3440	1440	3600	1481	112	38	32	10	60	319.896
CVT 3440 × 1440 @ 60 Hz [RB2]	3440	1440	3520	1481	72	14	32	8	60	312.787
CVT 3440 × 1440 @ 120 Hz	3440	1440	4800	1545	1064	102	384	10	120	889.92
CVT 3440 × 1440 @ 120 Hz [RB1]	3440	1440	3600	1525	112	82	32	10	120	658.80
CVT 3440 × 1440 @ 120 Hz [RB2]	3440	1440	3520	1525	72	14	32	8	120	644.16
CVT 3440 × 1440 @ 165 Hz	3440	1440	4832	1588	1080	145	384	10	165	1266.081
CVT 3440 × 1440 @ 165 Hz [RB1]	3440	1440	3600	1559	112	116	32	10	165	926.046
CVT 3440 × 1440 @ 165 Hz [RB2]	3440	1440	3520	1559	72	14	32	8	165	905.467
CVT 3440 × 1440 @ 200 Hz	3440	1440	4848	1622	1088	179	384	10	200	1572.691
CVT 3440 × 1440 @ 200 Hz [RB1]	3440	1440	3600	1586	112	143	32	10	200	1141.92
CVT 3440 × 1440 @ 200 Hz [RB2]	3440	1440	3520	1586	72	14	32	8	200	1116.544
CVT 3440 × 1440 @ 240 Hz	3440	1440	4848	1663	1088	220	384	10	240	1934.934
CVT 3440 × 1440 @ 240 Hz [RB1]	3440	1440	3600	1619	112	176	32	10	240	1398.816
CVT 3440 × 1440 @ 240 Hz [RB2]	3440	1440	3520	1619	72	14	32	8	240	1367.731
CVT 3840 × 2160 @ 30 Hz [RB1]	3840	2160	4000	2191	112	28	32	5	30	262,92
CVT 3840 × 2160 @ 30 Hz [RB2]	3840	2160	3920	2191	72	14	32	8	30	257,66
CVT 3840 × 2160 @ 60 Hz [RB1]	3840	2160	4000	2222	112	59	32	5	60	533,28
CVT 3840 × 2160 @ 60 Hz [RB2]	3840	2160	3920	2222	72	14	32	8	60	522,61

CVT 3840 × 2160 @ 60 Hz [RB3]	3840	2160	4000	2222	152	14	32	8	60	533,47
CTA 3840 × 2160 @ 60 Hz (VIC 97)	3840	2160	4400	2250	384	82	88	10	60	594,00
CTA 3840 × 2160 @ 24 Hz (VIC 93)	3840	2160	5500	2250	384	82	88	10	24	297,00
CTA 3840 × 2160 @ 25 Hz (VIC 94)	3840	2160	5280	2250	384	82	88	10	25	297,00
CTA 3840 × 2160 @ 30 Hz (VIC 95)	3840	2160	4400	2250	384	82	88	10	30	297,00
CTA 3840 × 2160 @ 50 Hz (VIC 96)	3840	2160	5280	2250	384	82	88	10	50	594,00
CTA 3840 × 2160 @ 24 Hz (VIC 103)	3840	2160	5500	2250	384	82	88	10	24	297,00
CTA 3840 × 2160 @ 25 Hz (VIC 104)	3840	2160	5280	2250	384	82	88	10	25	297,00
CTA 3840 × 2160 @ 30 Hz (VIC 105)	3840	2160	4400	2250	384	82	88	10	30	297,00

*) CVT: Coordinated Video Timings (CVT; VESA-2021-09-27 v2.0)

DMT: VESA and Industry Standards and Guidelines for Computer Display Monitor Timings

CTA: A DTV Profile for Uncompressed High Speed Digital Interfaces (CTA-861-H)

Description*	HA	VA	HT	VT	HST	VST	HSYN	VSYN	FR	Pixel Clock (MHz)
CTA 3840 × 2160 @ 50 Hz (VIC 106)	3840	2160	5280	2250	384	82	88	10	50	594,00
CTA 3840 × 2160 @ 60 Hz (VIC 107)	3840	2160	4400	2250	384	82	88	10	60	594,00
CTA 3840 × 2160 @ 48 Hz (VIC 114)	3840	2160	5500	2250	384	82	88	10	48	594,00
CTA 3840 × 2160 @ 48 Hz (VIC 116)	3840	2160	5500	2250	384	82	88	10	48	594,00
CTA 3840 × 2160 @ 100 Hz (VIC 117)	3840	2160	5280	2250	384	82	88	10	100	1188,00
CTA 3840 × 2160 @ 100 Hz (VIC 119)	3840	2160	5280	2250	384	82	88	10	100	1188,00
CTA 3840 × 2160 @ 120 Hz (VIC 120)	3840	2160	4400	2250	384	82	88	10	120	1188,00
CVT 4096 × 2160 @ 60 Hz [RB2]	4096	2160	4176	2222	72	14	32	8	60	556,74
CVT 4096 × 2160 @ 60 Hz [RB1]	4096	2160	4256	2222	112	59	32	10	60	567,41
CVT 4096 × 2160 @ 60 Hz [RB3]	4096	2160	4256	2222	152	14	32	8	60	567,61
CTA 4096 × 2160 @ 60 Hz (VIC 102)	4096	2160	4400	2250	216	82	88	10	60	594,00
CTA 4096 × 2160 @ 120 Hz (VIC 219)	4096	2160	4400	2250	216	82	88	10	120	1188,00
CTA 4096 × 2160 @ 100 Hz (VIC 218)	4096	2160	5280	2250	384	82	88	10	100	1188,00
CTA 4096 × 2160 @ 50 Hz (VIC 101)	4096	2160	5280	2250	216	82	88	10	50	594,00
CTA 4096 × 2160 @ 48 Hz (VIC 115)	4096	2160	5500	2250	384	82	88	10	48	594,00
CTA 4096 × 2160 @ 24 Hz (VIC 98)	4096	2160	5500	2250	384	82	88	10	24	297,00
CTA 4096 × 2160 @ 25 Hz (VIC 99)	4096	2160	5280	2250	216	82	88	10	25	297,00
CTA 4096 × 2160 @ 30 Hz (VIC 100)	4096	2160	4400	2250	216	82	88	10	30	297,00
CVT 3840 × 2160 @ 120 Hz [RB1]	3840	2160	4000	2287	112	124	32	5	120	1097,76
CVT 3840 × 2160 @ 120 Hz [RB2]	3840	2160	3920	2287	72	14	32	8	120	1075,80
CTA 3840 × 2160 @ 120 Hz (VIC 118)	3840	2160	4400	2250	384	82	88	10	120	1188,00
CVT 5120 × 2160 @ 30 Hz [RB1]	5120	2160	5280	2191	112	28	32	10	30	347,05
CVT 5120 × 2160 @ 30 Hz [RB2]	5120	2160	5200	2191	72	14	32	8	30	341,80
CTA 5120 × 2160 @ 30 Hz (VIC 123)	5120	2160	6000	2200	216	32	88	10	30	396,00
CVT 5120 × 2160 @ 60 Hz [RB1]	5120	2160	5280	2222	112	59	32	10	60	703,93
CVT 5120 × 2160 @ 60 Hz [RB2]	5120	2160	5200	2222	72	14	32	6	60	693,26
CTA 5120 × 2160 @ 60 Hz (VIC 126)	5120	2160	5500	2250	216	82	88	10	60	742,50
5120 × 2880 @ 60 Hz	5120	2880	5280	2962	112	79	32	5	60	938,36
5120 × 2880 @ 60 Hz	5120	2880	5200	2962	72	14	32	8	60	924,14
5120 × 2880 @ 60 Hz	5120	2880	5280	2962	152	14	32	8	60	938,69
CTA 5120 × 2160 @ 48 Hz (VIC 124)	5120	2160	6250	2475	384	307	88	10	48	742,50
CTA 5120 × 2160 @ 50 Hz (VIC 125)	5120	2160	6600	2250	384	82	88	10	50	742,50
CTA 5120 × 2160 @ 100 Hz (VIC 127)	5120	2160	6600	2250	384	82	88	10	100	1485,00
CTA 5120 × 2160 @ 25 Hz (VIC 122)	5120	2160	7200	2200	384	32	88	10	25	396,00
CTA 5120 × 2160 @ 24 Hz (VIC 121)	5120	2160	7500	2200	384	32	88	10	24	396,00
CVT 7680 × 4320 @ 30 Hz [RB2]	7680	4320	7760	4381	72	14	32	8	30	1019,90

CVT 7680 × 4320 @ 30 Hz [RB1]	7680	4320	7840	4381	112	58	32	5	30	1030,41
CVT 7680 × 4320 @ 60 Hz [RB2]	7680	4320	7760	4443	72	14	32	8	60	2068,66
CVT 7680 × 4320 @ 100 Hz [RB2]	7680	4320	7760	4529	72	14	32	8	100	3514,50
CVT 7680 × 4320 @ 60 Hz [RB1]	7680	4320	7840	4443	112	120	32	5	60	2089,99
CVT 7680 × 4320 @ 100 Hz [RB1]	7680	4320	7840	4529	112	206	32	5	100	3550,74
CTA 7680 × 4320 @ 120 Hz (VIC 201)	7680	4320	8800	4500	768	164	176	20	120	4752,00
CTA 7680 × 4320 @ 120 Hz (VIC 209)	7680	4320	8800	4500	768	164	176	20	120	4752,00
CTA 7680 × 4320 @ 30 Hz (VIC 204)	7680	4320	9000	4400	768	64	176	20	30	1188,00
CTA 7680 × 4320 @ 30 Hz (VIC 196)	7680	4320	9000	4400	768	64	176	20	30	1188,00
CTA 7680 × 4320 @ 60 Hz (VIC 207)	7680	4320	9000	4400	768	64	176	20	60	2376,00
CTA 7680 × 4320 @ 60Hz (VIC 199)	7680	4320	9000	4400	768	64	176	20	60	2376,00

*) CVT: Coordinated Video Timings (CVT; VESA-2021-09-27 v2.0)

DMT: VESA and Industry Standards and Guidelines for Computer Display Monitor Timings

CTA: A DTV Profile for Uncompressed High Speed Digital Interfaces (CTA-861-H)

Description*	HA	VA	HT	VT	HST	VST	HSYN	VSYN	FR	Pixel Clock (MHz)
CTA 7680 × 4320 @ 100 Hz (VIC 208)	7680	4320	10560	4500	768	164	176	20	100	4752,00
CTA 7680 × 4320 @ 100 Hz (VIC 200)	7680	4320	10560	4500	768	164	176	20	100	4752,00
CTA 7680 × 4320 @ 25 Hz (VIC 203)	7680	4320	10800	4400	768	64	176	20	25	1188,00
CTA 7680 × 4320 @ 25 Hz (VIC 195)	7680	4320	10800	4400	768	64	176	20	25	1188,00
CTA 7680 × 4320 @ 50 Hz (VIC 198)	7680	4320	10800	4400	768	64	176	20	50	2376,00
CTA 7680 × 4320 @ 50 Hz (VIC 206)	7680	4320	10800	4400	768	64	176	20	50	2376,00
CTA 7680 × 4320 @ 24 Hz (VIC 194)	7680	4320	11000	4500	768	164	176	20	24	1188,00
CTA 7680 × 4320 @ 48 Hz (VIC 197)	7680	4320	11000	4500	768	164	176	20	48	2376,00
CTA 7680 × 4320 @ 24 Hz (VIC 202)	7680	4320	11000	4500	768	164	176	20	24	1188,00
CTA 7680 × 4320 @ 48 Hz (VIC 205)	7680	4320	11000	4500	768	164	176	20	48	2376,00
Unigraf 10240 x 4320 @ 30 Hz [RB1]	10240	4320	11000	4500	112	58	32	5	30	1485,00
Unigraf 10240 x 4320 @ 30 Hz [RB2]	10240	4320	11000	4500	72	14	32	8	30	1485,00
CTA 10240 x 4320 @ 24 Hz (VIC 210)	10240	4320	12500	4950	768	614	176	20	24	1485,00
CTA 10240 x 4320 @ 25 Hz (VIC 211)	10240	4320	13500	4400	768	64	176	20	25	1485,00
CTA 10240 x 4320 @ 30 Hz (VIC 212)	10240	4320	11000	4500	472	164	176	20	30	1485,00
CTA 10240 x 4320 @ 48 Hz (VIC 213)	10240	4320	12500	4950	768	614	176	20	48	2970,00
CTA 10240 x 4320 @ 50 Hz (VIC 214)	10240	4320	13500	4400	768	64	176	20	50	2970,00
CTA 10240 x 4320 @ 60 Hz (VIC 215)	10240	4320	11000	4500	472	164	176	20	60	2970,00
CTA 10240 x 4320 @ 100 Hz (VIC 216)	10240	4320	13200	4500	768	164	176	20	100	5940,00
CTA 10240 x 4320 @ 120 Hz (VIC 217)	10240	4320	11000	4500	472	164	176	20	120	5940,00





*) CVT: Coordinated Video Timings (CVT; VESA-2021-09-27 v2.0)

DMT: VESA and Industry Standards and Guidelines for Computer Display Monitor Timings

CTA: A DTV Profile for Uncompressed High Speed Digital Interfaces (CTA-861-H)

APPENDIX E: PREDEFINED PATTERNS

Fixed Patterns

Selection	Pattern	Description
Disabled		The links are activated but no video data transferred
Color Bar		100% intensity color bars of all primaries and mixed combinations.
Chessboard		8 by 8 chessboard with black (0%) and 100% intensity white
Solid Color		Solid color. User selected RGB values
Solid White		100% white
Solid Red		100% red
Solid Green		100% green
Solid Blue		100% blue
White V-Strips		Vertical stripes of black (0%) and white (100%). Parameters set the widths of the black and white stripes in pixels respectively. Default black / white = 20 / 20 pixels. Parameter range 1 to 1000.
RGB Wide Strips		16 pixels high horizontal red, green, blue and white stripes. Intensity is increased from 0 to 100% with steps defined by the given parameter (Color Step = cs) and selected color. (step = cs*color_depth/256). "n" range 0 to 5000 (default 100).
Color Ramp		Color Ramp test pattern defined by VESA DisplayPort Link Layer Compliance Test Specification.
Color Square		Color Square test pattern defined by VESA DisplayPort Link Layer Compliance Test Specification. Color mode can be selected between RGB, YCbCr 4:4:4, 4:2:2, 4:2:0 (ITU Rec 601 / 709)
Motion Pattern		Horizontally moving color bar pattern. The pattern is shifted to left one pixel in each frame in a sequence. The length of the sequence is defined with parameter. Range 0 to 34 (default is 20)
Square Window		100% intensity white square horizontally and vertically centered. Height and width defined by parameter as the percentage of height and width of the frame (default 30).

Extended Patterns

Selection	Icon	Description
Select Image		Custom image uploaded by the user. Click on Select ... to browse.
Select DSC Image		Custom DSC compressed image file uploaded by the user. Click on Select ... to browse.
Unigraf PM5544		Vpattern vector pattern based on PM5544
Color Web		Vpattern vector pattern.
Chinese Town Full HD		JPG Bitmap image (1920 x 1080 px)
UG-2111 HLG Narrow		Software generated pattern. HLG Narrow dynamic range.
UG-2111 PQ Narrow		Software generated pattern. PQ Narrow dynamic range.
UG-2111 PQ Full		Software generated pattern. PQ Full dynamic range.
Multi		Vpattern vector pattern. Multi-purpose pattern w square grid, cross-grids, 1x1 cross-hatches, circles, and color bars
SMPTE RP-133		Vpattern vector pattern based on SMPTE RP-133
SMPTE 303M		Vpattern vector pattern. SMPTE 303M; Full Range; RGB values before gamma correction based on D65 and PAL primaries
Blue		Vpattern vector pattern. 100% Blue
CirclesW		Vpattern vector pattern. Concentric circles
Complex		Vpattern vector pattern. Complex Pattern w 64 steps
Green		Vpattern vector pattern. 100% Green
Hor1W-Even		Vpattern vector pattern. Horizontal 1 px wide White bars in even rows
Hor1W-Odd		Vpattern vector pattern. Horizontal 1 px wide White bars in odd rows
Hor4W		Vpattern vector pattern. Horizontal 4 px high White bars
Hor10W		Vpattern vector pattern. Horizontal 10 px high White bars
Hor-10xB		Vpattern vector pattern. 10 pcs horizontal Blue bars
Hor-10G		Vpattern vector pattern. 10 pcs horizontal Green bars

Extended Patterns (cont.)

Selection	Icon	Description
Hor-10xR		Vpattern vector pattern. 10 pcs horizontal Red bars
Hor-10xW		Vpattern vector pattern. 10 pcs horizontal White bars
HorRainbow-1024		Vpattern vector pattern. Horizontal Rainbow Ramps 1024 steps
HorRGBW-1024		Vpattern vector pattern. Horizontal RGBW Ramps 1024 steps
HorScale9		Vpattern vector pattern. Nine Horizontal Color Ramps
HorScaleW-64		Vpattern vector pattern. Horizontal White ramp 64 steps
HorScaleW-128		Vpattern vector pattern. Horizontal White ramp 128 steps
HorScaleW-X2		Vpattern vector pattern. Horizontal White ramp w edges 128 steps
InnerBox-BKtoB		Vpattern vector pattern. InnerBox pattern from Black to Blue
InnerBox-BKtoG		Vpattern vector pattern. InnerBox pattern from Black to Green
InnerBox-BKtoR		Vpattern vector pattern. InnerBox pattern from Black to Red
InnerBox-BKtoW		Vpattern vector pattern. InnerBox pattern from Black to White
InnerBoxMIX		Vpattern vector pattern. InnerBox pattern mixed hues.
InnerBox-RtoB		Vpattern vector pattern. InnerBox pattern from Red to Blue
Red		Vpattern vector pattern. 100% Red
Ver1W-Even		Vpattern vector pattern. Vertical 1 px wide White bars in even columns
Ver1W-Odd		Vpattern vector pattern. Vertical 1 px wide White bars in odd columns
Ver4W		Vpattern vector pattern. Vertical 4 px wide White bars
Ver10W		Vpattern vector pattern. Vertical 10 px wide White bars
Ver-10xG		Vpattern vector pattern. 10 pcs Vertical Blue bars
Ver-10xR		Vpattern vector pattern. 10 pcs Vertical Blue bars
Ver-10xB		Vpattern vector pattern. 10 pcs Vertical Blue bars
Ver-10xW		Vpattern vector pattern. 10 pcs Vertical Blue bars

Extended Patterns (cont.)

Selection	Icon	Description
VerBars75%		Vpattern vector pattern. Vertical 75% intensity Color bars
VerBars100%		Vpattern vector pattern. Vertical 100% intensity Color bars
VerRGBW-1024		Vpattern vector pattern. Vertical RGBW Ramps 1024 steps
X-HatchBK-C		Vpattern vector pattern. Black 16 x12 Grid w Circle on White background
X-HatchW		Vpattern vector pattern. White 16 x12 Grid on Black background
X-HatchW-C		Vpattern vector pattern. White 16 x12 Grid w Circle on Black background
X-HatchW-CC		Vpattern vector pattern. White 16 x12 Grid w Ellipses, Circle and 100% color bars
Gray Box 10		Vpattern vector pattern. China 5.6 White Window 10%
Gray Box 20		Vpattern vector pattern. China 5.6 White Window 20%
Gray Box 30		Vpattern vector pattern. China 5.6 White Window 30%
Gray Box 40		Vpattern vector pattern. China 5.6 White Window 40%
Gray Box 50		Vpattern vector pattern. China 5.6 White Window 50%
Gray Box 60		Vpattern vector pattern. China 5.6 White Window 60%
Gray Box 70		Vpattern vector pattern. China 5.6 White Window 70%
Gray Box 80		Vpattern vector pattern. China 5.6 White Window 80%
Gray Box 90		Vpattern vector pattern. China 5.6 White Window 90%
Gray Box 100		Vpattern vector pattern. China 5.6 White Window 100%
8 Level Gray		Vpattern vector pattern. China 5.5 Ultimate 8 Level Grayscale

Extended Patterns (cont.)

Selection	Icon	Description
Black'n'White Window HDTV		Vpattern vector pattern. China 5.8 Black and White Window(FOR HDTV)
Black'n'White Window SDTV		Vpattern vector pattern. China 5.8 Black and White Window(FOR SDTV)
Black Line HDTV		Vpattern vector pattern. China 5.10 Black Line HDTV
Black Line SDTV		Vpattern vector pattern. China 5.10 Black Line SDTV
Black Window		Vpattern vector pattern. China 5.7 Black Window
Check Board		Vpattern vector pattern. China 5.9 Check Board
Line'n'Window		Vpattern vector pattern. China 5.11 Line and Window
Narrow White Window		Vpattern vector pattern. China 5.19 Narrow White Window
Single Dot		Vpattern vector pattern. China Single Dot
White Line HDTV		Vpattern vector pattern. China 5.10 White Line for HDTV
White Line SDTV		Vpattern vector pattern. China 5.10 White Line for SDTV

More test patterns can be downloaded e.g. from www.icdm-sid.org/

APPENDIX F: VTP PATTERN LANGUAGE

General

The Vpattern definition language (in the following simply “VTP”) is a straightforward yet flexible way of describing test patterns for UCD Generators. This description is providing an introduction and examples of the most usable instructions and parameters.

The VTP language uses text command syntax. Each row represents one drawing instruction. The coordinate system can be either absolute or scaled. In the absolute mode the actual pixel position is referred while in the scaled mode the coordinates refer to the “Drawing resolution” used while drawing. For both absolute and scaling coordinates the origin is the upper left hand corner of the screen.

Terminology

The following terms are used in this document:

Coordinate system: two numerical ranges of integer, positive numbers. E.g. {0,799},{0,599} or {0,10000},{0,10000}.

Coordinates: a tuple of integer, positive numbers used to address a position on an image, e.g. (100,250). The first number is the horizontal position, the second one the vertical position. The actual position is always related to the coordinate system currently in use.

Drawing resolution: the width and height of the space that can be used for drawing, expressed in pixels. E.g., 2560 by 1600.

Drawing area: a 2-dimensional area spanning all of the drawing resolution, expressed in the current coordinate system notation. E.g., if the drawing resolution is 800 x 600 pixels, the drawing area includes all points (x,y) where x = 0 to 799 and y = 0 to 599 in ABSOLUTE mode or x = 0 to 10000 and y = 0 to 10000 in SCALED mode.

Notation

The following notation is used in this document:

- A token is enclosed by characters ‘<’ and ‘>’. For instance, <variable> represents a generic variable.
- Different legal choices for a command parameter are separated by character ‘|’. For instance, <variable> | <number> means that either variable or number can be used as parameters.
- Items that can be repeated 0, 1 or more times are preceded by ‘{’ and followed by ‘*’’. For instance {<number>}* means zero, one or more occurrences of a number.

Syntax rules

The following general syntax rules apply to VTP language files:

- The VTP is a text-based, interpreted language.
- Commands, variables, and constant names are not case-sensitive.
- All text to the right of a semicolon (;) is treated as a comment.
- All strings are delimited by quotation marks (“a string”).
- Quotation mark and backslash characters must be prefixed by a backslash character (a quotation mark character = \”) (a backslash character = \\).
- Filenames cannot contain pathnames.

Commands

Scaling commands

All drawing commands using coordinates can refer either to absolute or scaled coordinates. The absolute coordinate system starts at 0 and its measurement unit is the pixel (vertically the line). It extends up to the maximum drawing resolution in use minus one, expressed in pixels too.

Conversely, the scaled coordinate system ranges from 0 to 10000, independently from the drawing resolution. Its measurement unit is thus a flexible, virtual pixel.

Absolute coordinates provide the fastest drawing speed, but they are resolution specific. Scaled coordinates are resolution independent while introducing a slight speed penalization.

For both systems, the origin (0,0) refers to the upper left hand corner of the screen.

ABSOLUTE

Syntax: ABSOLUTE

This command is normally used in the beginning of the VTP file. All drawing commands issued after ABSOLUTE will have absolute coordinate values, i.e., their coordinates will be interpreted as pixels and lines.

The allowed coordinate values are from 0 to the maximum drawing resolution minus one. For instance, for a drawing resolution of 2560 x 1600 pixels, the allowed coordinate range (x,y) for x is 0 to 2559 and for y 0 to 1599.

Constants MAXX and MAXY can be used in place of the numeric values to achieve basic scaling capabilities.

SCALED

Syntax: SCALED

All drawing commands issued after the SCALED command will have their coordinates interpreted as within a range from 0 to 10000 (10001 possible coordinate values), regardless of the current drawing resolution. Positioning can be calculated as percentages. If you wanted to address a point at 50% of the drawing resolution, then you would use the number 5000. If you wanted 75% you would simply use the 7500.

Graphics Drawing Commands

All of the following graphics drawing commands use the currently selected foreground color for shape perimeter and filling.

LINE

Syntax: `LINE x1 y1 x2 y2`

Draws a line from point (x1,y1) to point (x2,y2).

Example:

You can draw a white diagonal cross using either ABSOLUTE and SCALED coordinate mode and get the same result.

ABSOLUTE ; Set scaling mode to absolute

COLORDEPTH 8 ; 8 bits per color

COLORRGB 255 255 255 ; white

LINE 0 0 MAXX MAXY ; Draw a line from upper left to lower right corner


LINE 0 MAXY MAXX 0 ; Draw a line from lower left to upper right corner

Or if you want a fixed size for 640 x 480 resolution

LINE 0 0 639 479

LINE 0 479 639 0

The pattern will look like this:

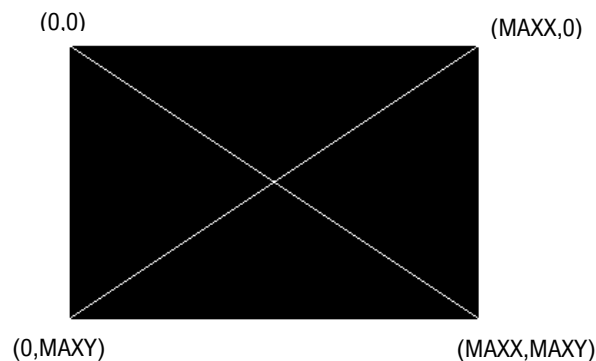

Using SCALED instead of ABSOLUTE.

SCALED

COLORDEPTH 8

COLORRGB 255 255 255

LINE 0 0 10000 10000

LINE 0 10000 10000 0

BOX

Syntax: `BOX x1 y1 x2 y2`

Draws a filled rectangle with upper left corner (x1,y1) and lower right corner (x2,y2).

Example:

This code will create a full white screen with all resolutions.

SCALED

COLORDEPTH 8

COLORRGB 255 255 255

BOX 0 0 10000 10000

DOT

Syntax: DOT x y

Draws a single dot at location (x,y).

FILL

Syntax FILL x y

Initiates a flood fill (or seed fill) with foreground color starting from position (x,y).

CIRCLE


Syntax: CIRCLE x y r

Draws a circle with center point at (x,y) and radius r. Please, note that when using SCALED coordinates radius r is expressed using reference to vertical maximum.

Example:

```
SCALED  
COLORDEPTH 8  
COLORRGB 255 255 255  
CIRCLE 5000 5000 2500
```

The pattern will look like this:

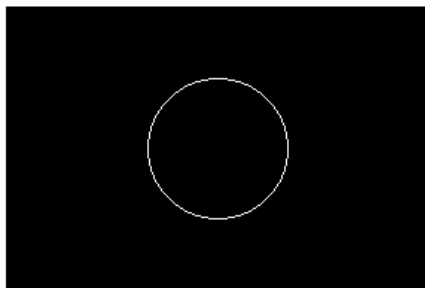


FCIRCLE

Syntax: FCIRCLE x y r

Draws a circle with center point at (x,y) and radius r. Filled with foreground color. Please, note that when using SCALED coordinates radius r is expressed using reference to vertical maximum.

The pattern will look like this:

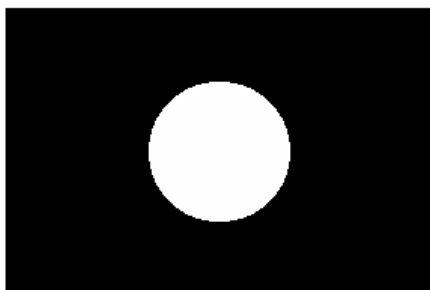

ELLIPSE

```
Syntax: ELLIPSE x y hr vr
```


Draws an ellipse with center point at (x,y), horizontal radius hr and vertical radius vr.

You can use ELLIPSE instead of CIRCLE for example for compensating the stretching in applications where the displayed pixel is not square.

Example:

```
SCALED
COLORDEPTH 8
COLORRGB 255 255 255
ELLIPSE 5000 5000 3000 4000
```

The pattern will look like this:

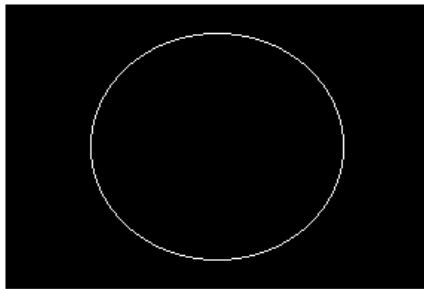

Text Drawing Commands

All of the following commands use the currently selected foreground color for the “foreground” pixels of the font and the currently selected background color for “background” pixels.

TEXTPOS

```
Syntax: TEXTPOS x y
```

Sets the text drawing position to point (x,y).

TEXT

```
Syntax: TEXT <string> | <var> | <const> { <string> | <var> | <const> }*
```

The command executes a CR and LF (carriage return and line feed) and then draws a text string <string>, a variable <var>, a constant <const> or a combination of them starting from the current text position.

<string> parameter is a quoted sequence of characters. If the string contains a quote character (") or a backslash character (\) then it must be preceded with a back slash character (\).

<var> is a parameter variable (A – Z, MAXX, MAXY) defined by SET command.

<const> one of the Timing Variables. Timing variables are defined by currently loaded timing parameters. Please refer to Chapter 3.

Example:

```
ABSOLUTE
COLORDEPTH 8
COLORRGB 255 255 255
TEXTPOS 100 100           ; Text starting point 100 pixels from left edge and
                           ; 100 display lines down from top
TEXT "HRES=" HR " PIXELS" ; This will draw the text HRES then the value of variable HR
                           ; and PIXELS
TEXT "Quote character \" and backslash \\"
```

Program Flow Commands

REPEAT

Syntax: REPEAT <variable> a b s

All commands after between REPEAT and END command are repeated the number of times defined by <variable>. <variable> is set to value a before starting the first iteration loop. At the end of each iteration, variable is incremented by s (variable = variable + s). The REPEAT is terminated when variable reaches or exceeds value b, and the execution continues from the command following the END command. For example:

```
SCALED
COLORDEPTH 8
COLORRGB 255 255 255
REPEAT W 0 10000 200
LINE W 0 W 10000
END
```

A maximum of 2 REPEAT loops can be nested (placed inside each other).

END

Syntax: END

This command follows a REPEAT command and defines a group of instructions to be repeated.

Color Commands

The user can assign the used colors in two basic ways: either by giving the actual Red, Green and Blue (or R, G and B) color component values or using pre-defined color palettes. The first method is referred as True Color Mode and the latter as Palette Mode.

In True Color Mode the numerical values given for R, G and B will be the actual output signal intensity values for the pixel in question. The numerical color value in Palette Mode will act as an address (or index) to a pre-defined color in a 256 color table. The output signal intensity will be the R, G and B value entry in the cell where the address points to.

Palette mode can only be used with True Color Mode is .

COLORDEPTH

Syntax: COLORDEPTH n

The command is used in True Color Mode (COLORMODE 2), to define the number of bits used for each color component (R, G and B) of the data to be displayed. Possible values for the parameter n are 6, 8, 10 and 12. If COLORDEPTH command is not used, 10 bits per color is used.

Example: To display a bitmap that uses 8 bits for r, g and b (24-bit colors) you have to use COLORDEPTH 8.

Command	Nr of color bits	Range of values for R, G and B
COLORDEPTH 6	18	0 to 63
COLORDEPTH 8	24	0 to 255
COLORDEPTH 10	30	0 to 1023
COLORDEPTH 12	36	0 to 4095

COLORDEPTH can be used only once in a VTP file, and it has to be placed before all drawing instructions it is supposed to affect.

COLORRGB

Syntax: COLORRGB r g b

The command defines the foreground color used for the following drawing commands. The command is used in True Color Mode only.

The range of values for r, g and b depends on the bits per color used. If not changed with COLORDEPTH command, 10 bits per color is used. Please refer to COLORDEPTH command for range of values.

Various Commands

SET

Syntax: SET <variable> n

Assigns value n to programming variable called variable. n must be a positive number or zero.

Variables

Timing Variables

Timing Variable	Value name
HF	Drawing resolution horizontal size minus one
HP	Drawing resolution vertical size minus one
HR	Current timing horizontal frequency (MHz?)
HA	Current timing horizontal period (pixels)
HS	Current timing horizontal resolution (pixels)
HBP	Current timing horizontal active time (pixels)
HFP	Current timing horizontal sync length (pixels)
VF	Current timing horizontal back porch length (pixels)
VP	Current timing horizontal front porch length (pixels)
VR	Current timing vertical frequency (MHz?)
VA	Current timing vertical period (lines)
VS	Current timing vertical resolution (lines)
VBP	Current timing vertical active time (lines)
VFP	Current timing vertical sync length (lines)
PF	Current timing vertical back porch length (lines)
HLB	Current timing vertical front porch length (lines)
HRB	Pixel frequency (Mpps?)
VTB	Drawing resolution horizontal size minus one
VBB	Drawing resolution vertical size minus one

Expressions

Any command numeric parameter can be replaced by an expression, according to the syntax below:

`<term> ::= <variable> | <constant> | <number>`

`<expression> ::= <term> { '+' | '-' | '*' | '/' | '%' } <term>`

`<parameter> ::= <term> | <expression>`

Some example of legal parameter values:

B

MAXX

342

B + MAXX

B / 2

*B * C*

Expressions have always positive integers or zero value. When an expression evaluates to a negative value, it is set automatically to zero. Number values are also always positive integers or zero.

Assignments

A variable can be assigned a numerical value by using the SET command.

The second parameter of the SET command can be replaced by an expression thus allowing commands like those here below:

```
SET C B+MAXX
```

```
SET K K+1
```

```
SET K A+B
```

Default state at VTP execution startup

<i>Coordinate system:</i>	ABSOLUTE
<i>Foreground color:</i>	1023 1023 1023
<i>Background color:</i>	0 0 0
<i>Image:</i>	Output image is cleared (all black)
<i>Variables:</i>	All variables are initialized to zero
<i>Color depth:</i>	COLORDEPTH 10

APPENDIX G: FIRMWARE UPDATE WITH QUARTUS

The chapter below describes a procedure for updating UCD-4XX Series Firmware when the normal FW Update procedure fails.

Note


The firmware recovery procedure is only available for Windows operating system.

Downloading Tools

The Recovery patch is programmed to UCD Device with a separate tool called **Intel® Quartus® Prime Lite Edition Design Software Version 18.1 for Windows**. The tool can be downloaded from the **Intel® FPGA** website:

<https://www.intel.com/content/www/us/en/software-kit/665990/intel-quartus-prime-lite-edition-design-software-version-18-1-for-windows.html>


1. On the download page, please select section “**Individual Files**”. Please download the software under “**Intel® Quartus® Prime (includes Nios® II EDS)**”.
2. Please download and install the tool using defaults on the PC.

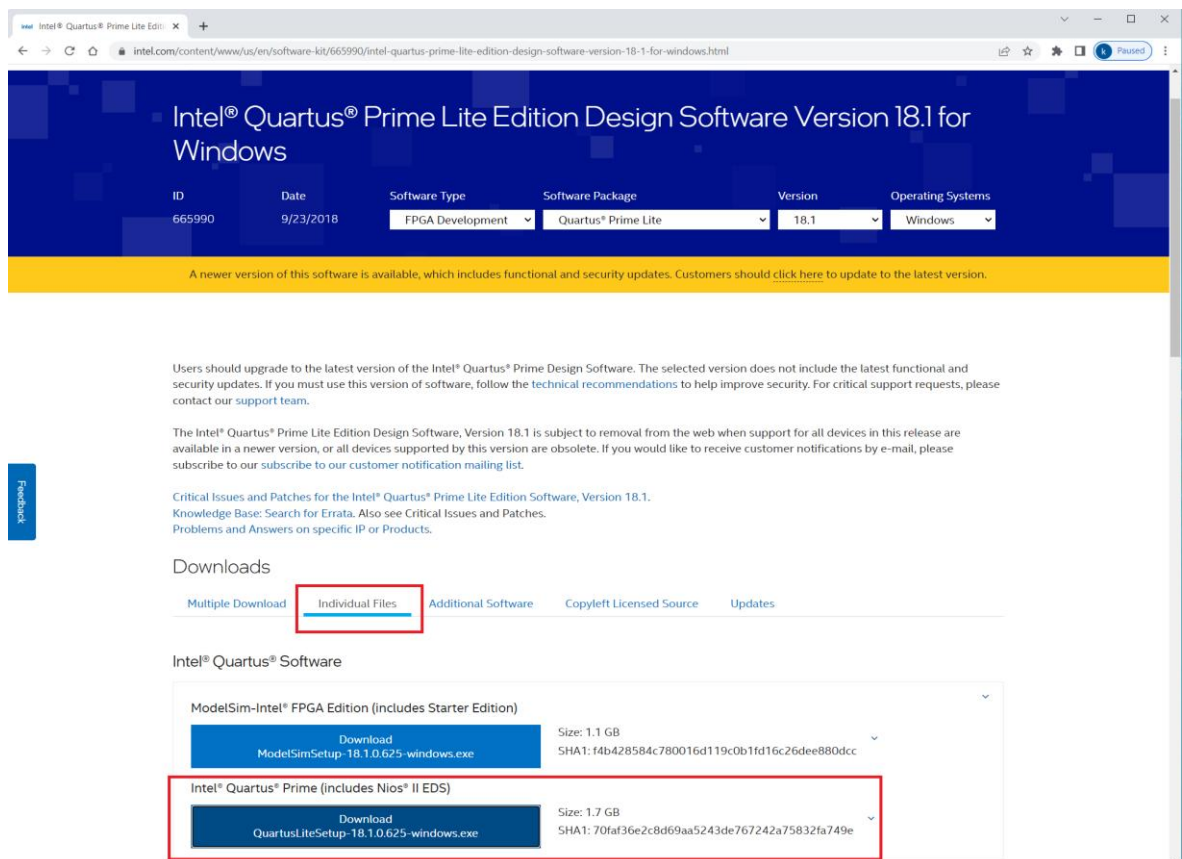

Step 1

1. Connect the UCD device to the power supply and switch on power.
2. Connect the UCD device with a USB cable to the PC through USB connector (Please refer to chapter **Product Description > Connections** earlier in this document).
3. Please locate the *UCD-4xx_recovery.zip* file. By default the file is at C:\Program Files\Unigraf\Unigraf UCD Tools\recovery.

4. Extract the content of the ZIP file in a folder on your PC (e.g., C:\Temp).
5. Open Windows **Command Prompt** application.
6. Navigate to the directory to where the ZIP file was extracted (e.g. `cd \Temp`).
7. Connect a micro-USB cable to the **JTAG** connector on the UCD device (Please refer to chapter **Product Description > Connections** earlier in this document).
8. In the directory where the ZIP file was extracted (e.g. c:\Temp) please edit file **recovery.bat**
9. On line three, the parameter "QUARTUS_DIR" is set to point to the folder where the Quartus Programmer was installed (by default **C:\intelFPGA_lite\18.1**). Edit and save as needed.

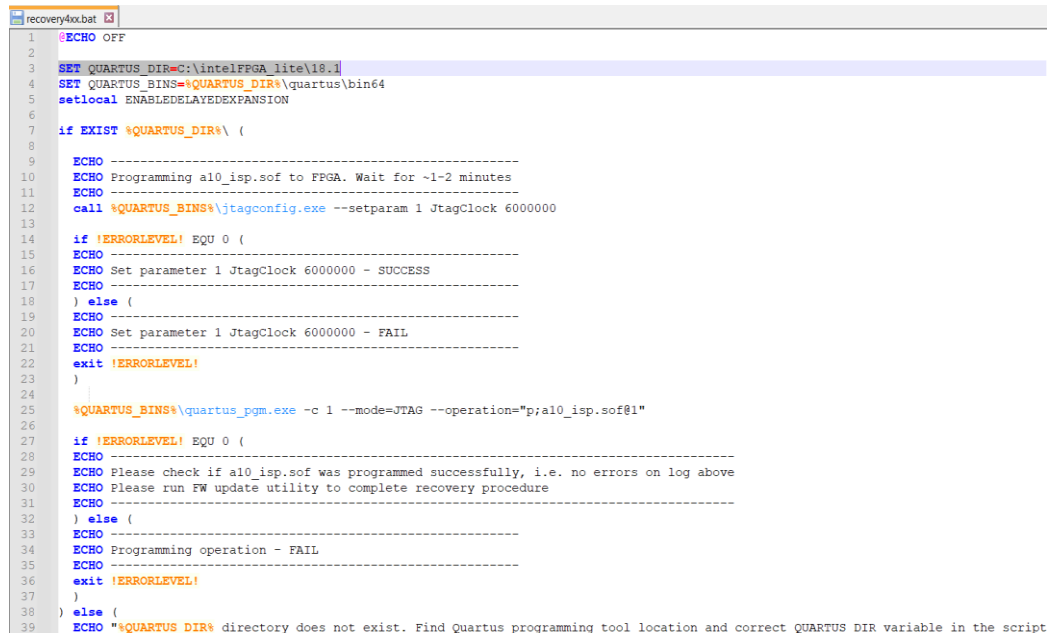

```

1 @ECHO OFF
2
3 SET QUARTUS_DIR=C:\intelFPGA_lite\18.1
4 SET QUARTUS_BINS=%QUARTUS_DIR%\quartus\bin64
5 setlocal ENABLEDELAYEDEXPANSION
6
7 if EXIST %QUARTUS_DIR% (
8
9     ECHO -----
10    ECHO Programming a10_isp.sof to FPGA. Wait for ~1-2 minutes
11    ECHO -----
12    call %QUARTUS_BINS%\jtagconfig.exe --setparam 1 JtagClock 6000000
13
14    if !ERRORLEVEL! EQU 0 (
15        ECHO -----
16        ECHO Set parameter 1 JtagClock 6000000 - SUCCESS
17        ECHO -----
18    ) else (
19        ECHO -----
20        ECHO Set parameter 1 JtagClock 6000000 - FAIL
21        ECHO -----
22        exit !ERRORLEVEL!
23    )
24
25    %QUARTUS_BINS%\quartus_pgm.exe -c 1 --mode=JTAG --operation="p;a10_isp.sof@1"
26
27    if !ERRORLEVEL! EQU 0 (
28        ECHO -----
29        ECHO Please check if a10_isp.sof was programmed successfully, i.e. no errors on log above
30        ECHO Please run FW update utility to complete recovery procedure
31        ECHO -----
32    ) else (
33        ECHO -----
34        ECHO Programming operation - FAIL
35        ECHO -----
36        exit !ERRORLEVEL!
37    )
38 ) else (
39    ECHO "%QUARTUS_DIR%" directory does not exist. Find Quartus programming tool location and correct QUARTUS_DIR variable in the script

```

10. In the **Command Prompt** application make sure that the current directory is still the same (e.g. C:\temp).
11. Launch batch **recovery.bat** by typing "recovery.bat" at the prompt.
12. Please wait until the batch file has been completed (may take up to several minutes).


Step 2

Perform FW update procedure as described in section **Installation > Firmware Update Procedure** earlier in this manual.

After Recovery procedure has completed, you can delete the files (in e.g., C:\Temp).

APPENDIX H: PLAYLISTS AND SCENARIOS

UCD Console's Playback enables you to run scripts called playlists. Use playlists to stream video, audio and metadata. See the Unigraf UCD Console Playback Tutorial at www.unigraf.fi/resource/tutorial-run-edit-and-create-sdr-and-hdr-scenarios-with-unigrabs-playback-tool/

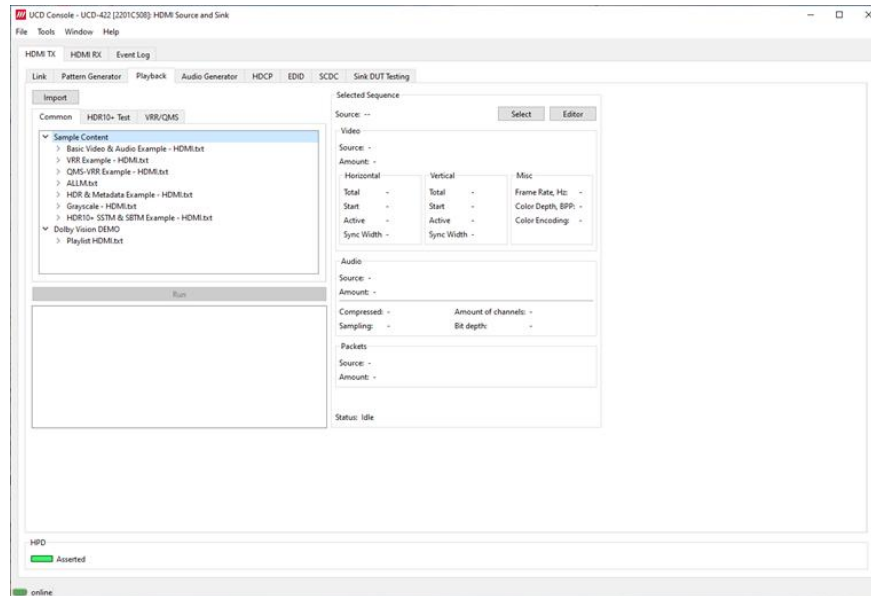

Playlist

A *Playlist* is a text script consisting of a *[Device]* block and *[Scenario]* block(s). A *[Device]* block lists the serial number of the device and *connectortype* (such as a displayport transmitter). *[Scenarios]* blocks have a *caption* (which are used to display sample content), a period (*Scenario* duration in milliseconds) and a relative path to a script text file (ex. Scenario_PSR1_Entry_N.txt). Scenarios are played in sequence.

Scenario

A *scenario* is a script text file to specify a sequence of video frames, metadata packets and audio to be transmitted.

Frame Memory

Before transmission content is loaded to frame memory buffer of the UCD device. Frame buffer memory limits content (number of frames) that can be played. UCD-5XX devices by default feature 16 gigabytes of memory. This enables loading up to 320 4K or 80 8K video frames. Contact Unigraf for information for larger frame buffer sizes.

Sample Content

You can use sample content as a basis for creating custom test sequences: see UCD Console *Playback* tab. Sample content is stored by default (on Windows) at *C:\Program Files\Unigraf\Unigraf UCD Tools\Resources\playback\content*. See [Sample Content in Playback](#) in this Appendix.

Playlists

A *playlist* defines the UCD device to be used and the output destination for transmission. It lists *scenarios* the played (video and audio sequences including metadata) to be transmitted and their duration.

Note: *Playlists* and *Scenarios* are technology dependent. Metadata (or packets) differ for HDMI and DisplayPort.

Device block

Section describes what device and what output connector to use.

Key	Description	Possible values
[Device]	Required. Start of the Device block.	
serialnumber	Required. Specifies serial number of the UCD device. The '*' wildcard can be used if only one UCD source device is connected to the PC.	'*' '1722C333'
connectortype	Required. Specifies output connector type to be used. Playlists shall not contain scenarios for different connector types.	'HDMI Out' 'DisplayPort Out' 'USBC Out'
reset	Only applies to UCD-323.	

Scenario block

Section describes selected scenario and its playback parameters. Playlist runs scenarios in the order they are listed.

Key	Description	Possible values
[Scenario]	Required. Start of a <i>Scenario</i> block. <i>Playlists</i> can have multiple <i>Scenario</i> blocks.	
caption	Optional. Title. Any character string accepted.	'Scenario 1'
path	Required. Specifies relative path to scenario file.	Any valid path
period	Required. Duration of Scenario in msec. The duration is ignored if close-after-upload is set to '1'.	'60000' '5000'
close-after-upload	Optional. When set to '1', command line version of the Playback tool will exit after loading scenario content and starting playback.	'0' or '1' Default '0'
execute-after-upload	Optional. Executes provided command in cmd.exe or bash and waits for its completion. Calculation of 'period' starts after the command is executed.	'script.bat && dir' 'rmdir /home/user/test'
prompt	Optional. Prompt text. Launches a dialog with prompt text and <i>Ok</i> and <i>Abort</i> buttons:	'Record video with camera and click <i>OK</i> or <i>Abort</i> '

Scenarios

A Scenario is text file for specifying a specific sequence of video frames, events (packets) and audio to be played in order. *Scenarios* also set up the device state for transmission.

Parameters

Scenario parameters are defined below. items.

Scenario item	Description
<i>video</i>	Path and file name format of video frame files
<i>audio</i>	Path and file name of the audio file
<i>packets</i>	Path and file name format of metadata packet files
<i>porder</i>	Content Playing Order. Please see <i>Content Playing Order</i> below.
<i>mappin</i>	
<i>align1</i>	Alignment of 12-bit binary pixel data. '1' aligned to LSB; '0' aligned to MSB.
<i>audioswap</i>	'1' for Little Endian audio samples
<i>audiocompressed</i>	'1' compressed audio; '0' uncompressed audio
<i>audiosampling</i>	Audio sampling rate. E.g., 44100
<i>audiochannels</i>	Nr. of audio channels
<i>audiobits</i>	Audio bits per sample (usually 16 or 24)
<i>scrambler</i>	'1' scrambling enabled; '0' scrambling disabled
<i>audiosync</i>	Audio sync
<i>colorspace</i>	Video color space: RGB; YUV444; YUV422; YUV420
<i>bitspercolor</i>	Video color depth (bits per color)
<i>timing.hactive</i>	Timing: Horizontal active
<i>timing.vactive</i>	Timing: Vertical active
<i>timing.htotal</i>	Timing: Horizontal total
<i>timing.vtotal</i>	Timing: Vertical total
<i>timing.hstart</i>	Timing: Horizontal start
<i>timing.vstart</i>	Timing: Vertical start
<i>timing.hsync</i>	Timing: Horizontal sync width
<i>timing.vsync</i>	Timing: Vertical sync width
<i>timing.frate</i>	Timing: frame rate
<i>hdcp</i>	HDCP version used (can be 1.4 2.3 or 'none')
<i>loadingRGB</i>	The R, G and B color components of solid color pattern shown when content is being uploaded to the device before playback (e.g., 0,0,0)
<i>linkRate</i>	Default link rate. HDMI: 0 = TMDS; 1 – 5 = FRL with 3, 6, 8, 10 and 12 Gbps link rate. DP: Link rate = Value × 0.27 Gbps. (E.g., 20 = 5.4 Gbps/lane (HBR2)).
<i>linkRateMin</i>	Minimum link rate desired. <i>Scenario</i> will fail if not achieved
<i>DSC timing parameters</i>	Parameters are different for DP and HDMI. See below.

DSC Timing parameters for HDMI

dscFrameRate	DSC Timing: Frame rate [fps] × 1000
dscHcactive	DSC Timing: Horizontal active
dscHcblank	DSC Timing: Horizontal blank
dscVtotal	DSC Timing: Vertical total
dscVsync	DSC Timing: Vertical sync
dscVstart	DSC Timing: Vertical start
dscVactive	DSC Timing: Vertical active

DSC Timing parameters for DP

dscFrameRate	DSC Timing: Frame rate [fps] × 1000
dscVtotal	DSC Timing: Vertical total
dscVsync	DSC Timing: Vertical sync
dscVstart	DSC Timing: Vertical start
dscVactive	DSC Timing: Vertical active
dscHtotal	DSC Timing: Horizontal total
dscHsync	DSC Timing: Horizontal sync
dscHstart	DSC Timing: Horizontal start
dscHactive	DSC Timing: Horizontal active

Content Playing Order

Play order is a sequence of steps. Steps are delimited with semicolons (;).

Each step has:

- Range (possibly numbered e.g. allm_000.jpg, allm_001.jpg, ...) of video frame(s)
- How many times the frame(s) are played
- Packet(s) (possibly numbered e.g. allm_0.bin, allm_1.bin, ...) indices to be sent during the video frame(s) transmission
- Color format
- Optional frame rate when VRR/Adaptive-Sync is enabled

Format

Each scenario step is of the form :

pV:R:E:FvXX;

Parameters

Please see table below for description of used parameters.

Char	Description	Possible values	Examples
:	Separator between step parameters.	','	See below
;	Step delimiter.	','	See below
p	Optional. Indicates assertion of a HPD pulse on HDMI RX connector of UCD device during current step. Preceding video frame index. Only for HDMI playback.	'p'	'p1:60:1:256;' 'p0-59:60:1:256;'
V	Required. Video frame indices (zero based). Parameters are applied to all frames in the step. Images (possibly numbered) are loaded from the <i>video</i> file path.	'1' '1,2,5' '0-59'	'1:60:16:256;' '1,2,5:60:16:256;' '0-59:60:16:256;'
R	Required. Repetitions of current step. For example, '1' with 60 FPS frame rate means that current step will be played only for 1/60 of a second.	'30' '1'	'1:30:16:256;' '1:1:16:256;'
E	Optional. Metadata packet indices (zero based): A single packet or a comma separated list of packets. The index may be of the form 3I15 (lower case 'l'). At which vertical line do we want to put our packet in. 3I15 means insert packet 3 at line 15. Packets are loaded from the <i>packets</i> path.	'0' '4,1,29' none 3I15	'1:30:0:256;' '1:30:4,1,29:256;' '1:30::256;' 0:10000:3I15:256;
F	Required. Color format and color depth. See Color Format below.	'256' '513'	'1:30:0:256;' '1:30:0:513;'
vXX	Optional. Control of frame rate when VRR/Adaptive-Sync is enabled. To enable VRR/Adaptive-Sync, the corresponding HDMI VSIF event must be included. The parameter is in the form 'vXX', where 'XX' is the frame rate.	'v60' 'v30'	'1:30:0:256v60;' '1:30:0:256v30;'

Color Format

Color format is a two-byte value presented in decimal. The lower byte provides an index to used color space and the higher byte an index to the color depth. Please find the indexes in the table below.

Index	Color Depth (bits/color)	Color Space
0	6	RGB
1	8	YCbCr 4:4:4
2	10	YCbCr 4:2:2
3	12	YCbCr 4:2:0
4	16	–

The parameter value is encoded as follows:

$[\text{Color Depth}] \times 256 + [\text{Color Space}]$,

where $[\text{Color Depth}]$ and $[\text{Color Space}]$ are indexes obtained from the table above.


For example, parameter for YCbCr 4:4:4, 10 bits is $(2 \times 256 + 1) = 513$.

Pre-calculated values for available color formats are shown below:

	6 BPC	8 BPC	10 BPC	12 BPC	16 BPC
RGB	0	256	512	768	1024
YCbCr 4:4:4	N/A	257	513	769	1025
YCbCr 4:2:2	N/A	258	514	770	1026
YCbCr 4:2:0	N/A	259	515	771	1027

Example

Please find below description of Playlist SDR-HDR-HLG – HDMI.

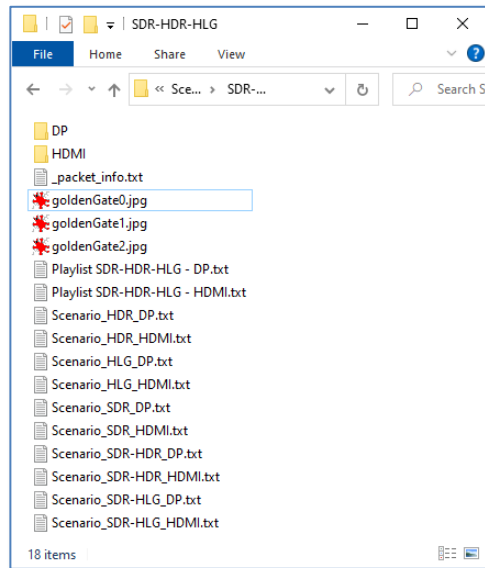

Playlist file (Playlist SDR-HDR-HLG - HDMI.txt)

Playlist item and example content	Description
[Device]	Start of device section
serialnumber=*	Only one UCD device present.
connectortype=HDMI Out	HDMI output
[Scenario]	Start of Scenario 1
caption = SDR	Scenario title "SDR"
period = 10000	Duration 10 sec
path = Scenario_SDR_HDMI.txt	Scenario file: Scenario_SDR_HDMI.txt in current folder
[Scenario]	Start of Scenario 2
caption = HDR	Scenario title "HDR"
period = 10000	Duration 10 sec
path = Scenario_HDR_HDMI.txt	Scenario file: Scenario_HDR_HDMI.txt in current folder
[Scenario]	Start of Scenario 3
caption = HLG	Scenario title "HLG"
period = 10000	Duration 10 sec
path = Scenario_HLG_HDMI.txt	Scenario file: Scenario_HLG_HDMI.txt in current folder
[Scenario]	Start of Scenario 4
caption = SDR – HDR	Scenario title "SDR – HDR"
period = 10000	Duration 10 sec
path = Scenario_SDR-HDR_HDMI.txt	Scenario file: Scenario_SDR-HDR_HDMI.txt in current folder
[Scenario]	Start of Scenario 5
caption = SDR – HLG	Scenario title "SDR – HLG"
period = 10000	Duration 10 sec
path = Scenario_HDR_HDMI.txt	Scenario file: Scenario_SDR-HLG_HDMI.txt in current folder

Scenario File (Scenario_SDR-HDR-HDMI.txt)

Scenario item and example content	Description
video=goldenGate0.jpg	Video files in current folder, file name format goldenGate0.jpg (0...)
audio=<Audio not selected>	Audio not selected
packets=HDMI\Infoframes_0000.bin	Packet files in folder HDMI\, file name format Infoframes_0000.bin (0...)
porder=0:180:2:256;1:180:2,0:256;	180 frames of image index 0, Packet index 2, RGB 8 bpc 180 frames of image index 1, Packets index 2 and 0, RGB 8 bpc
align12=1	Pixel data is aligned to LSB
audioswap=0	-
audiocompressed=0	-
audiosampling=0	-
audiochannels=0	-
audiobits=0	-
scrambler=0	scrambling disabled
colorspace=RGB444	Video color space: RGB 4:4:4
bitspercolor=8	Video color depth: 8 (bpc)
timing.hactive=1920	Timing: Horizontal active
timing.vactive=1080	Timing: Vertical active
timing.htotal=2200	Timing: Horizontal total
timing.vtotal=1125	Timing: Vertical total
timing.hstart=192	Timing: Horizontal start
timing.vstart=41	Timing: Vertical start
timing.hsync=44	Timing: Horizontal sync width
timing.vsync=5	Timing: Vertical sync width
timing.frate=60000	Timing: Frame rate 60 fps
hdcpc=none	HDCP not enabled
loadingRGB=52,127,150	Solid color pattern shown when content is being uploaded to the device before playback is R=52, G=127, B=150.

Sample Content in Playback Tab

UCD Console's Playback tab features a set of examples for the user to create custom test content. This content is stored by default in *C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content*. It is advisable to create copy of the installed files and edit the copies.

Note: Playlists and Scenarios are interface technology dependent. The provided examples are different for HDMI and DisplayPort.

Provided examples for each interface are shown below:

HDMI

The following playlists are available for HDMI interface.

Playlist Name	Description	Location
Basic Video & Audio Example	Example playlist for demonstrating the use of video and audio files.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Basic</i>
VRR Example	Playlist for demonstrating Variable Refresh Rate (VRR) capability of a DUT monitor. Utilizes extensively frame sequencing capability in scenario, and the use of metadata packets.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\VRR</i>
QMS-VRR Example	Playlist for demonstrating Quick Media Switching - Variable Refresh Rate (QMS-VRR) capability of a DUT monitor. Utilizes extensively frame sequencing capability in scenario, and the use of metadata packets.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\VRR</i>
ALLM	Playlist for demonstrating Auto Low-latency Mode (ALLM) capability of a DUT monitor.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\ALLM</i>
Audio-Video Latency	These scenarios can be used to estimate audio-video synchronization using external tools like Sync-One2 or similar.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\AV Latency</i>
HDR & Metadata Example	Example playlist that demonstrates the use of video files and metadata packets in testing a DUT monitor	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\HDR GoldenGate</i>
Grayscale	The scenarios show smooth transition though shades of gray from black to white.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Grayscale</i>
HDR10+ SSTM & SBTM Example	Playlist demonstrates using HDR10+ SSTM VSIF for Source-Side Tone Mapping, and HDMI Forum SBTM VSIF for Source-Based Tone Mapping.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\SBTM-SSTM</i>
Dolby Vision DEMO – Playlist	A set of static images transmitted with matching Dolby Vision metadata.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Dolby Vision</i>

DP

The following playlists are available for DisplayPort interface.

Playlist Name	Description	Location
Basic Video & Audio Example	Example playlist for demonstrating the use of video and audio files.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Basic</i>
Frame Rate Example	Playlist for demonstrating use of multiple frame rates with FHD and UHD resolution.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\VRR</i>
Audio-Video Latency	These scenarios can be used to estimate audio-video synchronization using external tools like Sync-One2 or similar.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\AV Latency</i>
HDR & Metadata Example	Example playlist that demonstrates the use of video files and metadata packets in testing a DUT monitor	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\HDR Golden Gate</i>
Grayscale	The scenarios show smooth transition through shades of gray from black to white.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Grayscale</i>
HDR10+ SSTM Example	Playlist demonstrates using HDR10+ SSTM VSIF for Source-Side Tone Mapping.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\SBTM-SSTM</i>
PSR1	A set of static images transmitted with matching Dolby Vision metadata.	<i>C:\Program Files\Unigraf\Unigraf UCD Tools\data\playback\content\Panel Replay</i>

Playlist: Basic Video & Audio Example

The playlist sequences video files and audio according to the description below.

Video

Frames used for Scenario 1 and Scenario 2 (Image1.jpg, Image 2.jpg)



Frame used for Scenario 3 and Scenario 4 (Philips.svg)



Description of Scenarios

	Name	Duration	Repeated sequence
1	Flip-flop with LPCM Audio	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, 60 frames Image1.jpg, 60 frames Image2.jpg, Audio: Rhythm.wav
2	Flip-flop with AC3 Audio	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, 60 frames Image1.jpg, 60 frames Image2.jpg, Audio: 44100Hz_16bit_AC3_2channels_60sec_sine.iec61937.bin
3	Flip-flop Silent	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, 60 frames Image1.jpg, 60 frames Image2.jpg, No Audio.
4	Philips 1920x1080p + 1kHz	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, 60 Frames Philips.svg, Audio: 1 kHz sine wave (1kHz.wav)
5	Philips 3840x2160p + 1kHz	60 s	CTA 3840 x 2160 @ 60Hz (VIC 97), RGB 8 BPC 60 Frames Philips.svg, Audio: 1 kHz sine wave (1kHz.wav)

Playlist: Audio-Video Latency

Note: To measure video latency, ULT-01 test tool is needed.

Description of Scenarios


These scenarios can be used to estimate audio-video synchronization using external tools like Sync-One2 or similar. Video latency measuring requires the Unigraf ULT-01 tool.

The pattern with a white patch is shown for 15 frames, and then the black screen is shown for 45 frames. The audio beep is transmitted during the first frame of a white patch pattern.

Video

	Name	Duration	Repeated sequence
1	vic16	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, 15 frames frame1.vpattern, 45 frame0.vpattern, Audio: beep.wav
2	vic97	60 s	CTA 3840×2160 60 Hz (VIC 97), RGB 8 BPC, 45 frames frame1.vpattern, 15 frame0.vpattern, Audio: beep.wav

Frames used for the scenario (frame1.vpattern frame0.vpattern)



Playlist: HDR & Metadata Example

Example demonstrates the use of metadata packets.

Video:

The Scenarios use four versions of the same image: GoldenGate0.jpg, GoldenGate1.jpg, GoldenGate2.jpg and GoldenGate3.jpg.

All four images use the same dynamic range in pixel data but contain a text label indicating pixel dynamic range applied in the metadata. If DUT behaves correctly, applying different metadata changes the appearance of the image on DUT screen.



Scenarios for HDMI Output

Video mode in all steps: CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, No audio.

Name	Duration	Repeated sequence
SDR	10 sec	180 frames GoldenGate0.jpg, Packet: Infoframes_0002;
HDR	10 sec	180 frames GoldenGate1.jpg, Packets: Infoframes_0002, Infoframes_0000
HLG	10 sec	180 frames GoldenGate2.jpg, Packets: Infoframes_0001, Infoframes_0002
HDR10+	10 sec	180 frames GoldenGate3.jpg, Packets: Infoframes_0002, Infoframes_0003, Infoframes_0000
SDR – HDR	10 sec	180 frames GoldenGate0.jpg, Packets: Infoframes_0002; 180 frames GoldenGate1.jpg, Packets: Infoframes_0002, Infoframes_0000
SDR – HLG	10 sec	180 frames GoldenGate0.jpg, Packet: – ; 180 frames GoldenGate2.jpg, Packets: Packets: Infoframes_0001, Infoframes_0002
SDR – HDR10+	10 sec	180 frames GoldenGate0.jpg, Packet: Infoframes_0002; 180 frames GoldenGate3.jpg, Packets: Infoframes_0002, Infoframes_0003, Infoframes_0000

Playlist: Grayscale

Description of Scenarios


The scenarios show smooth transition though shades of gray from black to white.

	Name	Duration	Repeated sequence
1	GrayFHD_60	60 s	CTA 1920×1080 60 Hz (VIC 16), RGB 12 BPC, 120 frames: gray0.vpattern - gray119.vpattern, Audio: No audio
2	GrayUHD_119	60 s	CTA 3840×2160 119,88 Hz, RGB 12 BPC, 120 frames: gray0.vpattern - gray119.vpattern, Audio: No audio

Video

Below you can see three example frames from the video.


Gray0.vpattern



Gray60.vpattern



Gray119.vpattern



Playlist: Dolby Vision DEMO (HDMI)

Description of Scenarios

A set of static images transmitted with matching Dolby Vision metadata.

	Name	Duration	Repeated sequence
1	playFiles_scenario	30 s	1920×1080 60Hz, RGB 8 BPC, 4 frames: Video_0000.bin – Video_0003.bin, Infoframes: Infoframe0000.bin – InfoFrame0033.bin Audio: No audio

Playlist: VRR Example (HDMI)

Playlist demonstrates controlling VRR (Variable Refresh Rate) in Scenarios when using HDMI output.

Video

The image used for the test contains a combination of color bars, gray scales, and rotating items. The test uses a sequence of images creating a full rotation in 60 frames.



Scenario with Video Mode 1920.1080 60 Hz

The scenario uses 1920×1080 59.94/60 Hz video timing (VIC 16). No audio.

	Name	Duration	Repeated sequence
1	FHD VRR 48..59 switch	60 s	VRR enabled. RGB 8 BPC. Packets: infoframe_00, infoframe_01 300 frames with 48 Hz frame rate, 300 frames with 59 Hz frame rate.

Scenario with Video Mode 3840.2160 60 Hz

The scenario uses 3840×2160 59.94/60 video timing (VIC 97). No audio.

	Name	Duration	Repeated sequence
1	UHD VRR48..59 switch	60 s	VRR enabled. RGB 8 BPC. Packets: infoframe_00, infoframe_02 300 frames with 48 Hz frame rate, 300 frames with 59 Hz frame rate.

Scenario with Video Mode 3840.2160 60 Hz

The scenario uses 3840×2160 59.94/60 video timing (VIC 97). No audio.

	Name	Duration	Repeated sequence
1	UHD VRR48..59 switch	60 s	VRR enabled. RGB 8 BPC. Packets: infoframe_00, infoframe_02 300 frames with 48 Hz frame rate, 300 frames with 59 Hz frame rate.

Playlist: QMS-VRR Example (HDMI)

Playlist demonstrates Quick Media Switching QMS by sending Video Timing Extended Metadata (VTEM) with TFR changing between 48/1.001 and 60.

Video

The same as in VRR Example above.

Playlist: ALLM (HDMI)

Playlist for demonstrating Auto Low-latency Mode (ALLM) capability of a DUT monitor.

Video:

The Scenarios use a series of images: allm_on_off_000.jpg to allm_on_off_0011.jpg. Text panel on the images indicate if ALLM is enabled or not. The first scenario is presented with ALLM enabled and the second by switching ALLM on and off sequentially.



Scenarios for HDMI Output

Video mode in all steps: CTA 1920×1080 60 Hz (VIC 16), RGB 8 BPC, No audio.

Name	Duration	Repeated sequence
ALLM Static	60 sec	10 frames allm_on_off_000.jpg, Packet: allm_0.bin; 10 frames allm_on_off_001.jpg, Packet: allm_0.bin; 10 frames allm_on_off_002.jpg, Packet: allm_0.bin; 10 frames allm_on_off_003.jpg, Packet: allm_0.bin; 10 frames allm_on_off_004.jpg, Packet: allm_0.bin; 10 frames allm_on_off_005.jpg, Packet: allm_0.bin
ALLM Toggle	60 sec	10 frames allm_on_off_000.jpg, Packet: allm_0.bin; 10 frames allm_on_off_001.jpg, Packet: allm_0.bin; 10 frames allm_on_off_002.jpg, Packet: allm_0.bin; 10 frames allm_on_off_003.jpg, Packet: allm_0.bin; 10 frames allm_on_off_004.jpg, Packet: allm_0.bin; 10 frames allm_on_off_005.jpg, Packet: allm_0.bin; 10 frames allm_on_off_006.jpg, Packet: allm_1.bin; 10 frames allm_on_off_007.jpg, Packet: allm_1.bin; 10 frames allm_on_off_008.jpg, Packet: allm_1.bin; 10 frames allm_on_off_009.jpg, Packet: allm_1.bin; 10 frames allm_on_off_0010.jpg, Packet: allm_1.bin; 10 frames allm_on_off_0011.jpg, Packet: allm_1.bin

Playlist: HDR10+ SSTM & SBTM Example (HDMI)

Description of Scenarios

Playlist demonstrates using HDR10+ SSTM VSIF for Source-Side Tone Mapping, and HDMI Forum SBTM VSIF for Source-Based Tone Mapping.


	Name	Duration	Repeated sequence
1	SDR	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Channel1.jpg, repeated 180 times Packets: Infoframes_0005.bin, Audio: No audio
2	HDR10+ SSTM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Channel0.jpg, repeated 180 times Packets: Infoframes_0000.bin, _0005.bin, _0006.bin Audio: No audio
3	SBTM G-RDM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Channel0.jpg, repeated 180 times, Packets: Infoframes_0000.bin, _0005.bin, _0007.bin Audio: No audio
4	SDR – SBTM G-RDM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Step1: Channel1.jpg, repeated 150 times, Packets: Infoframes_0005.bin Step2: Channel0.jpg, repeated 180 times, Packets: 0000.bin, _0005.bin, _0007.bin Audio: No audio
5	SBTM D-RDM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Channel0.jpg, repeated 180 times Packets: Infoframes_0000.bin, _0005.bin, _0008.bin Audio: No audio
6	SDR – SBTM D-RDM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Step1: Channel1.jpg, repeated 150 times, Packets: Infoframes_0005.bin Step2: Channel0.jpg, repeated 150 times, Packets: 0000.bin, _0005.bin, _0008.bin Audio: No audio

Video

Channel0.jpg



Channel1.jpg

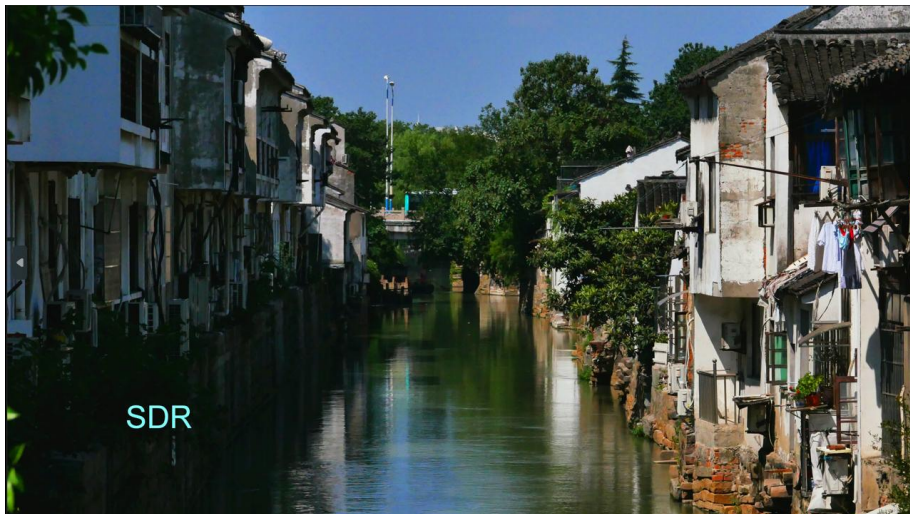

Playlist: HDR10+ SSTM Example (DP)

Playlist demonstrates using HDR10+ SSTM VSIF for Source-Side Tone Mapping.

	Name	Duration	Repeated sequence
1	HDR10+ SSTM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Channel0.jpg, repeated 180 times Packets: Infoframes_0000.bin, _0003.bin Audio: No audio
2	SDR – HDR10+ SSTM	10 s	3840×2160 30 Hz, RGB 10 BPC, Video: Step1: Channel0.jpg, repeated 150 times Packets: Infoframes_0000.bin, _0003.bin Step2: Channel1.jpg, repeated 150 times Packets: None Audio: No audio

Video

Channel0.jpg



Channel1.jpg



Playlist: Frame Rate Example (DP)

Playlist for demonstrating use of multiple frame rates with FHD and UHD resolution when using DisplayPort output.

Video

The image used for the test contains a combination of color bars, gray scales, and rotating items. The test uses a sequence of images creating a full rotation in 60 frames



Executed Scenarios

The test is using four scenarios (RGB 8 BPC, No audio)


	Name	Duration	Repeated sequence
1	Spinners FHD 59fps	60 s	1920×1080 59.94/60 Hz video timing (VIC 16), 60 frames 'colorBarsSpinning-X.svg' X= 0 to 59
2	Spinners FHD 119fps	60 s	1920×1080 119.88/120 Hz video timing (VIC 63), 60 frames 'colorBarsSpinning-X.svg' X= 0 to 59
3	Spinners UHD 59fps	60 s	3840×2160 59.94/60 Hz video timing (VIC 97) 60 frames 'colorBarsSpinning-X.svg' X= 0 to 59
4	Spinners UHD 119fps	60 s	3840×2160 119.88/120 Hz Hz video timing (VIC 120) 60 frames 'colorBarsSpinning-X.svg' X= 0 to 59

Playlist: PSR1 (DP)

Playlist for demonstrating Panel Replay functionality.

Video:

The Scenarios use color_bars_0.jpg image.

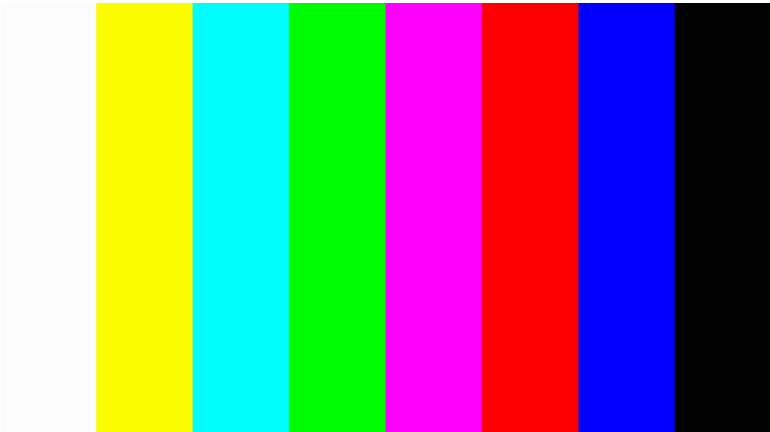

Scenarios

Video mode in all steps: CTA 1920×1080 60 Hz (VIC 16), RGB 8 bpc, No audio.

Name	Duration	Repeated sequence
PSR1 Entry N	10 sec	color_bars_0.jpg.jpg, Packets: DP/vscpacket_0000.bin on line 0; color_bars_0.jpg.jpg, Packets: DP/vscpacket_0001.bin on line 1; color_bars_0.jpg.jpg, Packets: DP/vscpacket_0003.bin on line 15;
PSR1 Entry N p 1	10 sec	color_bars_0.jpg.jpg, Packets: DP/vscpacket_0000.bin
PSR1 Abort N p 1	10 sec	color_bars_0.jpg.jpg, Packets: DP/vscpacket_0000.bin
PSR1 Abort N p 2	10 sec	color_bars_0.jpg.jpg, Packets: DP/vscpacket_0000.bin